



FEL-PRO INSTALLATION TIPS

IMPORTANT!

-PLEASE READ-

This new seal is a reverse lip type seal. It must be installed properly to seal effectively.

The seal is marked "THIS SIDE OUT" (small print) on the rubber dust lip. When properly installed, the rubber faced side with the dust lip will face the outside or air side of the engine and the teflon or "threaded" side of the seal will face the oil side of the engine.



FEL-PRO INSTALLATION TIPS

IMPORTANT!

-PLEASE READ-

This new seal is a reverse lip type seal. It must be installed properly to seal effectively.

The seal is marked "THIS SIDE OUT" (small print) on the rubber dust lip. When properly installed, the rubber faced side with the dust lip will face the outside or air side of the engine and the teflon or "threaded" side of the seal will face the oil side of the engine.



FEL-PRO INSTALLATION TIPS

IMPORTANT!

-PLEASE READ-

This new seal is a reverse lip type seal. It must be installed properly to seal effectively.

The seal is marked "THIS SIDE OUT" (small print) on the rubber dust lip. When properly installed, the rubber faced side with the dust lip will face the outside or air side of the engine and the teflon or "threaded" side of the seal will face the oil side of the engine.



FEL-PRO INSTALLATION TIPS

IMPORTANT!

-PLEASE READ-

This new seal is a reverse lip type seal. It must be installed properly to seal effectively.

The seal is marked "THIS SIDE OUT" (small print) on the rubber dust lip. When properly installed, the rubber faced side with the dust lip will face the outside or air side of the engine and the teflon or "threaded" side of the seal will face the oil side of the engine.