

VALVE COVER GASKET

"Install this gasket with the flat side (the side adjacent to the retention tabs) towards the rocker cover groove and the rounded bead side of the gasket towards the cylinder head surface."

© 2007 Federal-Mogul Corporation Form No. I-2093 (Rev. 05/11)

Printed in U.S.A.



VALVE COVER GASKET

"Install this gasket with the flat side (the side adjacent to the retention tabs) towards the rocker cover groove and the rounded bead side of the gasket towards the cylinder head surface."

© 2007 Federal-Mogul Corporation Form No. I-2093 (Rev. 05/11) Printed in U.S.A.

FEL-PRO INSTALLATION TIPS

VALVE COVER GASKET

"Install this gasket with the flat side (the side adjacent to the retention tabs) towards the rocker cover groove and the rounded bead side of the gasket towards the cylinder head surface."

© 2007 Federal-Mogul Corporation Form No. I-2093 (Rev. 05/11) Printed in U.S.A.



VALVE COVER GASKET

"Install this gasket with the flat side (the side adjacent to the retention tabs) towards the rocker cover groove and the rounded bead side of the gasket towards the cylinder head surface."

© 2007 Federal-Mogul Corporation Form No. I-2093 (Rev. 05/11) Printed in U.S.A.



VALVE COVER GASKET

"Install this gasket with the flat side (the side adjacent to the retention tabs) towards the rocker cover groove and the rounded bead side of the gasket towards the cylinder head surface."

© 2007 Federal-Mogul Corporation Form No. I-2093 (Rev. 05/11) Printed in U.S.A.



VALVE COVER GASKET

"Install this gasket with the flat side (the side adjacent to the retention tabs) towards the rocker cover groove and the rounded bead side of the gasket towards the cylinder head surface."

© 2007 Federal-Mogul Corporation Form No. I-2093 (Rev. 05/11) Printed in U.S.A.



VALVE COVER GASKET

"Install this gasket with the flat side (the side adjacent to the retention tabs) towards the rocker cover groove and the rounded bead side of the gasket towards the cylinder head surface."



VALVE COVER GASKET

"Install this gasket with the flat side (the side adjacent to the retention tabs) towards the rocker cover groove and the rounded bead side of the gasket towards the cylinder head surface."



VALVE COVER GASKET

"Install this gasket with the flat side (the side adjacent to the retention tabs) towards the rocker cover groove and the rounded bead side of the gasket towards the cylinder head surface."