


INSTALLATION TIPS


OIL COOLER GASKET

NOTE:

GASKET MUST BE INSTALLED WITH THE SEALING BEADS CENTERED BETWEEN THE TWO OPENINGS.

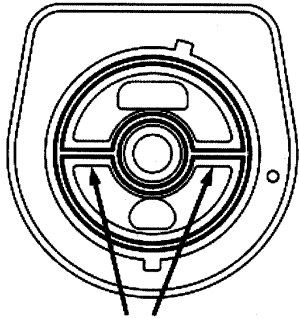

Correct Installation

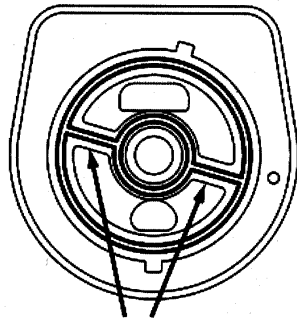

Incorrect Installation

© 2006 Federal-Mogul Corporation
Form No. I-2130 (01/15)


Printed in U.S.A.

INSTALLATION TIPS


OIL COOLER GASKET

NOTE:

GASKET MUST BE INSTALLED WITH THE SEALING BEADS CENTERED BETWEEN THE TWO OPENINGS.

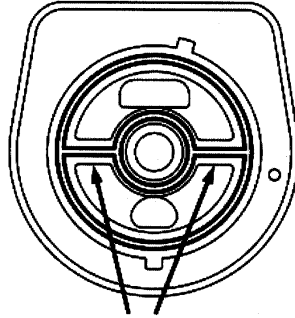

Correct Installation

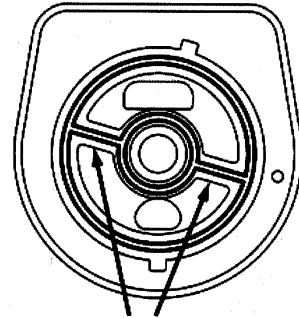

Incorrect Installation

© 2006 Federal-Mogul Corporation
Form No. I-2130 (01/15)


Printed in U.S.A.

INSTALLATION TIPS


OIL COOLER GASKET

NOTE:

GASKET MUST BE INSTALLED WITH THE SEALING BEADS CENTERED BETWEEN THE TWO OPENINGS.

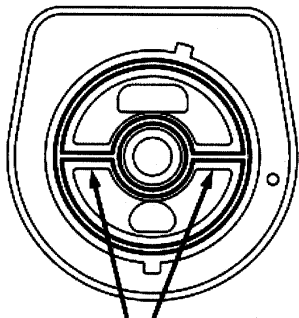

Correct Installation

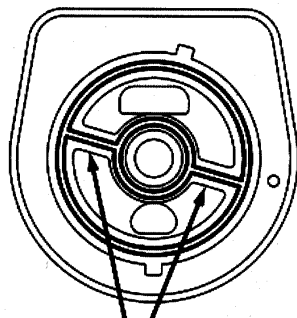

Incorrect Installation

© 2006 Federal-Mogul Corporation
Form No. I-2130 (01/15)


Printed in U.S.A.

INSTALLATION TIPS


OIL COOLER GASKET

NOTE:

GASKET MUST BE INSTALLED WITH THE SEALING BEADS CENTERED BETWEEN THE TWO OPENINGS.

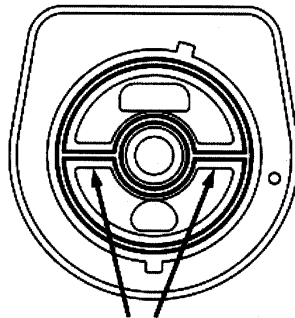

Correct Installation

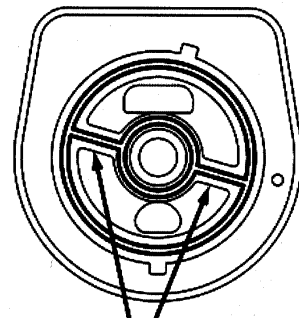

Incorrect Installation

© 2006 Federal-Mogul Corporation
Form No. I-2130 (01/15)

Printed in U.S.A.