

 


FEL-PRO INSTALLATION TIPS

CAM BORE PLUG

The cam shaft boring hole, located at the back of the cylinder head and cover, is sealed with a rubber cam bore plug (circular packing).

CLEAN MATING SURFACES of all foreign materials. You may use a degreaser

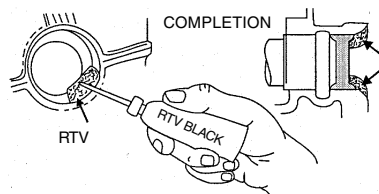

INSTALL CAM BORE PLUG. Now apply a continuous bead of silicone sealer around the outer edge or the plug.

© 2000 Fel-Pro Incorporated
Form No. I-791 (Rev. 1/93)

Printed in U.S.A.

 


FEL-PRO INSTALLATION TIPS

CAM BORE PLUG

The cam shaft boring hole, located at the back of the cylinder head and cover, is sealed with a rubber cam bore plug (circular packing).

CLEAN MATING SURFACES of all foreign materials. You may use a degreaser

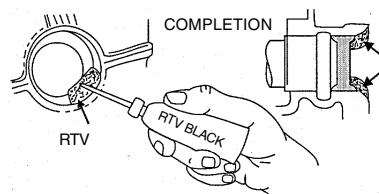

INSTALL CAM BORE PLUG. Now apply a continuous bead of silicone sealer around the outer edge or the plug.

© 2000 Fel-Pro Incorporated
Form No. I-791 (Rev. 1/93)

Printed in U.S.A.

 


FEL-PRO INSTALLATION TIPS

CAM BORE PLUG

The cam shaft boring hole, located at the back of the cylinder head and cover, is sealed with a rubber cam bore plug (circular packing).

CLEAN MATING SURFACES of all foreign materials. You may use a degreaser

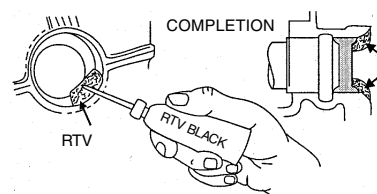

INSTALL CAM BORE PLUG. Now apply a continuous bead of silicone sealer around the outer edge or the plug.

© 2000 Fel-Pro Incorporated
Form No. I-791 (Rev. 1/93)

Printed in U.S.A.

 


FEL-PRO INSTALLATION TIPS

CAM BORE PLUG

The cam shaft boring hole, located at the back of the cylinder head and cover, is sealed with a rubber cam bore plug (circular packing).

CLEAN MATING SURFACES of all foreign materials. You may use a degreaser

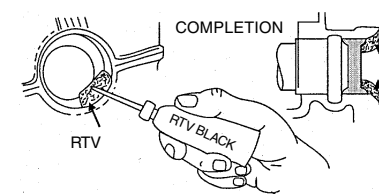

INSTALL CAM BORE PLUG. Now apply a continuous bead of silicone sealer around the outer edge or the plug.

© 2000 Fel-Pro Incorporated
Form No. I-791 (Rev. 1/93)

Printed in U.S.A.

 


FEL-PRO INSTALLATION TIPS

CAM BORE PLUG

The cam shaft boring hole, located at the back of the cylinder head and cover, is sealed with a rubber cam bore plug (circular packing).

CLEAN MATING SURFACES of all foreign materials. You may use a degreaser

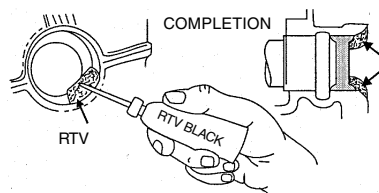

INSTALL CAM BORE PLUG. Now apply a continuous bead of silicone sealer around the outer edge or the plug.

© 2000 Fel-Pro Incorporated
Form No. I-791 (Rev. 1/93)

Printed in U.S.A.

 


FEL-PRO INSTALLATION TIPS

CAM BORE PLUG

The cam shaft boring hole, located at the back of the cylinder head and cover, is sealed with a rubber cam bore plug (circular packing).

CLEAN MATING SURFACES of all foreign materials. You may use a degreaser

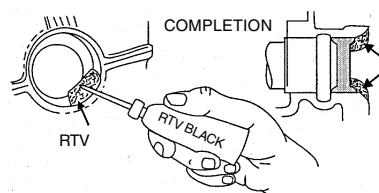

INSTALL CAM BORE PLUG. Now apply a continuous bead of silicone sealer around the outer edge or the plug.

© 2000 Fel-Pro Incorporated
Form No. I-791 (Rev. 1/93)

Printed in U.S.A.

 


FEL-PRO INSTALLATION TIPS

CAM BORE PLUG

The cam shaft boring hole, located at the back of the cylinder head and cover, is sealed with a rubber cam bore plug (circular packing).

CLEAN MATING SURFACES of all foreign materials. You may use a degreaser

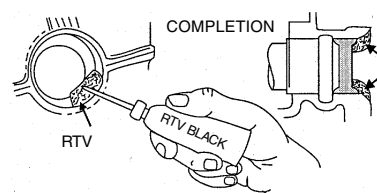

INSTALL CAM BORE PLUG. Now apply a continuous bead of silicone sealer around the outer edge or the plug.

© 2000 Fel-Pro Incorporated
Form No. I-791 (Rev. 1/93)

Printed in U.S.A.

 


FEL-PRO INSTALLATION TIPS

CAM BORE PLUG

The cam shaft boring hole, located at the back of the cylinder head and cover, is sealed with a rubber cam bore plug (circular packing).

CLEAN MATING SURFACES of all foreign materials. You may use a degreaser

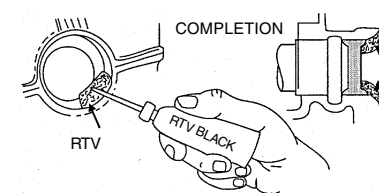

INSTALL CAM BORE PLUG. Now apply a continuous bead of silicone sealer around the outer edge or the plug.

© 2000 Fel-Pro Incorporated
Form No. I-791 (Rev. 1/93)

Printed in U.S.A.