

GENERAL INSTRUCTIONS

CLEAN MATING SURFACES. Use a degreaser.

CLEAN THREADS of all bolts/studs; for nuts/threads holes use a bottoming tap.

BOLT PREPARATION: Those **entering** coolant passages require a pliable non-hardening sealer on threads and underside of bolt heads. Those **not entering** coolant passages require oil on threads and underside of bolt heads. **Exhaust Assembly:** Apply a high temperature anti-seize lubricant to threadings.

CHECK CASTINGS for flatness. Straighten, resurface or replace if needed. **CYLINDER HEAD AND BLOCK:** Refer to OEM manual to determine flatness tolerances and resurfacing limitations.

FINAL ASSEMBLY: Torque all fasteners to OEM specifications unless noted. CYLINDER HEAD torquing is critical; we recommend that you confirm with OEM.

HEAD GASKET

Follow any directional markings shown on gasket(s). If no markings exist, install gasket(s) **Fiber Faced Gasket(s)**. Install dry. **Metal Faced Gasket(s):** Requires a thin even coat of sealer applied to the metal side(s) of gasket.

VALVE STEM SEALS

POSITIVE GUIDE SEAL:

Use plastic installation sleeve(s), to prevent damage to lip of seal. Trim plastic sleeve so it extends 1/16" below keeper groove. Place sleeve on stem. Carefully start valve stem seal over sleeve. Remove and reuse plastic sleeve. **FOR RUBBER JACKET SEALS:** Push seal over valve guide until it bottoms. **FOR SOLID/METAL JACKET SEALS:** Use of OEM service tool is recommended. If tool is unavailable, use deep socket or rigid tube of appropriate diameter. Center tool over shoulder of seal and tap seal down over guide until it bottoms.

UMBRELLA TYPE SEAL:

Start valve stem seal over valve stem; push seal down on seal body until it touches top of valve stem guide. Seal will find its proper position on stem once engine starts.

VALVE COVER GASKET

ATTACH AND ALIGN GASKET. Apply a quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

INTAKE MANIFOLD GASKET

ATTACH AND ALIGN BOTH HEAT CROSSOVER PORT GASKETS over center ports of intake manifold gasket using a quick-drying adhesive.

EXHAUST MANIFOLD GASKET

ATTACH AND ALIGN GASKET(S). If gasket has only one steel faced side, install steel side towards manifold.

MISCELLANEOUS FLUID

SEALING GASKET(S)/SEAL(S)

ATTACH AND ALIGN GASKET(S)/SEAL(S): If supplementary sealer is desired, apply a thin coat of gasket sealer to both sides of gasket(s). However, molded rubber gaskets or those with colored Printoseal® sealing beads, install **DRY**.