

VALVE COVER GASKET

NOTICE

In order to install the product in this set without difficulty the gasket must be placed into the cover groove in the following manner: Lay the gasket in its full shape on the cover and align it over the cover grooves.

Start in the middle and lightly press the gasket into position.

Following the length of the cover on both sides slightly press the gasket into the grooves and the end radii.

DO NOT STRETCH THE GASKET WITH SLIDING FINGER PRESSURE ALONG ITS LENGTH AS THIS TECHNIQUE WILL CAUSE THE GASKET TO GROW IN LENGTH AND APPEAR TO BE TOO LONG.

The light vertical pressure pressing straight down will settle the gasket into proper position for an easy and dependable installation.

VALVE COVER GASKET

NOTICE

In order to install the product in this set without difficulty the gasket must be placed into the cover groove in the following manner: Lay the gasket in its full shape on the cover and align it over the cover grooves.

Start in the middle and lightly press the gasket into position.

Following the length of the cover on both sides slightly press the gasket into the grooves and the end radii.

DO NOT STRETCH THE GASKET WITH SLIDING FINGER PRESSURE ALONG ITS LENGTH AS THIS TECHNIQUE WILL CAUSE THE GASKET TO GROW IN LENGTH AND APPEAR TO BE TOO LONG.

The light vertical pressure pressing straight down will settle the gasket into proper position for an easy and dependable installation.

VALVE COVER GASKET

NOTICE

In order to install the product in this set without difficulty the gasket must be placed into the cover groove in the following manner: Lay the gasket in its full shape on the cover and align it over the cover grooves.

Start in the middle and lightly press the gasket into position.

Following the length of the cover on both sides slightly press the gasket into the grooves and the end radii.

DO NOT STRETCH THE GASKET WITH SLIDING FINGER PRESSURE ALONG ITS LENGTH AS THIS TECHNIQUE WILL CAUSE THE GASKET TO GROW IN LENGTH AND APPEAR TO BE TOO LONG.

The light vertical pressure pressing straight down will settle the gasket into proper position for an easy and dependable installation.

VALVE COVER GASKET

NOTICE

In order to install the product in this set without difficulty the gasket must be placed into the cover groove in the following manner: Lay the gasket in its full shape on the cover and align it over the cover grooves.

Start in the middle and lightly press the gasket into position.

Following the length of the cover on both sides slightly press the gasket into the grooves and the end radii.

DO NOT STRETCH THE GASKET WITH SLIDING FINGER PRESSURE ALONG ITS LENGTH AS THIS TECHNIQUE WILL CAUSE THE GASKET TO GROW IN LENGTH AND APPEAR TO BE TOO LONG.

The light vertical pressure pressing straight down will settle the gasket into proper position for an easy and dependable installation.