



FEL-PRO INSTALLATION TIPS

TIMING COVER

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

TIMING COVER SEALS

PRIOR TO INSTALLING THE SEAL apply a thin coat grease on the seal face.

IMPORTANT: Do not install any seal without break-in lubricant protection.

CREATE TIMING COVER GASKET by applying a continuous 1/8" bead of silicone sealer, to the mating surface of the timing cover.

REINSTALL COVER TO ENGINE.
Torque bolts evenly and slowly to OEM specifications.

© 2000 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-1487 (Rev. 9/00)



FEL-PRO INSTALLATION TIPS

TIMING COVER

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

TIMING COVER SEALS

PRIOR TO INSTALLING THE SEAL apply a thin coat grease on the seal face.

IMPORTANT: Do not install any seal without break-in lubricant protection.

CREATE TIMING COVER GASKET by applying a continuous 1/8" bead of silicone sealer, to the mating surface of the timing cover.

REINSTALL COVER TO ENGINE.
Torque bolts evenly and slowly to OEM specifications.

© 2000 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-1487 (Rev. 9/00)



FEL-PRO INSTALLATION TIPS

TIMING COVER

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

TIMING COVER SEALS

PRIOR TO INSTALLING THE SEAL apply a thin coat grease on the seal face.

IMPORTANT: Do not install any seal without break-in lubricant protection.

CREATE TIMING COVER GASKET by applying a continuous 1/8" bead of silicone sealer, to the mating surface of the timing cover.

REINSTALL COVER TO ENGINE.
Torque bolts evenly and slowly to OEM specifications.

© 2000 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-1487 (Rev. 9/00)



FEL-PRO INSTALLATION TIPS

TIMING COVER

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

TIMING COVER SEALS

PRIOR TO INSTALLING THE SEAL apply a thin coat grease on the seal face.

IMPORTANT: Do not install any seal without break-in lubricant protection.

CREATE TIMING COVER GASKET by applying a continuous 1/8" bead of silicone sealer, to the mating surface of the timing cover.

REINSTALL COVER TO ENGINE.
Torque bolts evenly and slowly to OEM specifications.

© 2000 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-1487 (Rev. 9/00)



FEL-PRO INSTALLATION TIPS

TIMING COVER

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

TIMING COVER SEALS

PRIOR TO INSTALLING THE SEAL apply a thin coat grease on the seal face.

IMPORTANT: Do not install any seal without break-in lubricant protection.

CREATE TIMING COVER GASKET by applying a continuous 1/8" bead of silicone sealer, to the mating surface of the timing cover.

REINSTALL COVER TO ENGINE.
Torque bolts evenly and slowly to OEM specifications.

© 2000 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-1487 (Rev. 9/00)



FEL-PRO INSTALLATION TIPS

TIMING COVER

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

TIMING COVER SEALS

PRIOR TO INSTALLING THE SEAL apply a thin coat grease on the seal face.

IMPORTANT: Do not install any seal without break-in lubricant protection.

CREATE TIMING COVER GASKET by applying a continuous 1/8" bead of silicone sealer, to the mating surface of the timing cover.

REINSTALL COVER TO ENGINE.
Torque bolts evenly and slowly to OEM specifications.

© 2000 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-1487 (Rev. 9/00)



FEL-PRO INSTALLATION TIPS

TIMING COVER

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

TIMING COVER SEALS

PRIOR TO INSTALLING THE SEAL apply a thin coat grease on the seal face.

IMPORTANT: Do not install any seal without break-in lubricant protection.

CREATE TIMING COVER GASKET by applying a continuous 1/8" bead of silicone sealer, to the mating surface of the timing cover.

REINSTALL COVER TO ENGINE.
Torque bolts evenly and slowly to OEM specifications.

© 2000 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-1487 (Rev. 9/00)



FEL-PRO INSTALLATION TIPS

TIMING COVER

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

TIMING COVER SEALS

PRIOR TO INSTALLING THE SEAL apply a thin coat grease on the seal face.

IMPORTANT: Do not install any seal without break-in lubricant protection.

CREATE TIMING COVER GASKET by applying a continuous 1/8" bead of silicone sealer, to the mating surface of the timing cover.

REINSTALL COVER TO ENGINE.
Torque bolts evenly and slowly to OEM specifications.

© 2000 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-1487 (Rev. 9/00)