



FEL-PRO INSTALLATION TIPS

The lower crankcase seal provided in this set is designed to fit all applications.

For 2003-04 models, the 5/16" extra length having 2 small ears beyond the double tabs at one end must be trimmed off at the double tabs and a small dab of RTV silicone sealant applied to this end where located in the groove of the casting.



FEL-PRO INSTALLATION TIPS

The lower crankcase seal provided in this set is designed to fit all applications.

For 2003-04 models, the 5/16" extra length having 2 small ears beyond the double tabs at one end must be trimmed off at the double tabs and a small dab of RTV silicone sealant applied to this end where located in the groove of the casting.



FEL-PRO INSTALLATION TIPS

The lower crankcase seal provided in this set is designed to fit all applications.

For 2003-04 models, the 5/16" extra length having 2 small ears beyond the double tabs at one end must be trimmed off at the double tabs and a small dab of RTV silicone sealant applied to this end where located in the groove of the casting.



FEL-PRO INSTALLATION TIPS

The lower crankcase seal provided in this set is designed to fit all applications.

For 2003-04 models, the 5/16" extra length having 2 small ears beyond the double tabs at one end must be trimmed off at the double tabs and a small dab of RTV silicone sealant applied to this end where located in the groove of the casting.



FEL-PRO INSTALLATION TIPS

The lower crankcase seal provided in this set is designed to fit all applications.

For 2003-04 models, the 5/16" extra length having 2 small ears beyond the double tabs at one end must be trimmed off at the double tabs and a small dab of RTV silicone sealant applied to this end where located in the groove of the casting.



FEL-PRO INSTALLATION TIPS

The lower crankcase seal provided in this set is designed to fit all applications.

For 2003-04 models, the 5/16" extra length having 2 small ears beyond the double tabs at one end must be trimmed off at the double tabs and a small dab of RTV silicone sealant applied to this end where located in the groove of the casting.