

Attention:

Due to variances in OE covers, the valve cover gasket in this package may not directly match the contour of the cover in its free state. This gasket will fit and function properly BY working the gasket into the cover in the area where the contour does not exactly match up. It is best to install any press-in-place gasket by laying it on the cover and pushing the gasket DOWN into the groove evenly. Do not place the gasket in the groove and work it around the cover, this can potentially lead to stretching of the gasket.

Attention:

Due to variances in OE covers, the valve cover gasket in this package may not directly match the contour of the cover in its free state. This gasket will fit and function properly BY working the gasket into the cover in the area where the contour does not exactly match up. It is best to install any press-in-place gasket by laying it on the cover and pushing the gasket DOWN into the groove evenly. Do not place the gasket in the groove and work it around the cover, this can potentially lead to stretching of the gasket.

Attention:

Due to variances in OE covers, the valve cover gasket in this package may not directly match the contour of the cover in its free state. This gasket will fit and function properly BY working the gasket into the cover in the area where the contour does not exactly match up. It is best to install any press-in-place gasket by laying it on the cover and pushing the gasket DOWN into the groove evenly. Do not place the gasket in the groove and work it around the cover, this can potentially lead to stretching of the gasket.

Attention:

Due to variances in OE covers, the valve cover gasket in this package may not directly match the contour of the cover in its free state. This gasket will fit and function properly BY working the gasket into the cover in the area where the contour does not exactly match up. It is best to install any press-in-place gasket by laying it on the cover and pushing the gasket DOWN into the groove evenly. Do not place the gasket in the groove and work it around the cover, this can potentially lead to stretching of the gasket.