

In order to ensure a proper seal when installing the gasket furnished in this set a small bead of RTV silicone sealant should be applied to the following locations:

On the cylinder head transition corner joints, (4 places) where the valve cover gasket makes contact with the overhead camshaft radii contour and (2 places) where the valve cover gasket makes contact with the semi-circular plug radius.

Application of RTV silicone sealant at these locations ensures that the corner location has been filled with sealant and that there is less of a chance that leakage can occur.