

Prior to installing the pillar mount, it is recommended that the gauge wiring/tubing be routed at this time. Make sure to leave enough wiring/tubing to allow for the gauges to be connected later, and then push the gauges into the pillar.



1. Pull door weather strip down and away from trim.



2. Release clip by pressing down, then forward.



3. Clip will slide off of pillar, allowing pillar to be removed.



4. Insert the supplied well nut into the slot as shown.



5. Be sure to fully seat and center the nut.



6. Install the bottom portion of the pillar. Thread screw into well nut about 2 turns.

7. Reinstall door weather strip.

8. Finish tightening the mounting screw.

9. At this time the gauges can be connected and pushed into the gauge holes. Please note that the gauges are pressure fit and will not use the standard in dash mounting brackets that were likely included with your gauges.

Auto Meter Gauge Works Three Year Limited Warranty

Gauge Works warrants to the consumer that all Auto Meter Gauge Works products will be free from defects in material and workmanship. Products that fail will be repaired or replaced at Auto Meter Gauge Works' option to the consumer, when determined by Auto Meter Gauge Works that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts in the Auto Meter Gauge Works Product and the necessary labor done by Auto Meter Gauge Works to effect the repair or replacement of the Auto Meter Gauge Works product. In no event shall this warranty exceed the original purchase price of the Auto Meter Gauge Works product nor shall Auto Meter Gauge Works be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product. Warranty claims to Auto Meter Gauge Works must be transportation prepaid and accompanied with proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. Improper use or installation, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. Auto Meter Gauge Works disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by Auto Meter Gauge Works. This warranty is made solely by Gauge Works with Auto Meter being the agent to contact for warranty claims. If the partnership between Auto Meter and Gauge Works dissolves, then all warranty adjustments will be covered by the Gauge Works Co.