


FEL-PRO INSTALLATION TIPS INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.


CHECK MANIFOLD CASTINGS for flatness of gasket surface. Resurface or replace if severely distorted or corroded.

INSTALL END SEALS. Use nibs to locate seals


IMPORTANT: These end seals must be installed **DRY** without any chemical adhesive.

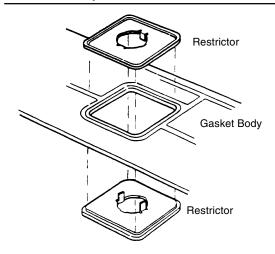

PRIOR TO INSTALLING INTAKE MANIFOLD GASKET apply a small dab of silicone sealer, such as RTV Black, to the 4 corners where the end seals meet with the cylinder heads.

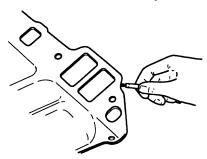

VALLEY PAN GASKET apply a thin coat of sealer around the intake ports on the underside of the gasket to prevent vacuum loss.

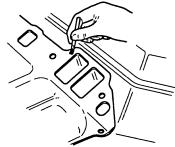

ATTACH AND ALIGN GASKET TO ENGINE apply a thin coat of sealer around the intake ports on the top side of the gasket.

REINSTALL INTAKE MANIFOLD TO ENGINE. Torque securely to OEM specifications.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.




FEL-PRO INSTALLATION TIPS INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.


CHECK MANIFOLD CASTINGS for flatness of gasket surface. Resurface or replace if severely distorted or corroded.

INSTALL END SEALS. Use nibs to locate seals

IMPORTANT: These end seals must be installed **DRY** without any chemical adhesive.

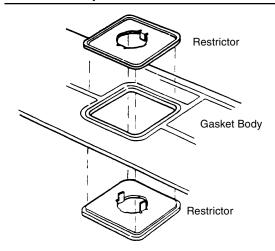

PRIOR TO INSTALLING INTAKE MANIFOLD GASKET apply a small dab of silicone sealer, such as RTV Black, to the 4 corners where the end seals meet with the cylinder heads.

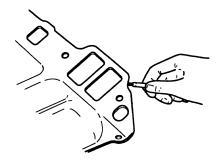

VALLEY PAN GASKET apply a thin coat of sealer around the intake ports on the underside of the gasket to prevent vacuum loss.



ATTACH AND ALIGN GASKET TO ENGINE apply a thin coat of sealer around the intake ports on the top side of the gasket.

REINSTALL INTAKE MANIFOLD TO ENGINE. Torque securely to OEM specifications.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.