

 


FEL-PRO INSTALLATION TIPS

REAR MAIN BEARING SEAL

CLEAN MATING SURFACES (cap, block and grooves of cap and block). You may wish to use a degreaser.

REMOVE NICKS AND SCRATCHES (IF ANY) FROM THE CRANKSHAFT SEALING SURFACE using a crocus cloth.

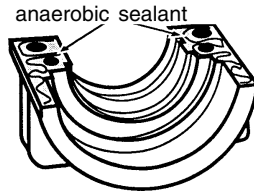

PRIOR TO INSTALLING THE REAR MAIN BEARING CAP apply an anaerobic sealant to either the rear main bearing cap or cylinder block mating surfaces. **Never** apply sealant on the ends of the seals.

REINSTALL CAP TO CYLINDER BLOCK. Torque to OEM specifications.

LUBRICATE SURFACE of seal lip and crankshaft by applying a thin coat of motor oil or grease. If engine will not be started within several days, grease is recommended.

IMPORTANT: Never install any seal without break-in lubricant protection.

INSTALL SEAL into the cylinder block. The seal is properly installed when its largest raised sealing lip is toward the **front** of the engine. (Seals with a metal garter spring require the spring to face towards the **front** of the engine.)

© 2007 Federal Mogul Incorporated
Form No. I-1428 (Rev. 12/92)

Printed in U.S.A.

 


FEL-PRO INSTALLATION TIPS

REAR MAIN BEARING SEAL

CLEAN MATING SURFACES (cap, block and grooves of cap and block). You may wish to use a degreaser.

REMOVE NICKS AND SCRATCHES (IF ANY) FROM THE CRANKSHAFT SEALING SURFACE using a crocus cloth.

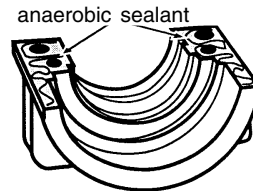

PRIOR TO INSTALLING THE REAR MAIN BEARING CAP apply an anaerobic sealant to either the rear main bearing cap or cylinder block mating surfaces. **Never** apply sealant on the ends of the seals.

REINSTALL CAP TO CYLINDER BLOCK. Torque to OEM specifications.

LUBRICATE SURFACE of seal lip and crankshaft by applying a thin coat of motor oil or grease. If engine will not be started within several days, grease is recommended.

IMPORTANT: Never install any seal without break-in lubricant protection.

INSTALL SEAL into the cylinder block. The seal is properly installed when its largest raised sealing lip is toward the **front** of the engine. (Seals with a metal garter spring require the spring to face towards the **front** of the engine.)

© 2007 Federal Mogul Incorporated
Form No. I-1428 (Rev. 12/92)

Printed in U.S.A.

 


FEL-PRO INSTALLATION TIPS

REAR MAIN BEARING SEAL

CLEAN MATING SURFACES (cap, block and grooves of cap and block). You may wish to use a degreaser.

REMOVE NICKS AND SCRATCHES (IF ANY) FROM THE CRANKSHAFT SEALING SURFACE using a crocus cloth.

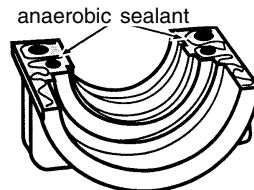

PRIOR TO INSTALLING THE REAR MAIN BEARING CAP apply an anaerobic sealant to either the rear main bearing cap or cylinder block mating surfaces. **Never** apply sealant on the ends of the seals.

REINSTALL CAP TO CYLINDER BLOCK. Torque to OEM specifications.

LUBRICATE SURFACE of seal lip and crankshaft by applying a thin coat of motor oil or grease. If engine will not be started within several days, grease is recommended.

IMPORTANT: Never install any seal without break-in lubricant protection.

INSTALL SEAL into the cylinder block. The seal is properly installed when its largest raised sealing lip is toward the **front** of the engine. (Seals with a metal garter spring require the spring to face towards the **front** of the engine.)

© 2007 Federal Mogul Incorporated
Form No. I-1428 (Rev. 12/92)

Printed in U.S.A.

 


FEL-PRO INSTALLATION TIPS

REAR MAIN BEARING SEAL

CLEAN MATING SURFACES (cap, block and grooves of cap and block). You may wish to use a degreaser.

REMOVE NICKS AND SCRATCHES (IF ANY) FROM THE CRANKSHAFT SEALING SURFACE using a crocus cloth.

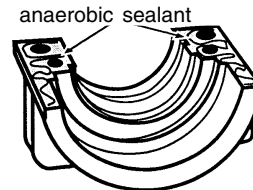

PRIOR TO INSTALLING THE REAR MAIN BEARING CAP apply an anaerobic sealant to either the rear main bearing cap or cylinder block mating surfaces. **Never** apply sealant on the ends of the seals.

REINSTALL CAP TO CYLINDER BLOCK. Torque to OEM specifications.

LUBRICATE SURFACE of seal lip and crankshaft by applying a thin coat of motor oil or grease. If engine will not be started within several days, grease is recommended.

IMPORTANT: Never install any seal without break-in lubricant protection.

INSTALL SEAL into the cylinder block. The seal is properly installed when its largest raised sealing lip is toward the **front** of the engine. (Seals with a metal garter spring require the spring to face towards the **front** of the engine.)

© 2007 Federal Mogul Incorporated
Form No. I-1428 (Rev. 12/92)

Printed in U.S.A.

cut to 4 X 4.25