

# 4-Hobbs-2/4-Hobbs-10

## Deatschwerks Universal 1/8<sup>th</sup> NPT Adjustable Hobbs Switch Adjustment Instructions for 1-3 psi and 8-12 psi Switches

**Insert  
Photo Here**

### Table of Contents

Included Parts .....	<a href="#">Page 2</a>
Suggested Tools .....	<a href="#">Page 2</a>
Disassembly of the Hobbs Switch .....	<a href="#">Page 3</a>
Adjusting the Hobbs Switch .....	<a href="#">Page 4</a>
Assembling the Hobbs Switch .....	<a href="#">Page 4</a>

## Included Parts:

- Adjustable Hobbs Switch
- Metripack Connector


Below is a picture of some suggested tools that will make the installation process easier.

- Phillips Head Screwdriver
- 5mm Hex Driver




## Disassembly of the Hobbs Switch

1 – Start by removing the 2 Phillips head screws on top of the Hobbs switch. One screw is inside of the connector port.

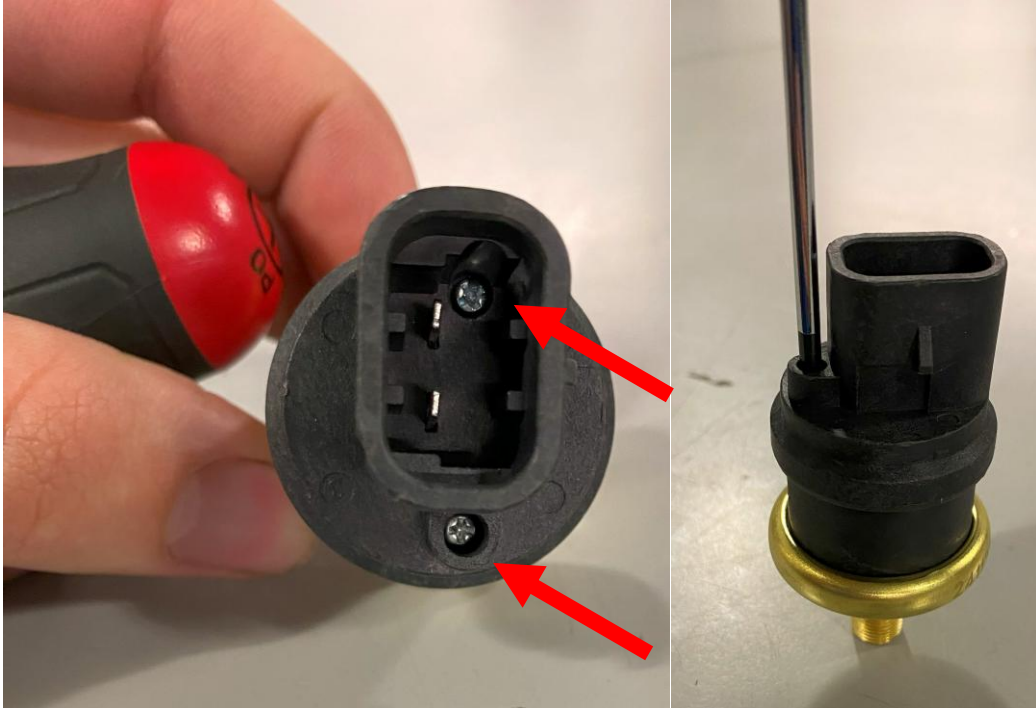


2 – Once unscrewed, remove the top piece of the Hobbs switch. Be careful not to lose the clear rubber oring that seals the cap to the body. Once removed, slide the center pen over by rotating it to the side revealing the center 5mm adjustment screw.

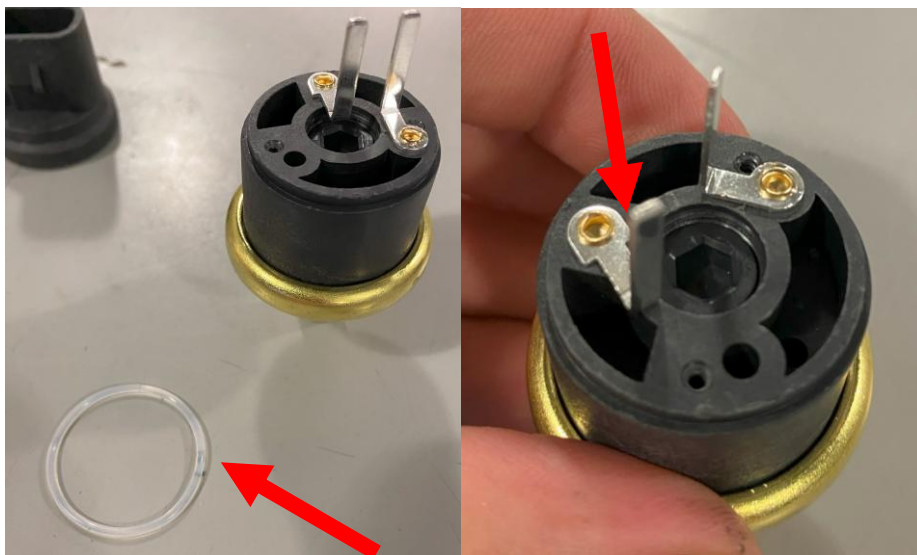

## Universal Adjustable Hobbs Switch Adjustment Guide

3 – With the adjustment screw accessible, using a 5mm hex, tighten the screw for a higher pressure and loosen for a lower pressure activation. The screw will have a total of 6 full turns of adjustment but will need to be adjusted in small increments to find the correct set point as all the way down and all the way loose do not correspond to the 8 and 12 psi ratings. Once adjustment is made, move the connector pin back to center.

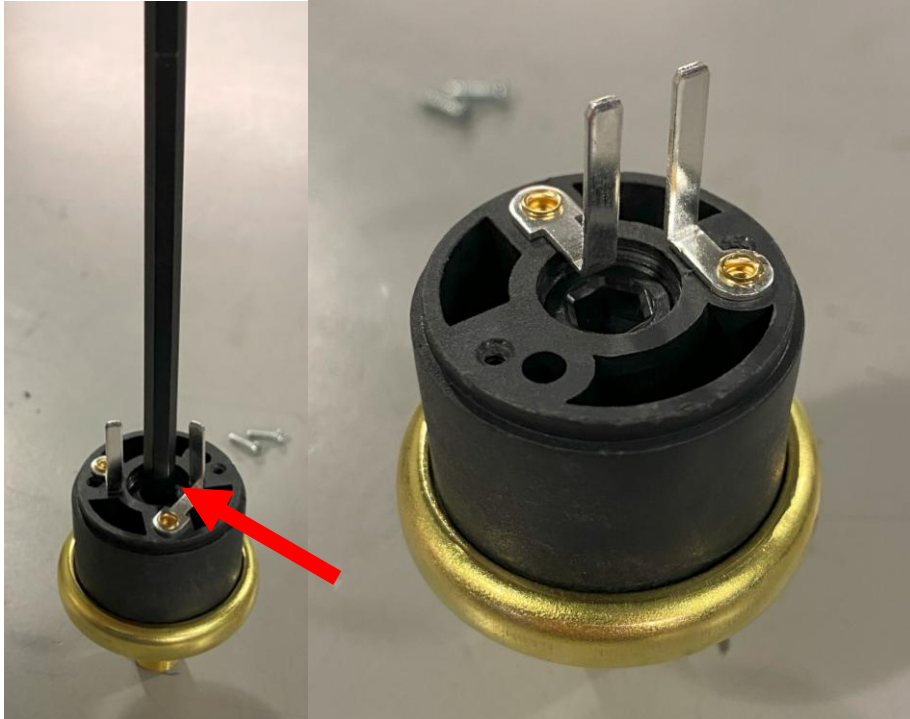

4 – Place the oring back onto the body and lower the cap back on. Ensure the oring does not come loose and screw the cap back on.

