



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying a cleaner/primer to the mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM TOWER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant, to the cam tower surface of the cap(s).

Wipe off any excess sealant.

-continued-



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying a cleaner/primer to the mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM TOWER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant, to the cam tower surface of the cap(s).

Wipe off any excess sealant.

-continued-



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying a cleaner/primer to the mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM TOWER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant, to the cam tower surface of the cap(s).

Wipe off any excess sealant.

-continued-



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying a cleaner/primer to the mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM TOWER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant, to the cam tower surface of the cap(s).

Wipe off any excess sealant.

-continued-

### ROTATING SHAFT SEALS

**PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

**ATTACH AND ALIGN SEAL RETAINER GASKET.** Apply a thin coat of gasket sealer to both sides of gasket(s).

©2002 Federal-Mogul Corporation  
Form No. I-881 (Rev. 03/93)

Printed in U.S.A.

### ROTATING SHAFT SEALS

**PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

**ATTACH AND ALIGN SEAL RETAINER GASKET.** Apply a thin coat of gasket sealer to both sides of gasket(s).

©2002 Federal-Mogul Corporation  
Form No. I-881 (Rev. 03/93)

Printed in U.S.A.

### ROTATING SHAFT SEALS

**PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

**ATTACH AND ALIGN SEAL RETAINER GASKET.** Apply a thin coat of gasket sealer to both sides of gasket(s).

©2002 Federal-Mogul Corporation  
Form No. I-881 (Rev. 03/93)

Printed in U.S.A.

### ROTATING SHAFT SEALS

**PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

**ATTACH AND ALIGN SEAL RETAINER GASKET.** Apply a thin coat of gasket sealer to both sides of gasket(s).

©2002 Federal-Mogul Corporation  
Form No. I-881 (Rev. 03/93)

Printed in U.S.A.



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying a cleaner/primer to the mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM TOWER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant, to the cam tower surface of the cap(s).

Wipe off any excess sealant.

-continued-



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying a cleaner/primer to the mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM TOWER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant, to the cam tower surface of the cap(s).

Wipe off any excess sealant.

-continued-



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying a cleaner/primer to the mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM TOWER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant, to the cam tower surface of the cap(s).

Wipe off any excess sealant.

-continued-



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying a cleaner/primer to the mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM TOWER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant, to the cam tower surface of the cap(s).

Wipe off any excess sealant.

-continued-

### ROTATING SHAFT SEALS

**PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

**ATTACH AND ALIGN SEAL RETAINER GASKET.** Apply a thin coat of gasket sealer to both sides of gasket(s).

©2002 Federal-Mogul Corporation  
Form No. I-881 (Rev. 03/93)

Printed in U.S.A.

### ROTATING SHAFT SEALS

**PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

**ATTACH AND ALIGN SEAL RETAINER GASKET.** Apply a thin coat of gasket sealer to both sides of gasket(s).

©2002 Federal-Mogul Corporation  
Form No. I-881 (Rev. 03/93)

Printed in U.S.A.

### ROTATING SHAFT SEALS

**PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

**ATTACH AND ALIGN SEAL RETAINER GASKET.** Apply a thin coat of gasket sealer to both sides of gasket(s).

©2002 Federal-Mogul Corporation  
Form No. I-881 (Rev. 03/93)

Printed in U.S.A.

### ROTATING SHAFT SEALS

**PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

**IMPORTANT:** Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

**ATTACH AND ALIGN SEAL RETAINER GASKET.** Apply a thin coat of gasket sealer to both sides of gasket(s).

©2002 Federal-Mogul Corporation  
Form No. I-881 (Rev. 03/93)

Printed in U.S.A.