

WARNING

The enclosed rubber grommet is used with this head gasket and must be installed into the high pressure oil transfer hole in the cylinder head counterbore prior to assembly of the head gasket and cylinder head.

This grommet is located at the triangular shaped oil pressure hole in the head gasket.