



FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.

INTAKE MANIFOLD GASKET

 
PRIOR TO INSTALLING INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, silicone sealant and oil.

CHECK MANIFOLD CASTINGS for flatness of gasket surface. Resurface or replace if severely distorted or corroded.

ATTACH AND ALIGN GASKET(S) TO CYLINDER HEAD(S).

CREATE INTAKE MANIFOLD END SEAL(S) by applying a continuous 3/16" bead of silicone sealant across the front and rear ends of the cylinder block, from one cylinder head to the other.

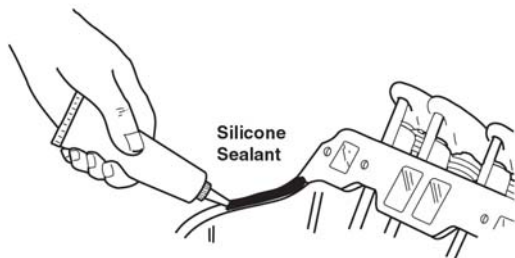

REINSTALL INTAKE MANIFOLD TO ENGINE while silicone sealant is still wet.

Torque securely to OEM specifications.



FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.

INTAKE MANIFOLD GASKET

 
PRIOR TO INSTALLING INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, silicone sealant and oil.

CHECK MANIFOLD CASTINGS for flatness of gasket surface. Resurface or replace if severely distorted or corroded.

ATTACH AND ALIGN GASKET(S) TO CYLINDER HEAD(S).

CREATE INTAKE MANIFOLD END SEAL(S) by applying a continuous 3/16" bead of silicone sealant across the front and rear ends of the cylinder block, from one cylinder head to the other.

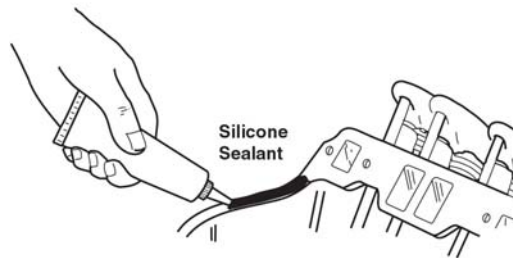

REINSTALL INTAKE MANIFOLD TO ENGINE while silicone sealant is still wet.

Torque securely to OEM specifications.



FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.

INTAKE MANIFOLD GASKET

 
PRIOR TO INSTALLING INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, silicone sealant and oil.

CHECK MANIFOLD CASTINGS for flatness of gasket surface. Resurface or replace if severely distorted or corroded.

ATTACH AND ALIGN GASKET(S) TO CYLINDER HEAD(S).

CREATE INTAKE MANIFOLD END SEAL(S) by applying a continuous 3/16" bead of silicone sealant across the front and rear ends of the cylinder block, from one cylinder head to the other.

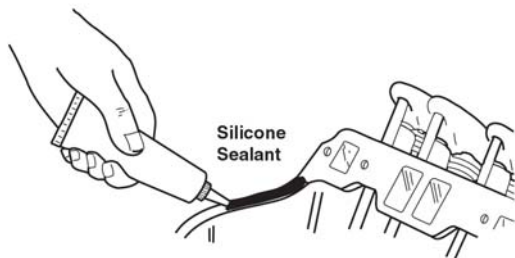

REINSTALL INTAKE MANIFOLD TO ENGINE while silicone sealant is still wet.

Torque securely to OEM specifications.



FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.

INTAKE MANIFOLD GASKET

 
PRIOR TO INSTALLING INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, silicone sealant and oil.

CHECK MANIFOLD CASTINGS for flatness of gasket surface. Resurface or replace if severely distorted or corroded.

ATTACH AND ALIGN GASKET(S) TO CYLINDER HEAD(S).

CREATE INTAKE MANIFOLD END SEAL(S) by applying a continuous 3/16" bead of silicone sealant across the front and rear ends of the cylinder block, from one cylinder head to the other.

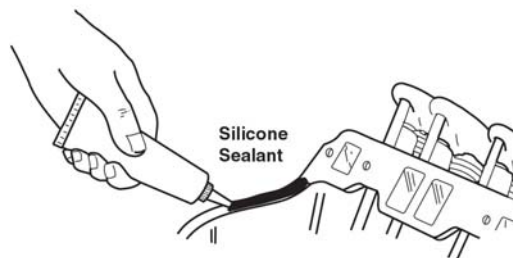

REINSTALL INTAKE MANIFOLD TO ENGINE while silicone sealant is still wet.

Torque securely to OEM specifications.