

FIT[®]

FEL-PRO INSTALLATION TIPS

GENERAL INSTRUCTIONS

CLEAN MATING SURFACES. Use a degreaser.

CLEAN THREADS of bolts/studs; for nuts/threaded holes use a bottoming tap.

BOLT PREPARATION: Those **entering** coolant passages require a pliable non-hardening sealer on threads and underside of bolt heads. Those **not entering** coolant passages require oil on threads and underside of bolt heads. **Exhaust Assembly:** Apply a high temperature anti-seize lubricant to threadings.

CHECK CASTINGS for flatness. Straighten, resurface or replace if needed. **CYLINDER HEAD AND BLOCK:** Refer to OEM manual to determine flatness tolerances and resurfacing limitations.

FINAL ASSEMBLY: Torque all fasteners to OEM specifications unless noted. **CYLINDER HEAD** torquing is critical; we recommend that you confirm with OEM.

FRONT CRANKSHAFT SEAL

PRIOR TO INSTALLING THE SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

- Continued -

FIT[®]

FEL-PRO INSTALLATION TIPS

GENERAL INSTRUCTIONS

CLEAN MATING SURFACES. Use a degreaser.

CLEAN THREADS of bolts/studs; for nuts/threaded holes use a bottoming tap.

BOLT PREPARATION: Those **entering** coolant passages require a pliable non-hardening sealer on threads and underside of bolt heads. Those **not entering** coolant passages require oil on threads and underside of bolt heads. **Exhaust Assembly:** Apply a high temperature anti-seize lubricant to threadings.

CHECK CASTINGS for flatness. Straighten, resurface or replace if needed. **CYLINDER HEAD AND BLOCK:** Refer to OEM manual to determine flatness tolerances and resurfacing limitations.

FINAL ASSEMBLY: Torque all fasteners to OEM specifications unless noted. **CYLINDER HEAD** torquing is critical; we recommend that you confirm with OEM.

FRONT CRANKSHAFT SEAL

PRIOR TO INSTALLING THE SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

- Continued -

REAR MAIN BEARING SEAL


PRIOR TO INSTALLING THE REAR MAIN BEARING CAP apply an anaerobic sealant to either the rear main bearing cap or cylinder block mating surfaces. **Never** apply sealant on the ends of the seals.

REINSTALL CAP TO CYLINDER BLOCK. Torque to OEM specifications.

LUBRICATE SURFACE of seal lip and crankshaft by applying a thin coat of motor oil or grease. If engine will not be started within several days, grease is recommended.

IMPORTANT: Never install any seal without break-in lubricant protection.

INSTALL SEAL into the cylinder block. The seal is properly installed when its largest raised sealing lip is toward the **front** of the engine. (Seals with a metal garter spring require the spring to face towards the **front** of the engine.)

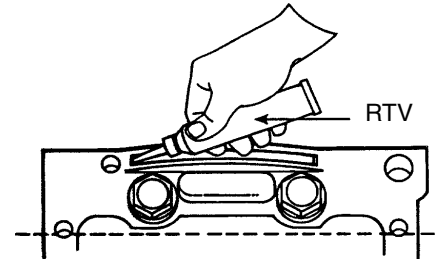

FILL SIDE CAVITIES with silicone sealer. Then wipe off excess RTV.

OIL PAN GASKET

ATTACH AND ALIGN GASKET(S). Apply a quick-drying adhesive sparingly. Mount gasket and/or seals. **PRIOR TO INSTALLING OIL PAN** apply a dab of silicone sealer where all gaskets and seals meet.

© 2004 Federal-Mogul Corporation
Form No. I-476 (Rev. 12/04)

Printed in U.S.A.

REAR MAIN BEARING SEAL


PRIOR TO INSTALLING THE REAR MAIN BEARING CAP apply an anaerobic sealant to either the rear main bearing cap or cylinder block mating surfaces. **Never** apply sealant on the ends of the seals.

REINSTALL CAP TO CYLINDER BLOCK. Torque to OEM specifications.

LUBRICATE SURFACE of seal lip and crankshaft by applying a thin coat of motor oil or grease. If engine will not be started within several days, grease is recommended.

IMPORTANT: Never install any seal without break-in lubricant protection.

INSTALL SEAL into the cylinder block. The seal is properly installed when its largest raised sealing lip is toward the **front** of the engine. (Seals with a metal garter spring require the spring to face towards the **front** of the engine.)

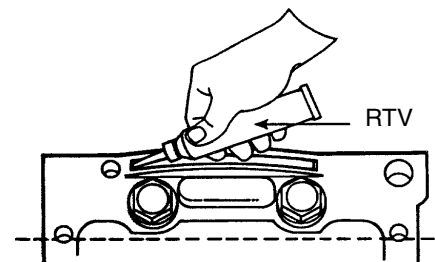

FILL SIDE CAVITIES with silicone sealer. Then wipe off excess RTV.

OIL PAN GASKET

ATTACH AND ALIGN GASKET(S). Apply a quick-drying adhesive sparingly. Mount gasket and/or seals. **PRIOR TO INSTALLING OIL PAN** apply a dab of silicone sealer where all gaskets and seals meet.

© 2004 Federal-Mogul Corporation
Form No. I-476 (Rev. 12/04)

Printed in U.S.A.

FIT[®]

FEL-PRO INSTALLATION TIPS

GENERAL INSTRUCTIONS

CLEAN MATING SURFACES. Use a degreaser.

CLEAN THREADS of bolts/studs; for nuts/threaded holes use a bottoming tap.

BOLT PREPARATION: Those **entering** coolant passages require a pliable non-hardening sealer on threads and underside of bolt heads. Those **not entering** coolant passages require oil on threads and underside of bolt heads. **Exhaust Assembly:** Apply a high temperature anti-seize lubricant to threadings.

CHECK CASTINGS for flatness. Straighten, resurface or replace if needed. **CYLINDER HEAD AND BLOCK:** Refer to OEM manual to determine flatness tolerances and resurfacing limitations.

FINAL ASSEMBLY: Torque all fasteners to OEM specifications unless noted. **CYLINDER HEAD** torquing is critical; we recommend that you confirm with OEM.

FRONT CRANKSHAFT SEAL

PRIOR TO INSTALLING THE SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

- Continued -

FIT[®]

FEL-PRO INSTALLATION TIPS

GENERAL INSTRUCTIONS

CLEAN MATING SURFACES. Use a degreaser.

CLEAN THREADS of bolts/studs; for nuts/threaded holes use a bottoming tap.

BOLT PREPARATION: Those **entering** coolant passages require a pliable non-hardening sealer on threads and underside of bolt heads. Those **not entering** coolant passages require oil on threads and underside of bolt heads. **Exhaust Assembly:** Apply a high temperature anti-seize lubricant to threadings.

CHECK CASTINGS for flatness. Straighten, resurface or replace if needed. **CYLINDER HEAD AND BLOCK:** Refer to OEM manual to determine flatness tolerances and resurfacing limitations.

FINAL ASSEMBLY: Torque all fasteners to OEM specifications unless noted. **CYLINDER HEAD** torquing is critical; we recommend that you confirm with OEM.

FRONT CRANKSHAFT SEAL

PRIOR TO INSTALLING THE SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

- Continued -

REAR MAIN BEARING SEAL


PRIOR TO INSTALLING THE REAR MAIN BEARING CAP apply an anaerobic sealant to either the rear main bearing cap or cylinder block mating surfaces. **Never** apply sealant on the ends of the seals.

REINSTALL CAP TO CYLINDER BLOCK. Torque to OEM specifications.

LUBRICATE SURFACE of seal lip and crankshaft by applying a thin coat of motor oil or grease. If engine will not be started within several days, grease is recommended.

IMPORTANT: Never install any seal without break-in lubricant protection.

INSTALL SEAL into the cylinder block. The seal is properly installed when its largest raised sealing lip is toward the **front** of the engine. (Seals with a metal garter spring require the spring to face towards the **front** of the engine.)

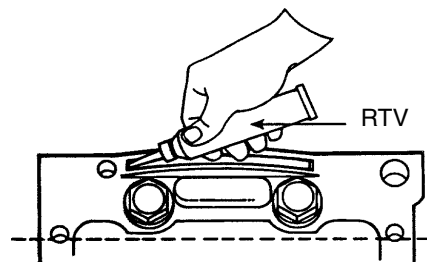

FILL SIDE CAVITIES with silicone sealer. Then wipe off excess RTV.

OIL PAN GASKET

ATTACH AND ALIGN GASKET(S). Apply a quick-drying adhesive sparingly. Mount gasket and/or seals. **PRIOR TO INSTALLING OIL PAN** apply a dab of silicone sealer where all gaskets and seals meet.

© 2004 Federal-Mogul Corporation
Form No. I-476 (Rev. 12/04)

Printed in U.S.A.

REAR MAIN BEARING SEAL


PRIOR TO INSTALLING THE REAR MAIN BEARING CAP apply an anaerobic sealant to either the rear main bearing cap or cylinder block mating surfaces. **Never** apply sealant on the ends of the seals.

REINSTALL CAP TO CYLINDER BLOCK. Torque to OEM specifications.

LUBRICATE SURFACE of seal lip and crankshaft by applying a thin coat of motor oil or grease. If engine will not be started within several days, grease is recommended.

IMPORTANT: Never install any seal without break-in lubricant protection.

INSTALL SEAL into the cylinder block. The seal is properly installed when its largest raised sealing lip is toward the **front** of the engine. (Seals with a metal garter spring require the spring to face towards the **front** of the engine.)

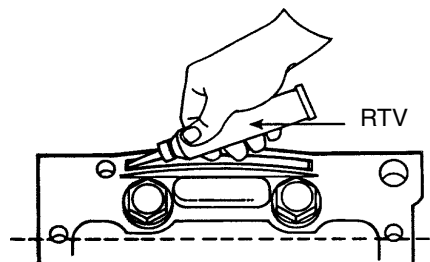

FILL SIDE CAVITIES with silicone sealer. Then wipe off excess RTV.

OIL PAN GASKET

ATTACH AND ALIGN GASKET(S). Apply a quick-drying adhesive sparingly. Mount gasket and/or seals. **PRIOR TO INSTALLING OIL PAN** apply a dab of silicone sealer where all gaskets and seals meet.

© 2004 Federal-Mogul Corporation
Form No. I-476 (Rev. 12/04)

Printed in U.S.A.