



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR

SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

CRANKSHAFT REPAIR SLEEVE

INSTALL REPAIR SLEEVE: Apply a thin coat of locking compound to shaft surface. Using a flat block, tap sleeve gently over the shaft until it bottoms



© 2000 Federal-Mogul Corp.
Form No. I-397 (Rev. 9/00)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR

SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

CRANKSHAFT REPAIR SLEEVE

INSTALL REPAIR SLEEVE: Apply a thin coat of locking compound to shaft surface. Using a flat block, tap sleeve gently over the shaft until it bottoms



© 2000 Federal-Mogul Corp.
Form No. I-397 (Rev. 9/00)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR

SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

CRANKSHAFT REPAIR SLEEVE

INSTALL REPAIR SLEEVE: Apply a thin coat of locking compound to shaft surface. Using a flat block, tap sleeve gently over the shaft until it bottoms



© 2000 Federal-Mogul Corp.
Form No. I-397 (Rev. 9/00)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR

SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

CRANKSHAFT REPAIR SLEEVE

INSTALL REPAIR SLEEVE: Apply a thin coat of locking compound to shaft surface. Using a flat block, tap sleeve gently over the shaft until it bottoms



© 2000 Federal-Mogul Corp.
Form No. I-397 (Rev. 9/00)

Printed in U.S.A.