 


ATTACH AND ALIGN GASKET. Apply quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure if gasket moves, allow more time.

REINSTALL COVER TO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.

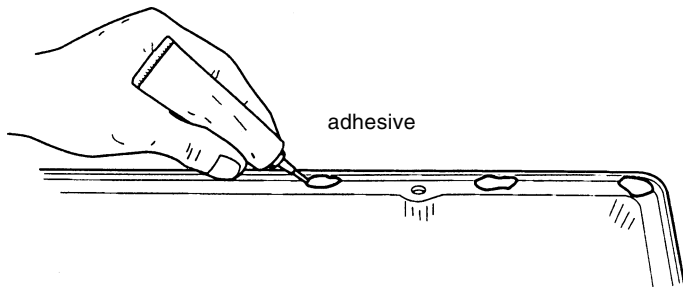

ATTACH AND ALIGN GASKET. Apply quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure if gasket moves, allow more time.

REINSTALL COVER TO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.

 


FEL-PRO INSTALLATION TIPS

VALVE COVER GASKET

CLEAN MATING SURFACES. Of all foreign material including old gaskets, sealer and oil. You may wish to use a degreaser. Also, clean oil return holes.

CHECK COVER FLANGES for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

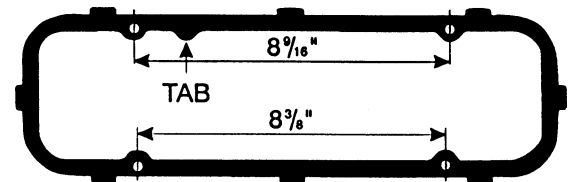



FEL-PRO INSTALLATION TIPS

VALVE COVER GASKET

CLEAN MATING SURFACES. Of all foreign material including old gaskets, sealer and oil. You may wish to use a degreaser. Also, clean oil return holes.

  
CHECK COVER FLANGES for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

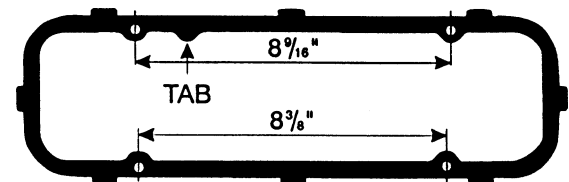

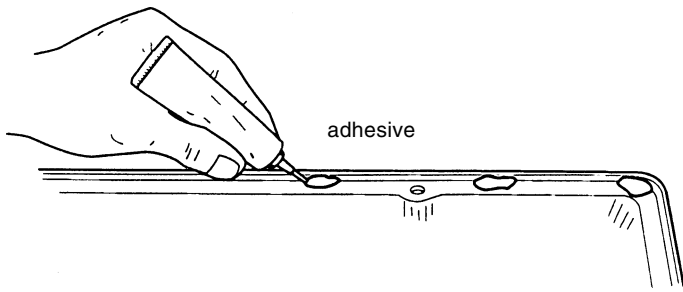

ATTACH AND ALIGN GASKET. Apply quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure if gasket moves, allow more time.

 REINSTALL COVER TO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.

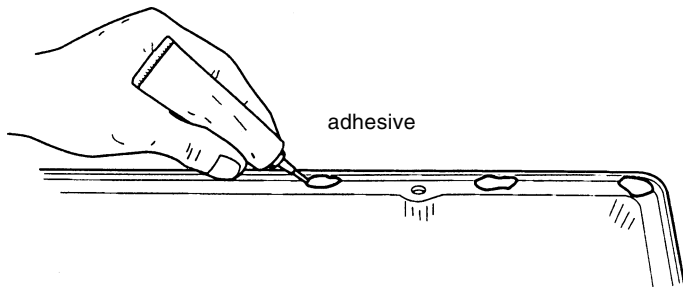

ATTACH AND ALIGN GASKET. Apply quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure if gasket moves, allow more time.

REINSTALL COVER TO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.

 


FEL-PRO INSTALLATION TIPS

VALVE COVER GASKET

CLEAN MATING SURFACES. Of all foreign material including old gaskets, sealer and oil. You may wish to use a degreaser. Also, clean oil return holes.

CHECK COVER FLANGES for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

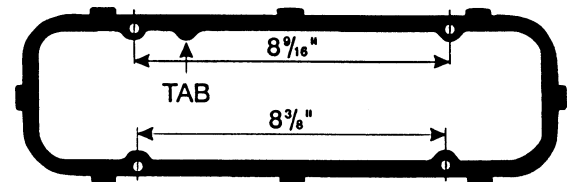

FEL-PRO INSTALLATION TIPS

VALVE COVER GASKET

CLEAN MATING SURFACES. Of all foreign material including old gaskets, sealer and oil. You may wish to use a degreaser. Also, clean oil return holes.

CHECK COVER FLANGES for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

