 


**VALVE COVER GASKET** 

FEL-PRO PermaDryPlus™ gaskets have been developed to deliver permanent solutions to old problems. Permanently.

**CLEAN MATING SURFACES AND BOLT HOLES** of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser such as Cleaner/Degreaser. Also clean oil return holes.



PRIOR TO REINSTALLING VALVE COVER, apply a small dab of silicone sealer, such Red RTV Silicone to the corner intersections of the intake manifold and cylinder head.

ATTACH AND ALIGN GASKET FOLLOWING ANY DIRECTIONAL MARKINGS SHOWN ON THE GASKET. Place the cover side of gasket on the valve cover flange. Push the bolts through the cover and bolt holes. This gaskets features Hole Lock, Hole Lock will hold gasket and cover together, by the bolts as an assembly. If no markings exist, simply install the gasket by matching the gasket to cover.

IMPORTANT: This PermaDryPlus™ gasket must be installed DRY without any chemical adhesive.

REINSTALL ASSEMBLY TO ENGINE. Torgue securely to OEM specifications. Over-torquing can distort cover and cause leakage.

©1998 Fel-Pro Incorporated Form No. I-1993 (Rev. 3/98)

Printed in U.S.A