



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

TRANSMISSION PAN

CLEAN MATING SURFACES.

TO ASSIST IN ALIGNMENT AND SEALING DURING ASSEMBLY, apply a thin coat of gasket sealer to both sides of gasket(s).



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

TRANSMISSION PAN

CLEAN MATING SURFACES.

TO ASSIST IN ALIGNMENT AND SEALING DURING ASSEMBLY, apply a thin coat of gasket sealer to both sides of gasket(s).



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

TRANSMISSION PAN

CLEAN MATING SURFACES.

TO ASSIST IN ALIGNMENT AND SEALING DURING ASSEMBLY, apply a thin coat of gasket sealer to both sides of gasket(s).



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

TRANSMISSION PAN

CLEAN MATING SURFACES.

TO ASSIST IN ALIGNMENT AND SEALING DURING ASSEMBLY, apply a thin coat of gasket sealer to both sides of gasket(s).

