


NOTE: It is important that all the areas where the bed cover mounts to the truck are clean and free of debris before installation.

TOOLS REQUIRED

- Scissors or utility knife
- Isopropyl alcohol


TOOLS PROVIDED

- 4mm Short arm hex key
- T-40 Torx key
- T-50 Torx key

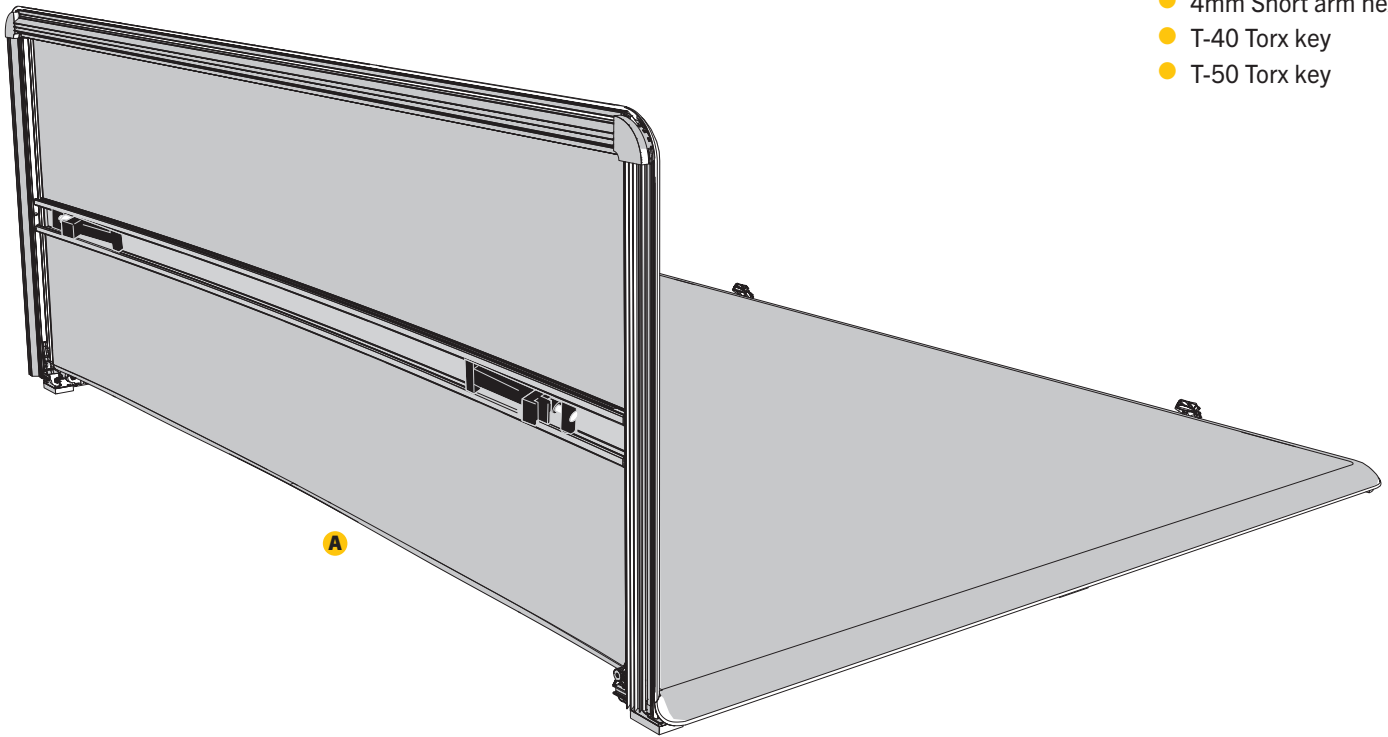

PARTS INCLUDED IN YOUR KIT

- A** Cover assembly
- B** 2x 3/8" Small hinge foam
- C** 2x D Seal 1"
- D** 2x Cab seal with adhesive
- E** 2x BHCS M6x40mm
- F** 2x BHCS M8x50mm
- G** 2x 5/16" Washer
- H** 2x 1/4" Washer
- I** 1x Driver side mounting rail
- J** 1x Passenger side mounting rail

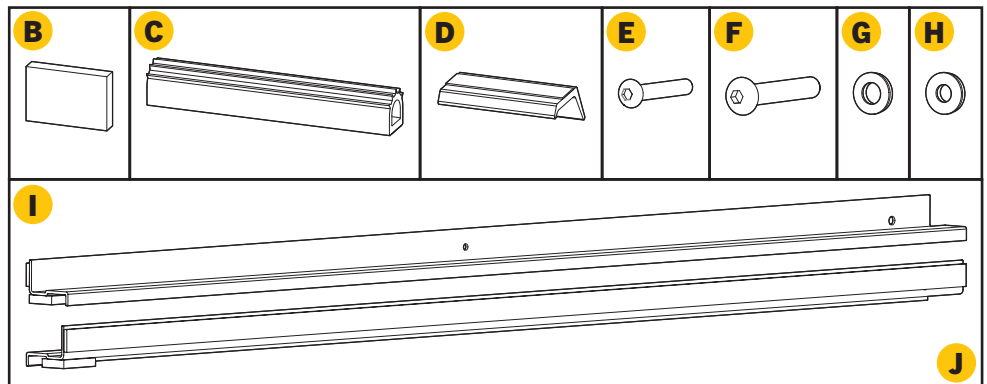

! IMPORTANT

READ BEFORE YOU BEGIN INSTALLATION

IT IS CRITICAL FOR YOUR SAFETY THAT YOU CAREFULLY READ AND FOLLOW THE SAFETY CAUTIONS AND INSTALLATION INSTRUCTIONS BOTH PRIOR TO AND DURING INSTALLATION.

USER SAFETY CAUTION

During installation, be mindful of the potential for sharp edges on the product or vehicle. Taking proper safety precautions helps ensure a safe and smooth installation process.

Always wear protective gloves and handle components with care to reduce the risk of injury.



TEMPERATURE SURFACE CAUTION

During high temperatures or extended sun exposure, surfaces of this product may become hot to the touch, posing a risk of burns or injury. Use caution when handling the product in hot weather and allow time for it to cool before contact.

Always check surface temperature before use to ensure safe handling conditions.



FASTENER TORQUE CAUTION

All fasteners must be tightened to the specified torque values provided in the installation instructions to ensure proper fit and safe operation of the tonneau cover. Under- or over-tightening can lead to product failure, potential damage to your vehicle, injury, or safety hazards while driving.

Always use a calibrated torque wrench and follow the specifications in the installation instructions.



PINCH POINT SAFETY CAUTION

This tonneau cover may create pinch points when closing or operating near solid surfaces such as the truck bed rails or tailgate. To prevent injury, keep hands, fingers, and other body parts clear of moving parts during operation.


Always operate the cover slowly and with caution to ensure safe and proper use.



ENTRAPMENT SAFETY WARNING

This tonneau cover does not feature a manual release mechanism from inside the truck bed. To prevent the risk of entrapment, never allow anyone to be inside the bed of the truck when the cover is closed.

Always ensure the area is clear before closing the cover, and keep the cover securely latched when not in use to avoid accidental closure.

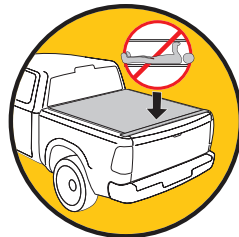

COVER ATTACHMENT WARNING

A partially folded up or unsecured cover may detach during transit, risking vehicle or property damage and personal injury.


Always verify the tonneau cover is properly secured before operating the vehicle.



CARGO TRANSPORT WARNING

When transporting cargo that is taller than the truck bed, the cover must be fully folded open and securely fastened with both retainer straps. An unsecured cover can detach while driving, risking vehicle or property damage and personal injury.


Never operate the vehicle with a partially folded up cover.

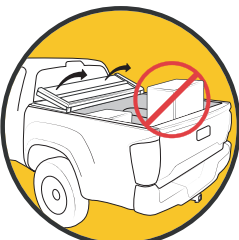

COVER POSITION WARNING

Before operating the vehicle, always verify the tonneau cover is either fully folded open and secured with both buckles or fully folded closed and securely latched down.


Never operate the vehicle if the tonneau cover is not properly secured.

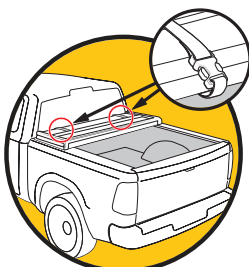


INSTALLATION STEPS

- 1 At the cab remove the front upper tie-down bracket and bolts using a T-50 Torx wrench. Next remove the center trim panel bolt using a T-40 Torx wrench.


Note: Upper tie down brackets will not be replaced. Keep the removed parts for later re-installation if tonneau is ever completely removed. Repeat on both sides of the vehicle.

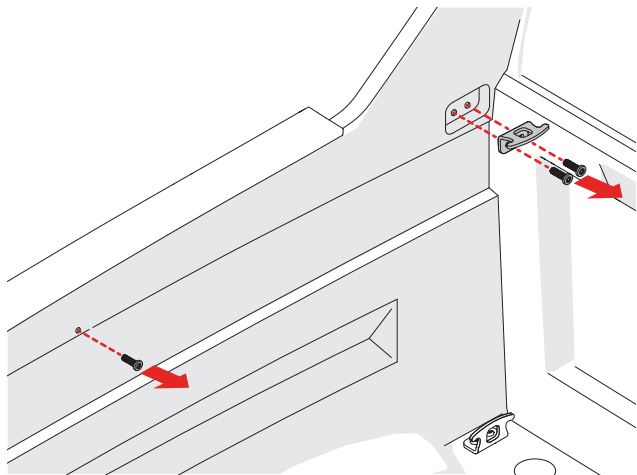

- 2 Clean the area where you will be applying the D Seal 1" (C) above the screw holes inside the pocket with soap and water to remove dirt and debris. Then clean the same area with isopropyl alcohol to remove wax or grease and to evaporate any remaining water. Allow the surface to dry. Peel the backing paper from the seal (C) and apply pressure to the entire seal to make sure the adhesion is good. Seal will compress when rail is mounted. Repeat on passenger side.

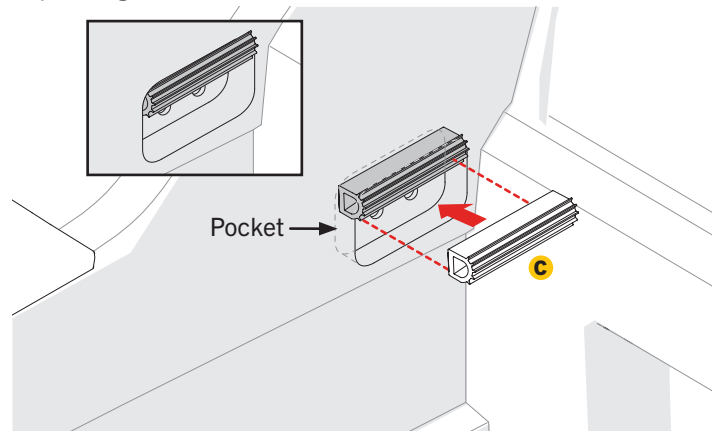


- 3 The design of the Honda cab bulkhead and sides leaves a gap that may allow water in. Extra silicone sealing is needed to prevent water entry at this point. Clean the area where you will be applying the cab seal (D) with soap and water to remove dirt and debris. Then clean the same area with isopropyl alcohol to remove wax or grease and to evaporate any remaining water. Allow the surface to dry. Peel the backing paper from the seal (D) and apply pressure to the entire seal to make sure the adhesion is good. Seal attaches to both sides of side rail. Position seal to fill corner gap. Repeat on passenger side.

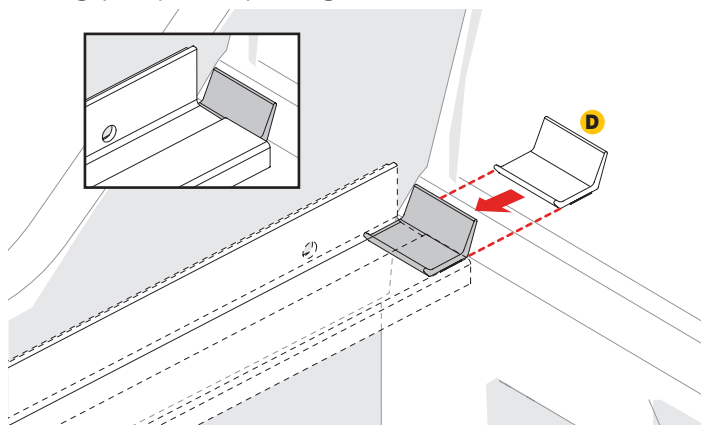

- 4 Fasten the driver side mounting rail (I) to the inside of the pickup bed using the supplied BHCS M8x50mm (F) and a 5/16" Washer (G) for the front/cab hole and use the BHCS M6x40mm (E) and a 1/4" Washer (H) for the middle hole. Repeat for the passenger side mounting rail (J).


Make sure rail surface is clean. Remove paper tape from pad and stick the seal pad under the rail. **Note:** Seal may come already installed on rail.

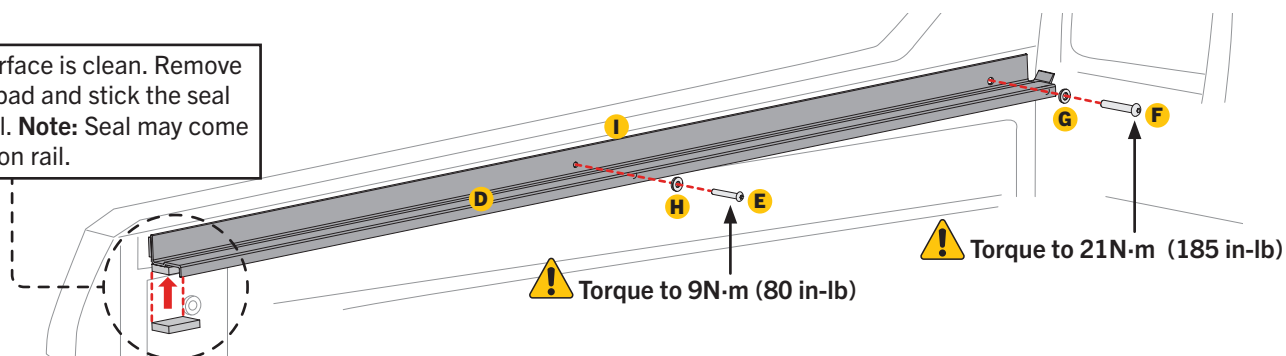


- 5** Place the assembled bed cover (A) over the cab end of the truck box.




- 6** Unfold the cover (A) fully and adjust the position over the truck bed for proper cab and tail alignment.

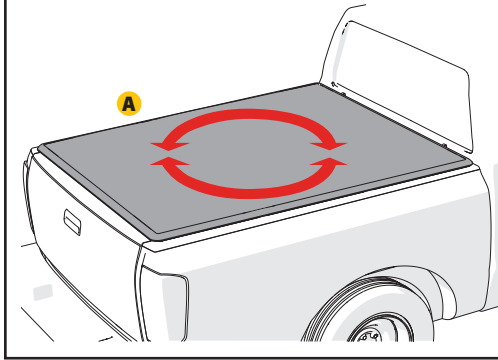


Then carefully refold the cover (A) without shifting its position on the truck bed.

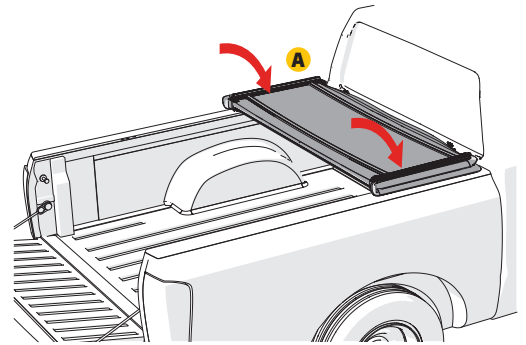


- 7** Ensure that the front clamp jaw is positioned under the mounting rail flange. Hand tighten until clamp jaw contacts the rail flange and then tighten two additional turns. **DO NOT** use a wrench or overtighten. 

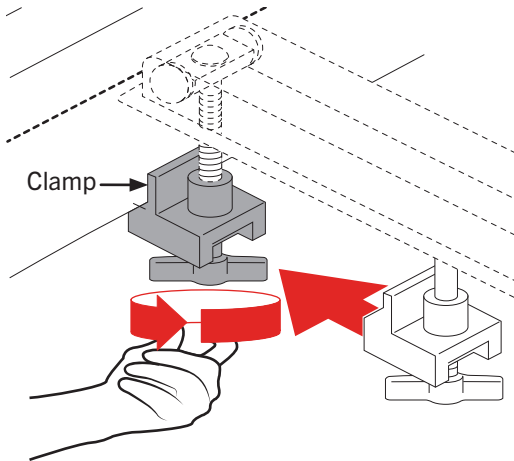


- 8** With the tailgate open and the front (cab) clamps secure, completely close the cover (A).

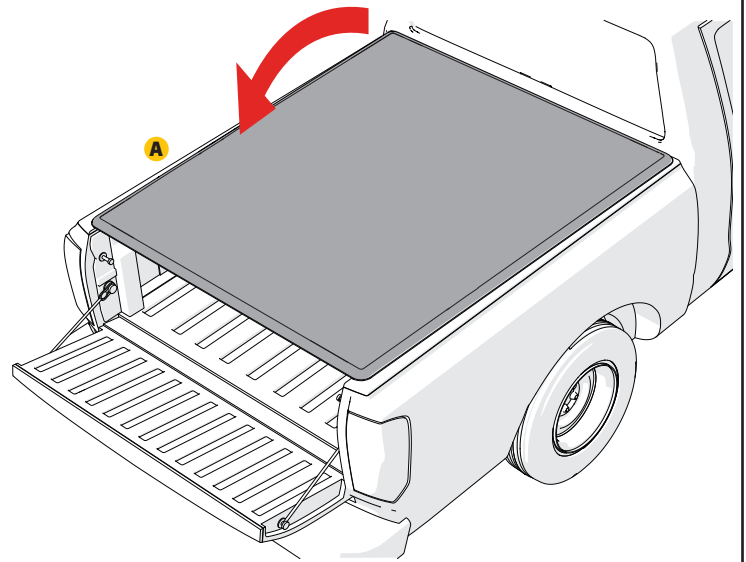

- 9** Slide the rear clamp out to the mounting rail. Pull the rear clamp handle down and hook the clamp jaw under the mounting rail flange and release the handle. 

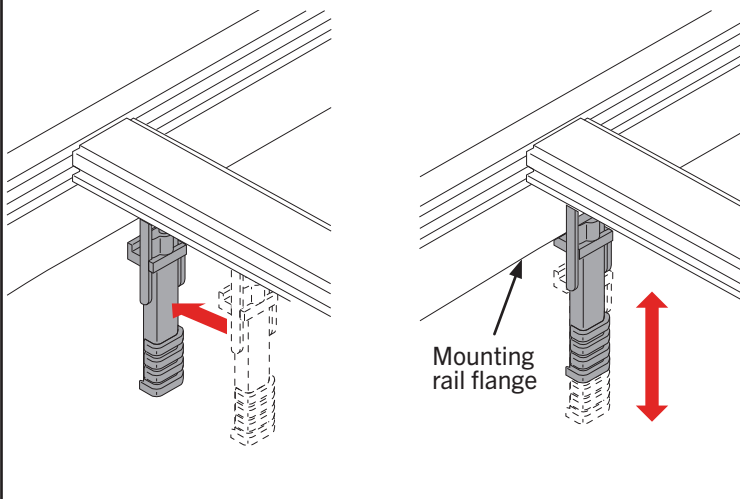


- 10** With the tailgate open and the front (cab) clamps secure, completely close the cover (A).

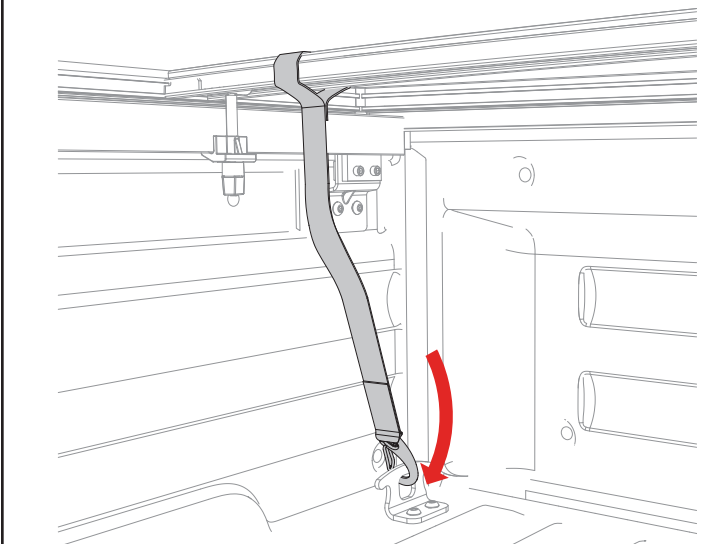


DRIVING WITH THE TONNEAU OPEN


Release the rear clamps and fold the cover forward.

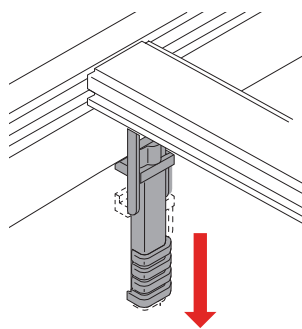

! IMPORTANT: Before folding the second section of the cover (A), the rear clamps must be stowed into the rail to prevent damage to the fabric. **Failure to stow the handles will puncture the tarp and void the warranty.**

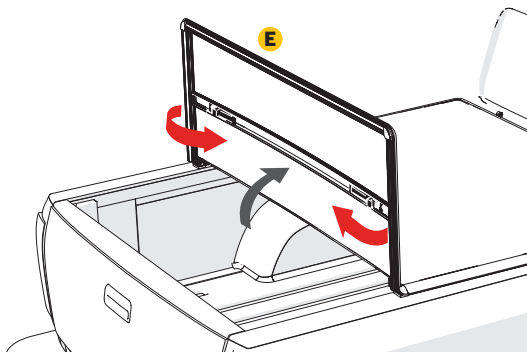

! Fold the tonneau forward and fasten the straps in the middle section to the front rail. Check that the straps are tight. Failure to do so could allow the wind to blow the cover back resulting in damage to the cover and truck.

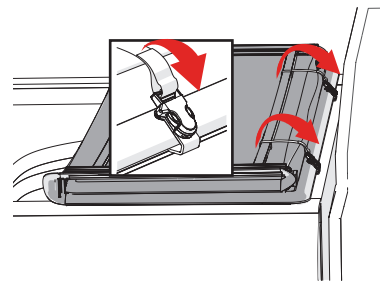


! IMPORTANT

Re-tighten the front/cab clamps and tethers after the first week of driving the vehicle. Also periodically check the clamps and tethers to ensure they are secure.

Closed/Extended Position – Bed cover must be completely secured by all four (4) clamps.

Open/Folded Position – Bed cover must be completely folded up (all panels) and secured at the cab with the provided buckles straps and with both tethers attached.

Do NOT drive with the bed cover in a partially open position.

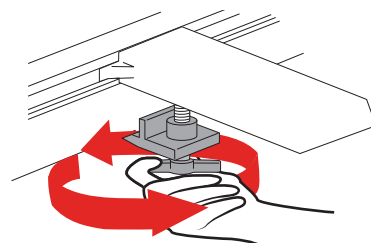

Do NOT allow the vehicle to be towed backwards without first removing the cover from the vehicle.



Remove any snow or foreign matter before folding the bed cover.

CARE AND MAINTENANCE

The truck bed cover requires occasional cleaning with mild automotive soap and water only. Avoid using abrasive cleaners as they may dull the finish. The cover can be treated with any vinyl protectant specifically made for tonneau covers.

CAUTION

Always read the ingredients of any product you are using to clean your truck bed cover. Do not use conditioners that contain silicone or petroleum.



Periodically check that the cover is securely attached to your truck bed and working as intended. Inspect the front and rear clamps. If applicable, inspect latches and mounting hardware to ensure they are properly installed and have not come loose during operation. Covers that are used frequently or are subject to vibrations and impacts from rough roadways may require adjustment.



SAFETY INSTRUCTIONS

- DO NOT place objects on or against cover or framework.
- DO NOT tie cargo to truck bed cover or framework.
- DO NOT operate vehicle with objects on top of the cover.
- NEVER allow children or pets to occupy the truck bed with the cover in the fully closed position.
- The cover is not airtight. Special care is required to keep cargo clean and dry.
- Truck bed covers will not prevent theft of contents inside the truck bed.
- DO NOT drive with the bed cover in a partially open position.

LIMITED WARRANTY

Thank you for purchasing a RealTruck Trifecta Max truck bed cover (the “**Product**”). RealTruck Enterprise, Inc. (“**Warrantor**”) is proud to have you as a customer and hopes you will be pleased with the years of service your Product provides. Please take a few moments to review the below warranty information, and be sure to complete the online warranty registration for your convenience in receiving warranty service, future promotions, and new product information.

The warranty contained on the information sheet accompanying the Product establishes the warranty terms applicable to the Product, and controls over any additional, different, or inconsistent terms that may be found on other products or on the RealTruck website.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Warranty Beneficiary

This warranty extends to the original purchaser of the Product warranted under this warranty (the “**Consumer**”). It does not extend to any subsequent owner or other transferee of the Product.

Warranty Coverage

This warranty covers the Product and each of its component parts, and warrants that they will be free from failure due to defects in materials or workmanship.

Warranty Duration

The term of this warranty begins on the date Product is purchased by the original purchaser or, if purchased other than in person, on the date Product is delivered to the original purchaser, and continues, as to each of the component parts listed below, for the following durations:

● Vinyl Material	10 Year
● Hardware (Clamps, Handles, Hinge Assemblies, Bracket Kits)	10 Year
● Rails and Crossbows	10 Year

The warranty duration is not extended by repair or replacement of the Product. Warrantor may change the availability or duration of this warranty at Warrantor’s discretion, but any subsequent changes will not be retroactive or apply to your Product.

Warranty Exclusions and Limitations

This warranty does not cover damage caused by misuse, abuse, or accident such as: neglect, lack of maintenance, care inconsistent with care instructions, normal wear and tear, vehicle alterations or additions (other than by an authorized RealTruck dealer or under direction of Warrantor), unauthorized repair, transportation, collision, off-road driving, use in competitive racing, vibrations from worn or altered suspension systems or sound equipment, and/or acts of nature including but not limited to tornados, hurricanes, hail, and earthquakes.

THERE ARE NO OTHER PRODUCT WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, WHICH EXTEND BEYOND THE ABOVE WARRANTY DURATIONS. SUCH WARRANTIES ARE DISCLAIMED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, THE CONSUMER IS LIMITED TO THE FOLLOWING RELIEF, AT WARRANTOR’S ELECTION: REPAIR, REPLACEMENT OF DEFECTIVE PART(S) BY AN AUTHORIZED REALTRUCK DEALER OR UNDER DIRECTION OF WARRANTOR, OR REFUND. WARRANTOR RESERVES THE RIGHT TO REPLACE ANY PART(S) WITH CURRENT PRODUCTION PART(S) OF EQUAL OR GREATER QUALITY AND VALUE.

WARRANTOR’S LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL COST OF REPAIRING OR REPLACING THE DEFECTIVE PART(S), NOR SHALL WARRANTOR UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL, OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Warranty Process

In-Store and Dealer Purchases: To seek warranty service for Products purchased in-store or through an authorized RealTruck dealer, Consumer may return the Product to the authorized RealTruck dealer from which Consumer purchased the Product. Consumer must present personal identification and proof of purchase of the Product. The authorized RealTruck dealer is responsible for processing Consumer warranty claims and coordinating with RealTruck regarding warranty service. If Consumer is unable to return the Product to the original authorized RealTruck dealer, Consumer may visit <https://realtruck.com/warranty-policies/> to contact RealTruck directly regarding warranty service.

Online Purchases: To seek warranty service for Products purchased online through www.realtruck.com, or Products purchased online through an authorized online retailer after the authorized online retailer's return period, Consumer must visit www.realtruck.com/warranty-policies/ and contact RealTruck using the "SUBMIT WARRANTY CLAIM" link. Consumer must provide proof of purchase of the Product.

Contact Us

If you have questions about this warranty, contact RealTruck online at <https://realtruck.com/contact-us/>, by phone at (866) 519-0675, or by mail at 5400 Data Court, Ann Arbor, MI 48108.

**REGISTER
YOUR
WARRANTY
ONLINE**

