 




FEL-PRO INSTALLATION TIPS

VALVE STEM SEALS



Positive
Intake



"O" Ring
Intake & Exhaust

Use the valve stem seals included in this set for the applications indicated.

REMOVE SPRING ASSEMBLIES, KEEPERS and the old valve stem seals.

REMOVE BURRS (IF ANY) FROM VALVE STEMS. Use a fine stone or crocus cloth. Clean stems thoroughly to remove all abrasives or dust particles. Lubricate lightly.

INSTALL NEW SEALS.

POSITIVE GUIDE SEAL: Use the plastic installation sleeve(s), included in this set, to prevent damage to the lip of the seal. Trim the plastic sleeve so it extends 1/16" below the keeper groove. Place the sleeve on the stem.

Carefully start valve stem seal over sleeve. Remove plastic installation sleeve and reuse for installing remaining seals.

REPLACE VALVE SPRING ASSEMBLIES AND INSTALL "O" RINGS. Compress springs just enough to install "O" Ring seal in second groove. **IMPORTANT:** If other types of seals are also being used, excessive compression can result in spring retainer damaging the seals. Install "O" Ring seal, then install keepers in first groove. Release spring carefully.

©2005 Federal-Mogul Corporation
Form No. I-1239 (Rev. 03/05)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

VALVE STEM SEALS



Positive
Intake



"O" Ring
Intake & Exhaust

Use the valve stem seals included in this set for the applications indicated.

REMOVE SPRING ASSEMBLIES, KEEPERS and the old valve stem seals.

REMOVE BURRS (IF ANY) FROM VALVE STEMS. Use a fine stone or crocus cloth. Clean stems thoroughly to remove all abrasives or dust particles. Lubricate lightly.

INSTALL NEW SEALS.

POSITIVE GUIDE SEAL: Use the plastic installation sleeve(s), included in this set, to prevent damage to the lip of the seal. Trim the plastic sleeve so it extends 1/16" below the keeper groove. Place the sleeve on the stem.

Carefully start valve stem seal over sleeve. Remove plastic installation sleeve and reuse for installing remaining seals.

REPLACE VALVE SPRING ASSEMBLIES AND INSTALL "O" RINGS. Compress springs just enough to install "O" Ring seal in second groove. **IMPORTANT:** If other types of seals are also being used, excessive compression can result in spring retainer damaging the seals. Install "O" Ring seal, then install keepers in first groove. Release spring carefully.

©2005 Federal-Mogul Corporation
Form No. I-1239 (Rev. 03/05)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

VALVE STEM SEALS



Positive
Intake



"O" Ring
Intake & Exhaust

Use the valve stem seals included in this set for the applications indicated.

REMOVE SPRING ASSEMBLIES, KEEPERS and the old valve stem seals.

REMOVE BURRS (IF ANY) FROM VALVE STEMS. Use a fine stone or crocus cloth. Clean stems thoroughly to remove all abrasives or dust particles. Lubricate lightly.

INSTALL NEW SEALS.

POSITIVE GUIDE SEAL: Use the plastic installation sleeve(s), included in this set, to prevent damage to the lip of the seal. Trim the plastic sleeve so it extends 1/16" below the keeper groove. Place the sleeve on the stem.

Carefully start valve stem seal over sleeve. Remove plastic installation sleeve and reuse for installing remaining seals.

REPLACE VALVE SPRING ASSEMBLIES AND INSTALL "O" RINGS. Compress springs just enough to install "O" Ring seal in second groove. **IMPORTANT:** If other types of seals are also being used, excessive compression can result in spring retainer damaging the seals. Install "O" Ring seal, then install keepers in first groove. Release spring carefully.

©2005 Federal-Mogul Corporation
Form No. I-1239 (Rev. 03/05)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

VALVE STEM SEALS



Positive
Intake



"O" Ring
Intake & Exhaust

Use the valve stem seals included in this set for the applications indicated.

REMOVE SPRING ASSEMBLIES, KEEPERS and the old valve stem seals.

REMOVE BURRS (IF ANY) FROM VALVE STEMS. Use a fine stone or crocus cloth. Clean stems thoroughly to remove all abrasives or dust particles. Lubricate lightly.

INSTALL NEW SEALS.

POSITIVE GUIDE SEAL: Use the plastic installation sleeve(s), included in this set, to prevent damage to the lip of the seal. Trim the plastic sleeve so it extends 1/16" below the keeper groove. Place the sleeve on the stem.

Carefully start valve stem seal over sleeve. Remove plastic installation sleeve and reuse for installing remaining seals.

REPLACE VALVE SPRING ASSEMBLIES AND INSTALL "O" RINGS. Compress springs just enough to install "O" Ring seal in second groove. **IMPORTANT:** If other types of seals are also being used, excessive compression can result in spring retainer damaging the seals. Install "O" Ring seal, then install keepers in first groove. Release spring carefully.

 
©2005 Federal-Mogul Corporation
Form No. I-1239 (Rev. 03/05)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

VALVE STEM SEALS



Positive
Intake



"O" Ring
Intake & Exhaust

Use the valve stem seals included in this set for the applications indicated.

REMOVE SPRING ASSEMBLIES, KEEPERS and the old valve stem seals.

REMOVE BURRS (IF ANY) FROM VALVE STEMS. Use a fine stone or crocus cloth. Clean stems thoroughly to remove all abrasives or dust particles. Lubricate lightly.

INSTALL NEW SEALS.

POSITIVE GUIDE SEAL: Use the plastic installation sleeve(s), included in this set, to prevent damage to the lip of the seal. Trim the plastic sleeve so it extends 1/16" below the keeper groove. Place the sleeve on the stem.

Carefully start valve stem seal over sleeve. Remove plastic installation sleeve and reuse for installing remaining seals.

REPLACE VALVE SPRING ASSEMBLIES AND INSTALL "O" RINGS. Compress springs just enough to install "O" Ring seal in second groove. **IMPORTANT:** If other types of seals are also being used, excessive compression can result in spring retainer damaging the seals. Install "O" Ring seal, then install keepers in first groove. Release spring carefully.

©2005 Federal-Mogul Corporation
Form No. I-1239 (Rev. 03/05)

Printed in U.S.A.



FEL-PRO INSTALLATION TIPS

VALVE STEM SEALS



Positive
Intake



"O" Ring
Intake & Exhaust

Use the valve stem seals included in this set for the applications indicated.

REMOVE SPRING ASSEMBLIES, KEEPERS and the old valve stem seals.

REMOVE BURRS (IF ANY) FROM VALVE STEMS. Use a fine stone or crocus cloth. Clean stems thoroughly to remove all abrasives or dust particles. Lubricate lightly.

INSTALL NEW SEALS.

POSITIVE GUIDE SEAL: Use the plastic installation sleeve(s), included in this set, to prevent damage to the lip of the seal. Trim the plastic sleeve so it extends 1/16" below the keeper groove. Place the sleeve on the stem.

Carefully start valve stem seal over sleeve. Remove plastic installation sleeve and reuse for installing remaining seals.

REPLACE VALVE SPRING ASSEMBLIES AND INSTALL "O" RINGS. Compress springs just enough to install "O" Ring seal in second groove. **IMPORTANT:** If other types of seals are also being used, excessive compression can result in spring retainer damaging the seals. Install "O" Ring seal, then install keepers in first groove. Release spring carefully.

©2005 Federal-Mogul Corporation
Form No. I-1239 (Rev. 03/05)

Printed in U.S.A.