



 
FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.


INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.


CHECK MANIFOLD CASTINGS for flatness of gasket surface. Resurface or replace if severely distorted or corroded.

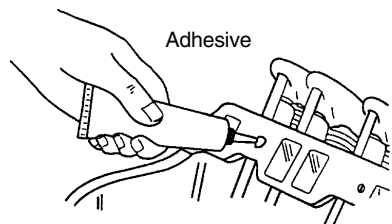

 ATTACH AND ALIGN GASKET(S) TO CYLINDER HEAD(S). Apply quick-drying adhesive, sparingly in several places on the cylinder heads. Mount gasket(s) on cylinder head(s). **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

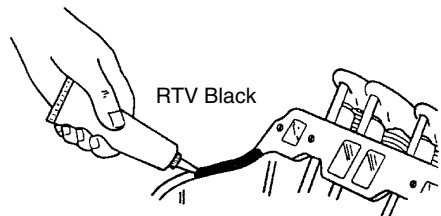

 CREATE INTAKE MANIFOLD END SEALS by applying a continuous 3/16" bead of silicon sealer, such as RTV Black, across the front and rear ends of the cylinder block, from one cylinder head to the other.

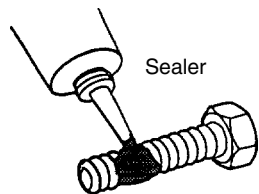

REINSTALL INTAKE MANIFOLD TO ENGINE while RTV is still wet. **IMPORTANT:** The bolts attaching the manifold to the heads should be coated with a thread locking sealer. Torque securely to OEM specifications.



 
FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.


INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.


CHECK MANIFOLD CASTINGS for flatness of gasket surface. Resurface or replace if severely distorted or corroded.

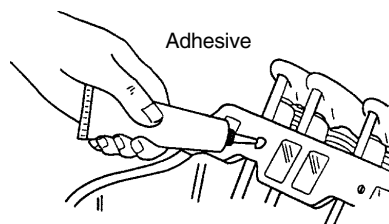

 ATTACH AND ALIGN GASKET(S) TO CYLINDER HEAD(S). Apply quick-drying adhesive, sparingly in several places on the cylinder heads. Mount gasket(s) on cylinder head(s). **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

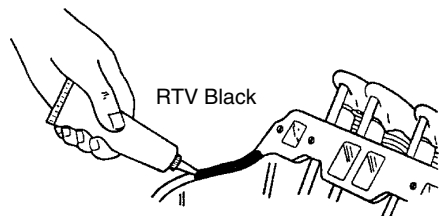

 CREATE INTAKE MANIFOLD END SEALS by applying a continuous 3/16" bead of silicon sealer, such as RTV Black, across the front and rear ends of the cylinder block, from one cylinder head to the other.

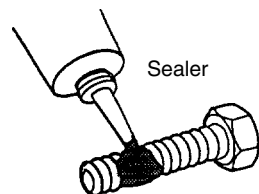

REINSTALL INTAKE MANIFOLD TO ENGINE while RTV is still wet. **IMPORTANT:** The bolts attaching the manifold to the heads should be coated with a thread locking sealer. Torque securely to OEM specifications.



 
FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.


INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.


CHECK MANIFOLD CASTINGS for flatness of gasket surface. Resurface or replace if severely distorted or corroded.

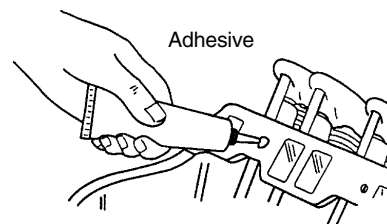

 ATTACH AND ALIGN GASKET(S) TO CYLINDER HEAD(S). Apply quick-drying adhesive, sparingly in several places on the cylinder heads. Mount gasket(s) on cylinder head(s). **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

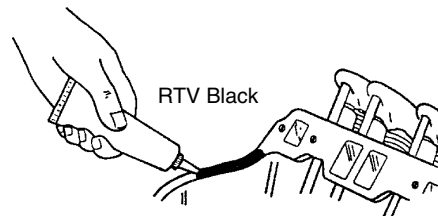

 CREATE INTAKE MANIFOLD END SEALS by applying a continuous 3/16" bead of silicon sealer, such as RTV Black, across the front and rear ends of the cylinder block, from one cylinder head to the other.

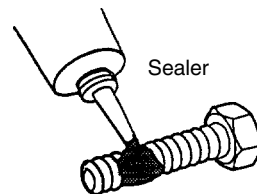

REINSTALL INTAKE MANIFOLD TO ENGINE while RTV is still wet. **IMPORTANT:** The bolts attaching the manifold to the heads should be coated with a thread locking sealer. Torque securely to OEM specifications.



 
FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.


INTAKE MANIFOLD GASKET

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.


CHECK MANIFOLD CASTINGS for flatness of gasket surface. Resurface or replace if severely distorted or corroded.

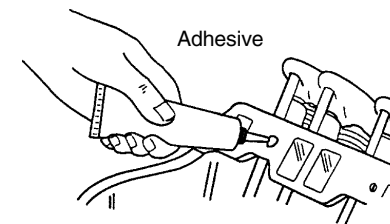

 ATTACH AND ALIGN GASKET(S) TO CYLINDER HEAD(S). Apply quick-drying adhesive, sparingly in several places on the cylinder heads. Mount gasket(s) on cylinder head(s). **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

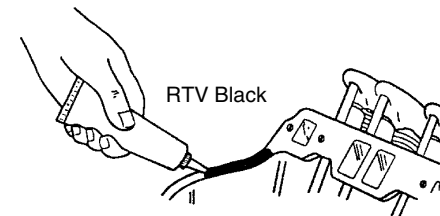

 CREATE INTAKE MANIFOLD END SEALS by applying a continuous 3/16" bead of silicon sealer, such as RTV Black, across the front and rear ends of the cylinder block, from one cylinder head to the other.

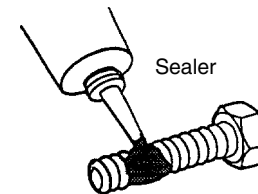

REINSTALL INTAKE MANIFOLD TO ENGINE while RTV is still wet. **IMPORTANT:** The bolts attaching the manifold to the heads should be coated with a thread locking sealer. Torque securely to OEM specifications.