



FEL-PRO INSTALLATION TIPS

OIL PUMP

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

CREATE GASKET by applying a continuous 1/8"-3/16" bead of silicone sealer to the mating surface of the cover. When cover is positioned, avoid wiping off the sealer.

REINSTALL COVERTO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.



FEL-PRO INSTALLATION TIPS

OIL PUMP

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

CREATE GASKET by applying a continuous 1/8"-3/16" bead of silicone sealer to the mating surface of the cover. When cover is positioned, avoid wiping off the sealer.

REINSTALL COVERTO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.



FEL-PRO INSTALLATION TIPS

OIL PUMP

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

CREATE GASKET by applying a continuous 1/8"-3/16" bead of silicone sealer to the mating surface of the cover. When cover is positioned, avoid wiping off the sealer.

REINSTALL COVERTO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.



FEL-PRO INSTALLATION TIPS

OIL PUMP

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

CREATE GASKET by applying a continuous 1/8"-3/16" bead of silicone sealer to the mating surface of the cover. When cover is positioned, avoid wiping off the sealer.

REINSTALL COVER TO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.



FEL-PRO INSTALLATION TIPS

OIL PUMP

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

CREATE GASKET by applying a continuous 1/8"-3/16" bead of silicone sealer to the mating surface of the cover. When cover is positioned, avoid wiping off the sealer.

REINSTALL COVER TO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.



FEL-PRO INSTALLATION TIPS

OIL PUMP

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

CREATE GASKET by applying a continuous 1/8"-3/16" bead of silicone sealer to the mating surface of the cover. When cover is positioned, avoid wiping off the sealer.

REINSTALL COVER TO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.

