⚠ IMPORTANT

READ BEFORE YOU BEGIN INSTALLATION

IT IS CRITICAL FOR YOUR SAFETY THAT YOU CAREFULLY READ AND FOLLOW THE SAFETY CAUTIONS AND INSTALLATION INSTRUCTIONS BOTH PRIOR TO AND DURING INSTALLATION.

USER SAFETY CAUTION

During installation, be mindful of the potential for sharp edges on the product or vehicle. Taking proper safety precautions helps ensure a safe and smooth installation process.

Always wear protective gloves and handle components with care to reduce the risk of injury.



TEMPERATURE SURFACE CAUTION

During high temperatures or extended sun exposure, surfaces of this product may become hot to the touch, posing a risk of burns or injury. Use caution when handling the product in hot weather and allow time for it to cool before contact.


Always check surface temperature before use to ensure safe handling conditions.



FASTENER TORQUE CAUTION

All fasteners must be tightened to the specified torque values provided in the installation instructions to ensure proper fit and safe operation of the tonneau cover. Under- or over-tightening can lead to product failure, potential damage to your vehicle, injury, or safety hazards while driving.

Always use a calibrated torque wrench and follow the specifications in the installation instructions.

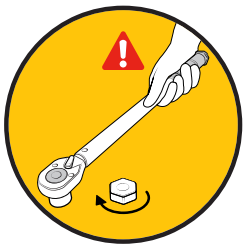

PINCH POINT SAFETY CAUTION

This tonneau cover may create pinch points when closing or operating near solid surfaces such as the truck bed rails or tailgate. To prevent injury, keep hands, fingers, and other body parts clear of moving parts during operation.

Always operate the cover slowly and with caution to ensure safe and proper use.



RealTruck Extang Corporation
5400 S. State Road, Ann Arbor, MI 48108
800-877-2588 ©RealTruck Group, Inc., 2026

3 1 8 0 0 0 0 1 - 3 0

Part# 31800001-30 Rev. 11-2-26

⚠ IMPORTANT


READ BEFORE YOU BEGIN INSTALLATION

IT IS CRITICAL FOR YOUR SAFETY THAT YOU CAREFULLY READ AND FOLLOW THE SAFETY CAUTIONS AND INSTALLATION INSTRUCTIONS BOTH PRIOR TO AND DURING INSTALLATION.

ENTRAPMENT SAFETY WARNING

This tonneau cover does not feature a manual release mechanism from inside the truck bed. To prevent the risk of entrapment, never allow anyone to be inside the bed of the truck when the cover is closed.

Always ensure the area is clear before closing the cover, and keep the cover securely latched when not in use to avoid accidental closure.

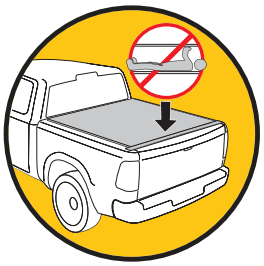


CARGO TRANSPORT WARNING

Do not attempt to close the tonneau cover over cargo that is taller than the depth of the truck bed.

Never force the cover to close improperly.

Forcing the cover can:

- **Prevent the cover from lying flat and latching securely.**
- **Damage the cover's hinge and cause the cover to kink.**
- **Damage the rear tail panel and cause it to become detached.**

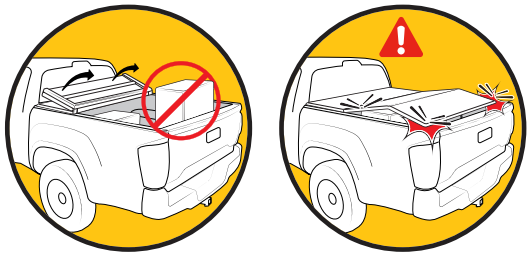


 ©RealTruck Group, Inc., 2026

REALTRUCK extang

ENDURE ALX
INSTALLATION SHEET

Any damaged or missing parts?
Parts will be shipped to you directly.
Call 800-877-2588, Mon - Fri, 8:30 a.m. - 6:00 p.m. EST

NOTE: It is important that all the areas where the bed cover mounts to the truck are clean and free of debris before installation.

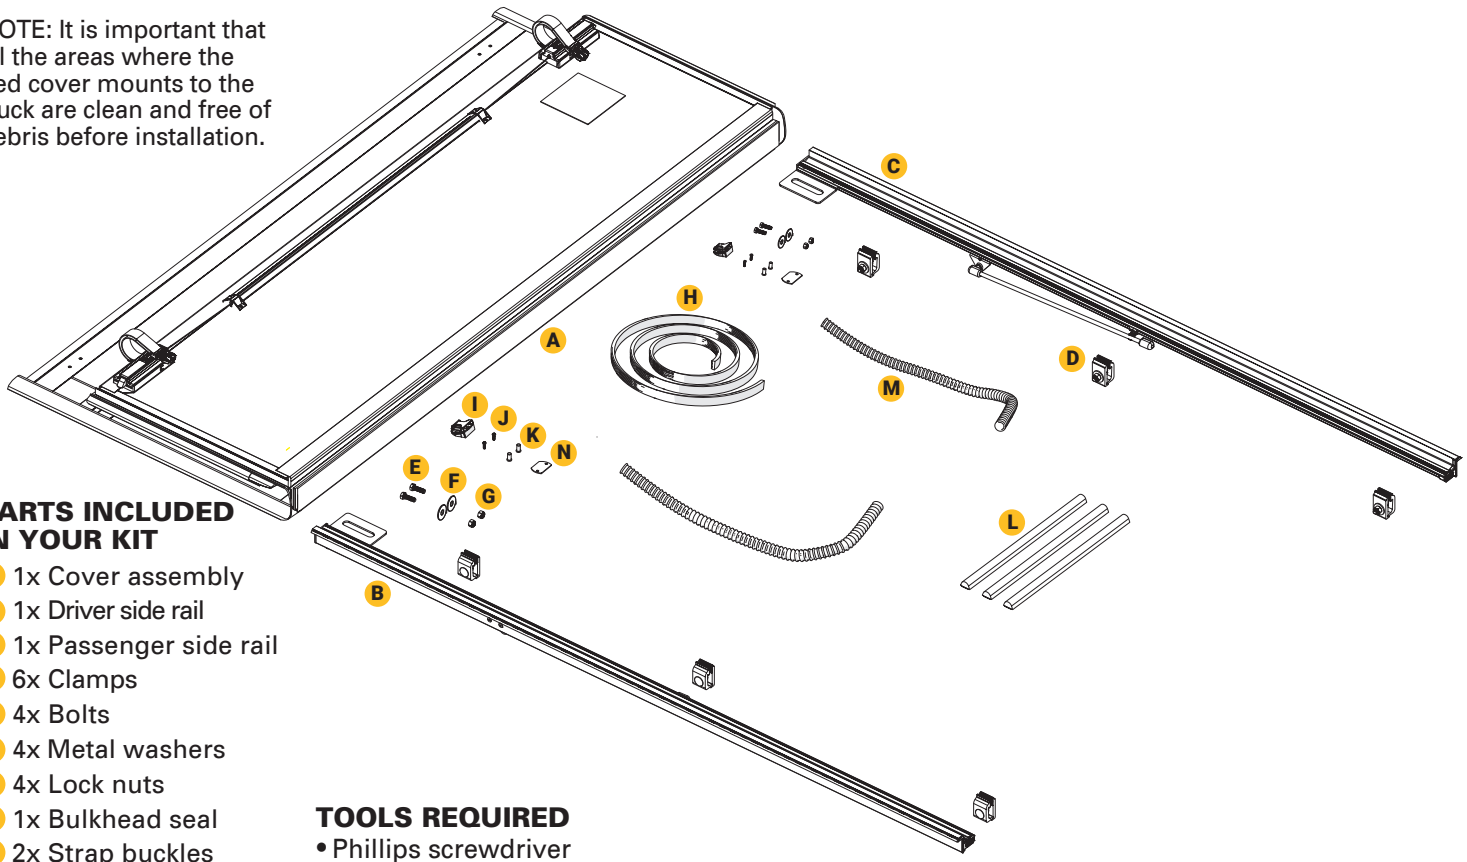


PARTS INCLUDED IN YOUR KIT


- A 1x Cover assembly
- B 1x Driver side rail
- C 1x Passenger side rail
- D 6x Clamps
- E 4x Bolts
- F 4x Metal washers
- G 4x Lock nuts
- H 1x Bulkhead seal
- I 2x Strap buckles
- J 4x Screws
- K 4x Threaded inserts
- L 3x Cab bumpers
- M 2x Drain hoses
- N 2x Gaskets

TOOLS REQUIRED


- Phillips screwdriver
- Rachet wrench
- Knife or cutting tool
- Torx wrench
- Socket or wrench - 1/2"
- Socket or wrench - 9/16"
- Isopropyl alcohol

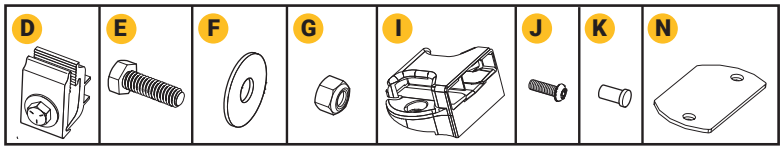

1 If the truck does NOT have a bedliner, install the cab/bulkhead seal (H). Clean the area where the seal will go, as shown, with soap and water to remove dirt and debris. Then clean the same area with isopropyl alcohol to remove wax or grease and to evaporate any remaing water. Allow the surface to dry, then position the seal at the leading edge of the bulkhead. Apply pressure to the entire seal to make sure the adhesion is good. **If the truck DOES have a bedliner, proceed to step 2.**

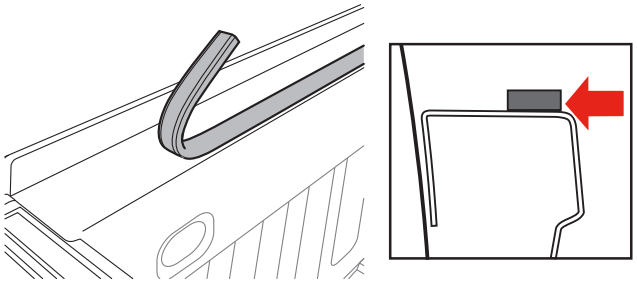

2A Place the passenger side rail (C) on the truckbed rail with the slotted bracket towards the cab/front and facing inside. With the rail firmly placed up to the bulkhead, check that the rail end does not interfere with closing the tailgate. **NOTE:** If the rail end interferes with closing the tailgate and there is a bedliner, trimming a notch in the bedliner with a knife or cutting tool is required.

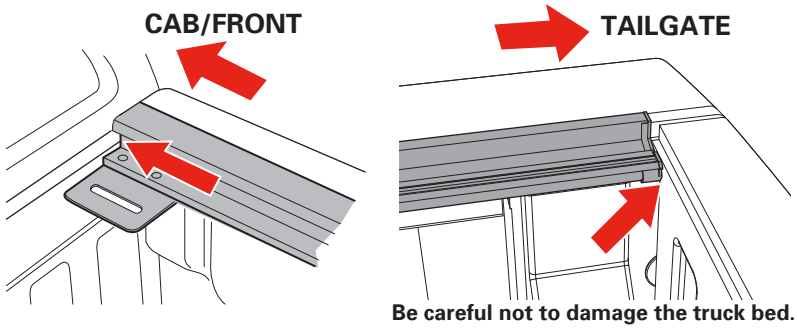


Be careful not to damage the truck bed.

RealTruck Extang Corporation
5400 S. State Road, Ann Arbor, MI 48108
800-877-2588 ©RealTruck Group, Inc., 2026


3 1 8 0 0 0 0 1 - 3 0

Part# 31800001-30 Rev. 11-2-26


2B Trim the bedliner in the corner at the bulkhead near the slotted bracket on both sides, using a knife or cutting tool.

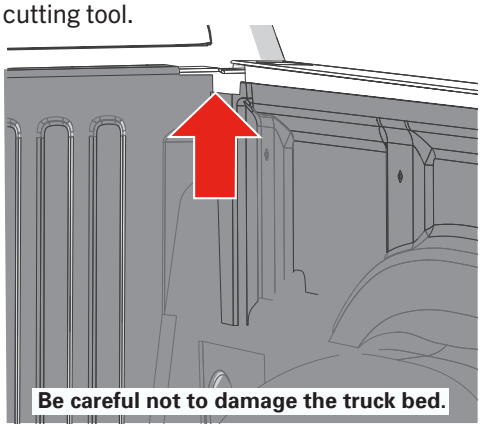


3 Make sure the rail is positioned square with the truck bed rail and firmly pressed to the bulkhead. Start with the middle clamp (D) and place it in the center of the rail. Tighten the bolt enough to hold the clamp in place. Make sure the clamp is inserted all the way up into the rail and that the clamp teeth are aligned to the rail slots to ensure a good grip.

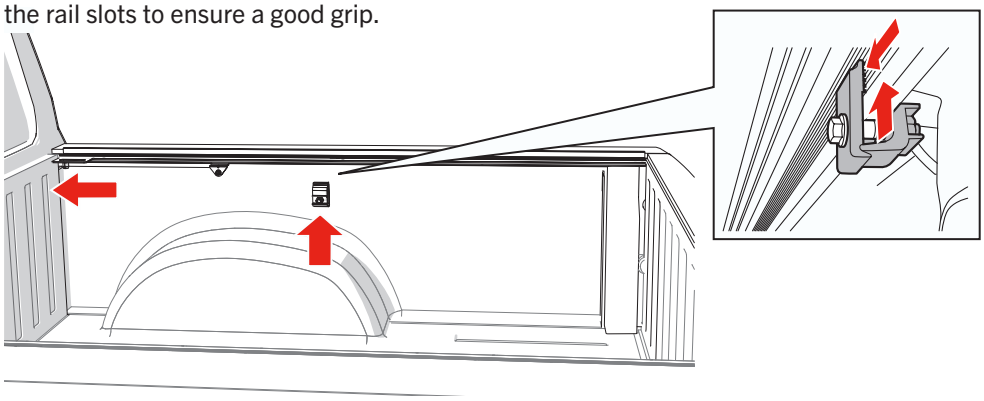


4 Continue to make sure the rail is clamped square with the truck bed rail and pressed firmly to the bulkhead. Install a front clamp (D) As far forward as you can.

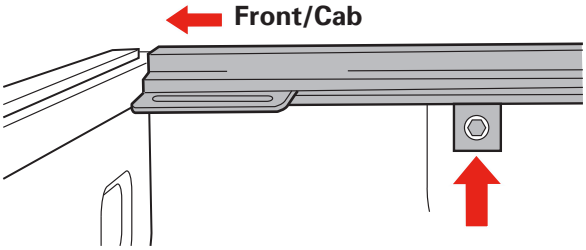


5 Place the rear clamp (D) As far rearward as you can.

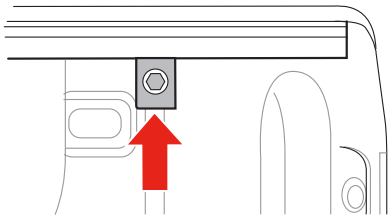


6 Tighten the clamps (D)starting with the middle, then the front and rear. Always apply downward pressure to the rail when tightening to ensure that the rail sits flush and seals properly. **Repeat steps 2 - 6 for the driver side rail (B).**

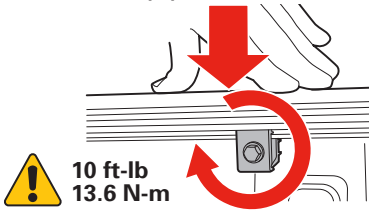


7 It is recommended that two people set the cover assembly (A) in its folded position with the cab panel at the front onto the truck bed. Be careful not to damage any seals.

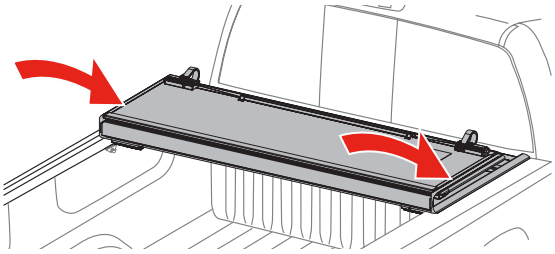


8 Install the two strap buckles (I) into the pre-drilled holes on the front/cab panel. Lift the panel and insert the threaded inserts (K) from the bottom, then thread the screws (J) down through the buckle end. Use a screwdriver and hand tighten.
Do not over-tighten and do not use a screw gun.

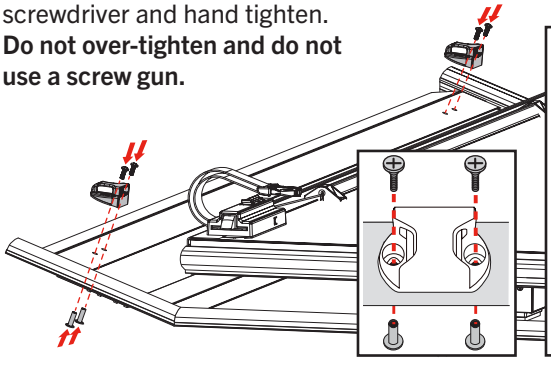


First, prep the buckle ends (I) by peeling off the adhesive liner of the gasket (N).



Then adhere the gasket to the underside of each of the buckle ends.

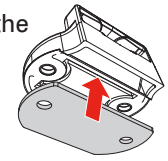


9 At the front/cab, fold the cab panel back and insert two mounting bolts (E) through the keyed slots on each side. When closed, the two bolts need to be aligned with the slotted bracket of the cover rails.

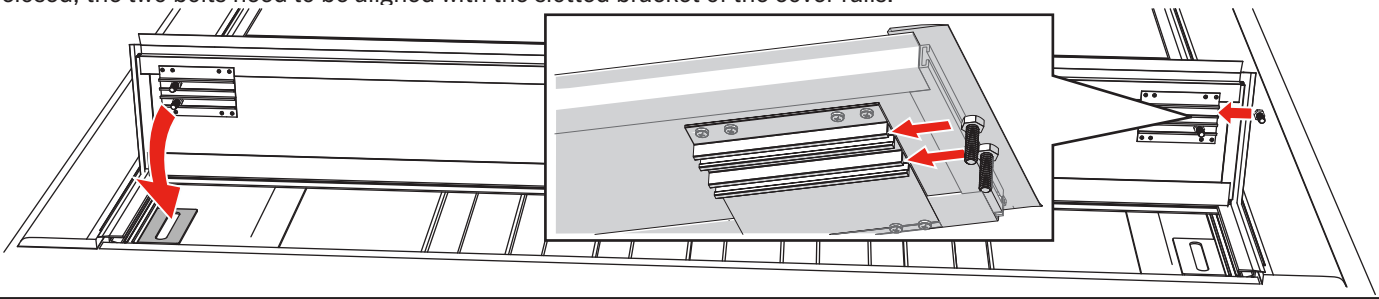



10 Install the mounting hardware underneath the slotted bracket on the rail. Start with the metal washer(F),then the nylon lock nut (G). Install two of each on each rail.

Leave the nuts snug, not tightened, for later adjustments.

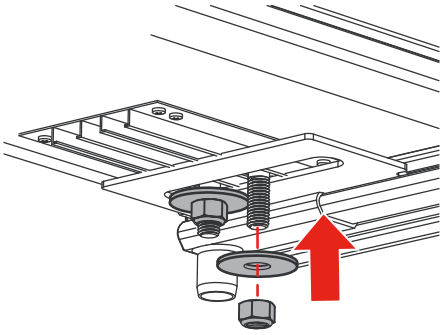


11 Unfold the cover (A) toward the tailgate. Made sure the cover fits squrely and evenly between the rails. While closing the cover, ensure that the latches on each panel engage properly with the rails. Move the cover gently side to side to ensure even latch engagement.

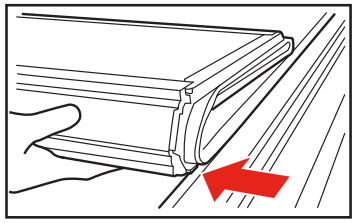


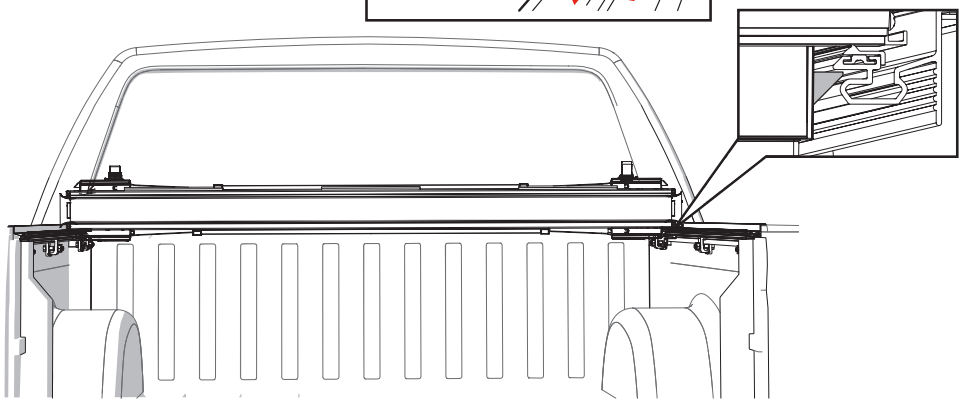


12 The cover's aluminum frame should fit just inside the tailgate, within 1/4" (6.4 mm) when the cover (A) is properly positioned. Also the rear edge of the cover and tailgate seal should rest on top of the tailgate.

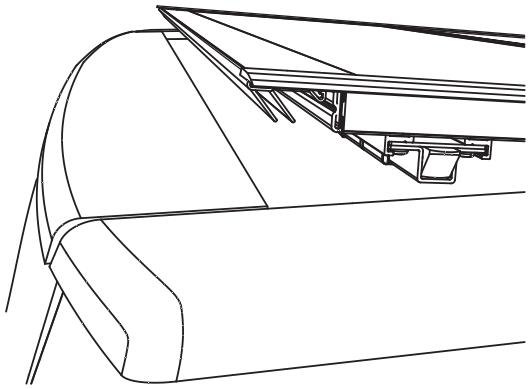

13 With the cover (A) fully closed, check that the cover panel latches on both sides make proper contact with the side rails. Adjust the cover left to right so that both latches have equal engagement into the side rails.

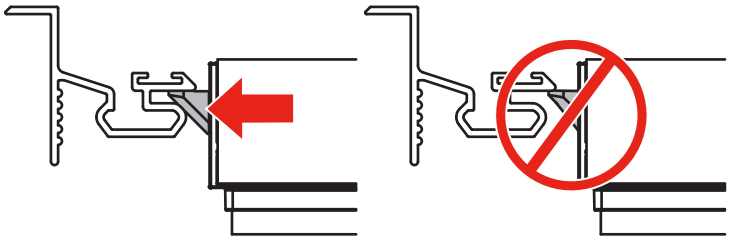


14 The cover's aluminum frame should fit just inside the tailgate, within 1/4" (6.4 mm) when the cover (A) is properly positioned. Also the rear edge of the cover and tailgate seal should rest on top of the tailgate.

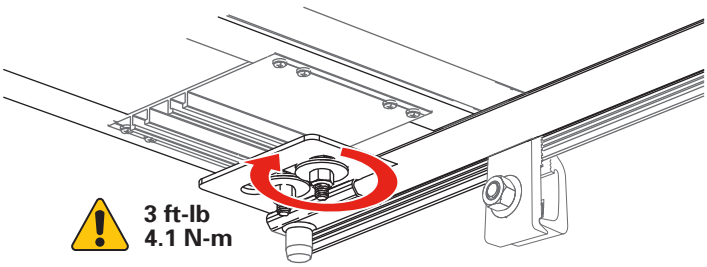


 ©RealTruck Group, Inc., 2026

15 Check for tail panel latch engagement. Check to see that both tail panel latches make proper contact with the side rails. If the tail panel latches do not contact properly, you can manually adjust the latch positions. Remove the small panel screw and slide the end cover off of the latch assembly. Loosen the latch screws (remove and tighten screws by hand only)and slide the latch pall assembly to contact the rail. Check and adjust on both sides. Tighten the screws and replace the cover and cover screw. **Ensure that the latch base does not move.**

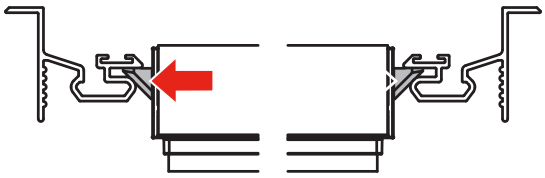


Proper engagement at both sides

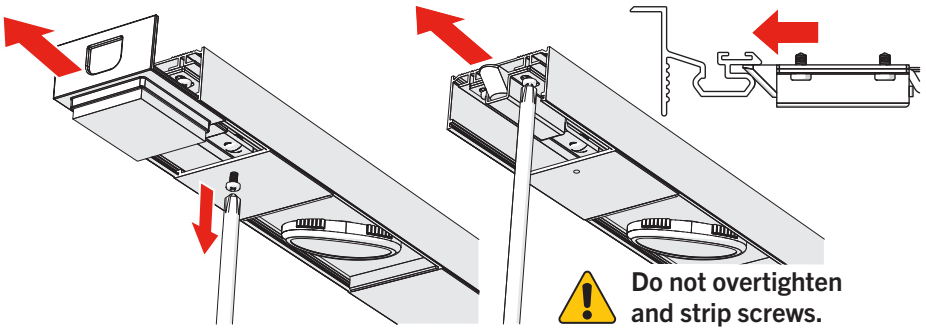



Do not overtighten and strip screws.

16 Attach the drain hoses (M) to the front drains and route the hose through the manufacturer bed plugs. Remove the plug or drill a 7/8" (22.3mm) hole in the bed plug. Install hoses on both sides. The hoses may have to run behind a drop-in bed liner.

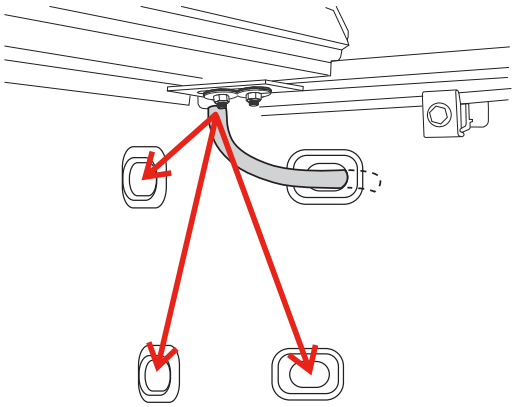


17 Clean the area where the cab bumpers (L) will go with soap and water to remove dirt and debris. Then clean the area with isopropyl alcohol to remove wax or grease and to evaporate any remaining water. Allow the surface to dry. Peel the backing off and position the cab bumpers on the underside of the cover. Position the bumpers so that they prevent the cover from contacting the cab. Position the outer bumpers no closer than 1" (25mm) from the outside edge of the panel, as shown. Apply pressure to the entire bumper to make sure the adhesion is good.

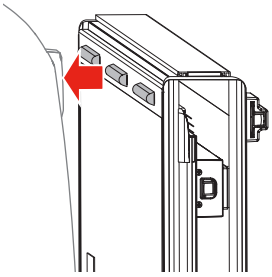

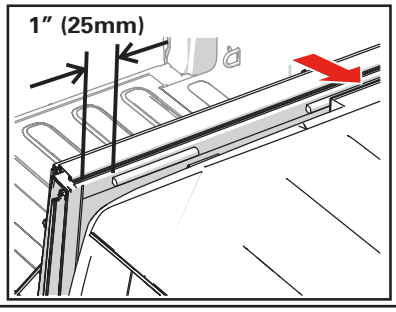

Opening the cover


Open the tailgate and reach under the driver's side of the tail panel for the rotary handle. Rotate the handle to release both latches. Lift the panel to open. The remaining panels open by pulling on the cable under each panel.

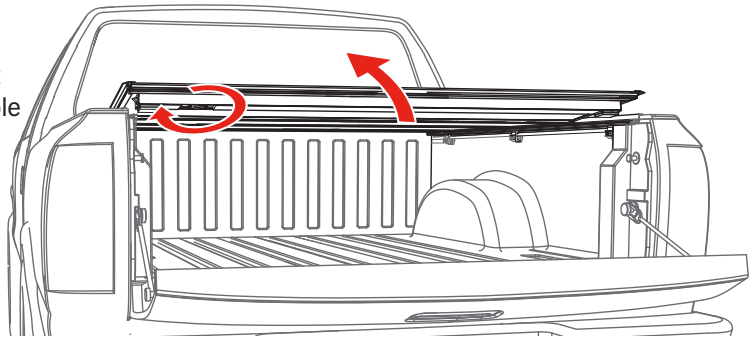

Folded Up


Use the tie down straps and buckles provided with your cover. Ensure that BOTH buckle clips are fully inserted into the buckle ends located on the front header panel of the cover. Adjust the straps to ensure the cover is secure during vehicle operation. The clips should be stored in the storage position under the clip as shown in Figure 1 when the straps are not in use.

Strap Storage Position - **Figure 1**

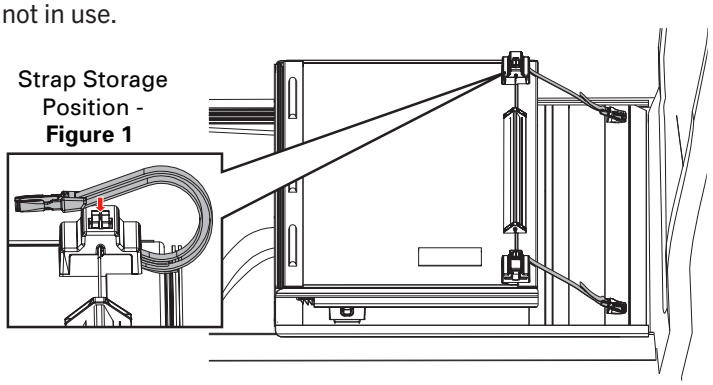


Flipped Up


Fold the cover open and lift it until it is vertical, or 90 degrees. Release the prop rods from the rail clips and engage the end of the prop rod with the ball fitting of the cover bracket. **Always engage both sides.** Your cover should be firmly in position with little to no movement once the prop rods are locked.

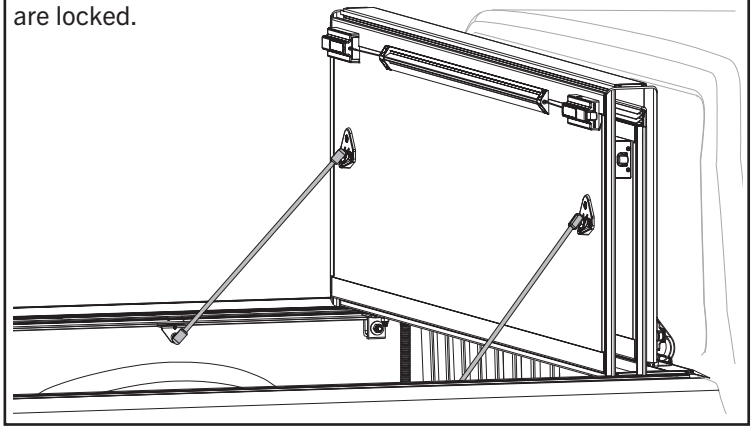


Adjusted Slam Latch

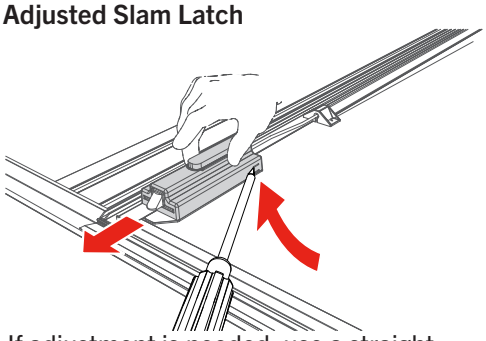

If adjustment is needed, use a straight screwdriver to partially pry open the tab on the latch housing. At the same time slide the housing away from the latch assembly.

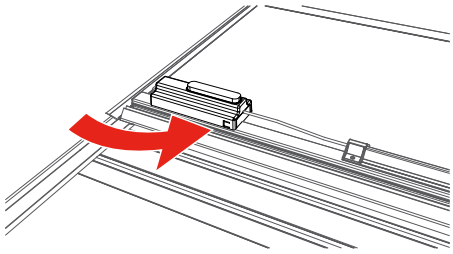

Note: The tab is located on the opposite side of the housing on the passenger side of the cover.

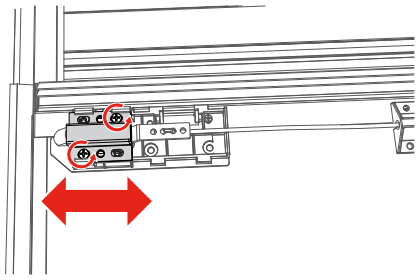

With the latch cover removed, loosen the screws and move the latch bracket to adjust. **Re-tighten the screws to 11 in-lbs** and slide the housing back on.


IMPORTANT

Re-tighen ALL clamps after the first week of driving the vehicle. Also periodically check ALL clamps to ensure they are secure.

While driving, the cover must be completely flat and secure with all latches in the closed position OR completely folded up (all panels) and secured at the cab with both buckles or both prop rods.

DO NOT DRIVE with the cover partially opened.





 ©RealTruck Group, Inc., 2026

WARRANTY INFORMATION

For warranty information and registration, scan the QR code or visit https://realtruck.com/warranty-policies/

WARRANTY INFORMATION & REGISTRATION

INSTALLATION INSTRUCTIONS

For a digital copy of your installation guide, scan the QR code or visit https://realtruck.com/installation-instructions/

DIGITAL INSTRUCTIONS

 ©RealTruck Group, Inc., 2026 Part# 31800001-30 Rev. 11-2-26