⚠ IMPORTANT

READ BEFORE YOU BEGIN INSTALLATION

IT IS CRITICAL FOR YOUR SAFETY THAT YOU CAREFULLY READ AND FOLLOW THE SAFETY CAUTIONS AND INSTALLATION INSTRUCTIONS BOTH PRIOR TO AND DURING INSTALLATION.

USER SAFETY CAUTION

During installation, be mindful of the potential for sharp edges on the product or vehicle. Taking proper safety precautions helps ensure a safe and smooth installation process.

Always wear protective gloves and handle components with care to reduce the risk of injury.



TEMPERATURE SURFACE CAUTION

During high temperatures or extended sun exposure, surfaces of this product may become hot to the touch, posing a risk of burns or injury. Use caution when handling the product in hot weather and allow time for it to cool before contact.


Always check surface temperature before use to ensure safe handling conditions.



FASTENER TORQUE CAUTION

All fasteners must be tightened to the specified torque values provided in the installation instructions to ensure proper fit and safe operation of the tonneau cover. Under- or over-tightening can lead to product failure, potential damage to your vehicle, injury, or safety hazards while driving.

Always use a calibrated torque wrench and follow the specifications in the installation instructions.

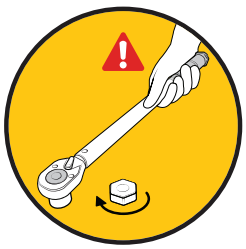

PINCH POINT SAFETY CAUTION

This tonneau cover may create pinch points when closing or operating near solid surfaces such as the truck bed rails or tailgate. To prevent injury, keep hands, fingers, and other body parts clear of moving parts during operation.

Always operate the cover slowly and with caution to ensure safe and proper use.



RealTruck Extang Corporation
5400 S. State Road, Ann Arbor, MI 48108
800-877-2588 ©RealTruck Group, Inc., 2026

3 1 8 0 0 0 0 0 2 - 3 0

Part# 31800002-30 Rev. 11-3-26

⚠ IMPORTANT

READ BEFORE YOU BEGIN INSTALLATION

IT IS CRITICAL FOR YOUR SAFETY THAT YOU CAREFULLY READ AND FOLLOW THE SAFETY CAUTIONS AND INSTALLATION INSTRUCTIONS BOTH PRIOR TO AND DURING INSTALLATION.

ENTRAPMENT SAFETY WARNING

This tonneau cover does not feature a manual release mechanism from inside the truck bed. To prevent the risk of entrapment, never allow anyone to be inside the bed of the truck when the cover is closed.

Always ensure the area is clear before closing the cover, and keep the cover securely latched when not in use to avoid accidental closure.




CARGO TRANSPORT WARNING

Do not attempt to close the tonneau cover over cargo that is taller than the depth of the truck bed.

Never force the cover to close improperly.

Forcing the cover can:

- **Prevent the cover from lying flat and latching securely.**
- **Damage the cover's hinge and cause the cover to kink.**
- **Damage the rear tail panel and cause it to become detached.**

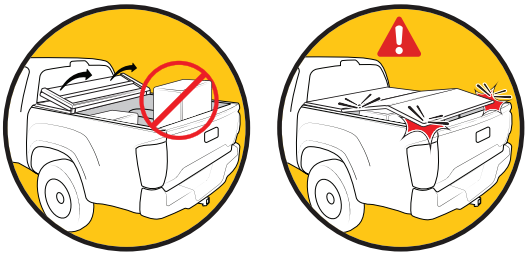

RealTruck Extang Corporation
5400 S. State Road, Ann Arbor, MI 48108
800-877-2588 ©RealTruck Group, Inc., 2026

Part# 31800002-30 Rev. 11-3-26

READ THIS FIRST

REALTRUCK extang

ENDURE ALX

INSTALLATION SUPPLEMENT

Nissan, Toyota, Honda, Ram, Jeep, GM CarbonPro bed & Ford

This supplement replaces **steps 3-7** in the main install sheet for the vehicles listed below. Read this guide before proceeding with the main installation.

Nissan Titan 2016+ W/O Utili-Track System, Isuzu D-Max 2020, Nissan Navara 2015-2020 and Toyota Hilux 2005-2015 WITHOUT the Utili-Track System.....1

Nissan Titan 2016+ WITH the Utili-Track System.....2

Toyota Tacoma 2016+.....3

Toyota Tundra 2016+.....4

Honda Ridgeline 2017+.....5-6

RamBox DT 2019+.....7-8

Jeep Gladiator.....9-12

GM CarbonPro Bed.....13-14

Ford Ranger 2024-2025.....15-17

Ford Ranger 2026+.....18-20

RealTruck Extang Corporation
5400 S. State Road, Ann Arbor, MI 48108
800-877-2588 ©RealTruck Group, Inc., 2026

3 1 8 0 0 0 0 2 - 3 0

Part# 31800002-30 Rev. 11-3-26


ENDURE ALX

INSTALLATION SUPPLEMENT

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


Nissan Titan 2016+ W/O Utili-Track System, Isuzu D-Max 2020, Nissan Navara 2015-2020 and Toyota Hilux 2005-2015 WITHOUT the Utili-Track System

1 It is important that all areas where the bed cover mounts are clean and free of debris prior to installing.

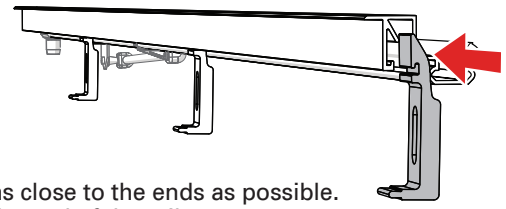


Slide the outer clamp halves into the tapered slot of the bed rails.

Position the front and rear clamps as close to the ends as possible. They should be less that 12" from the end of the rail.

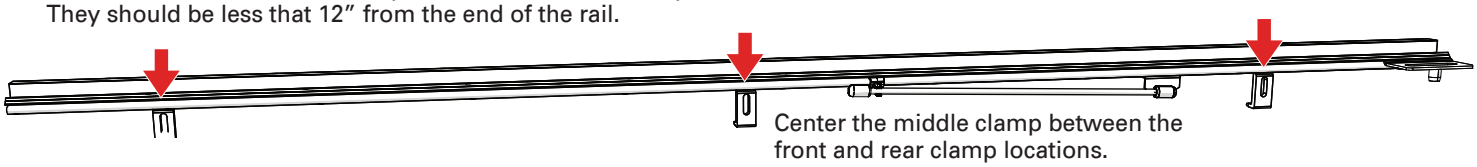


Center the middle clamp between the front and rear clamp locations.


2 Place the bed rail onto the truck cap. Assemble the inner clamp halves to the outer clamps positioned on the rail. Adjust the clamp positions as necessary. Thread the bolt through a washer and into the clamp half.

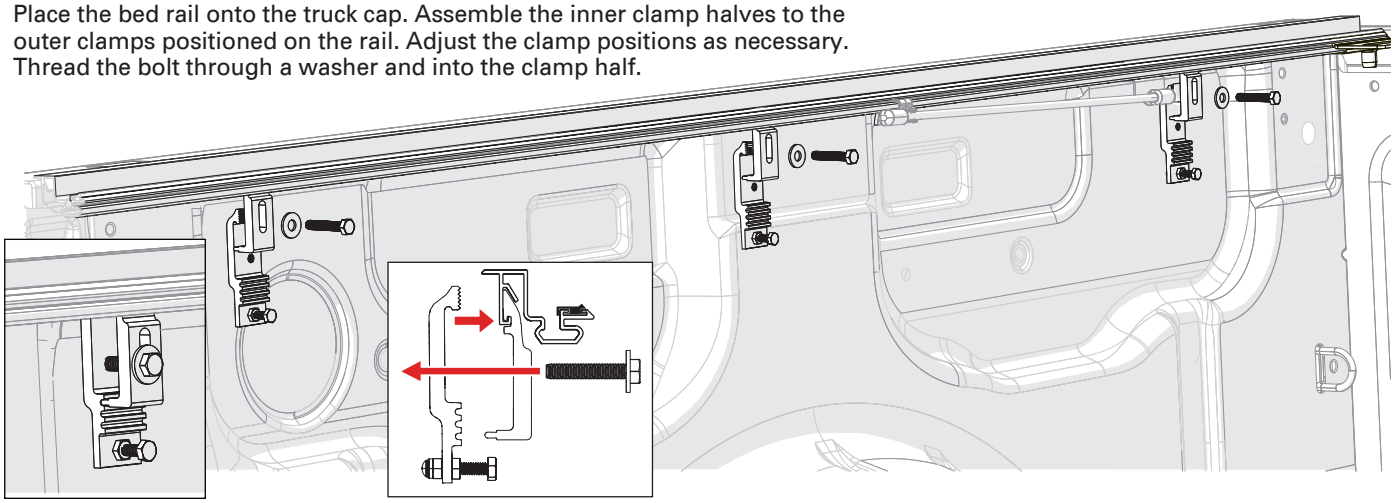

3 Tighten the clamp bolts, the front, middle and rear.




Torque the clamp bolts to 13.6 Nm (120 in-lb)

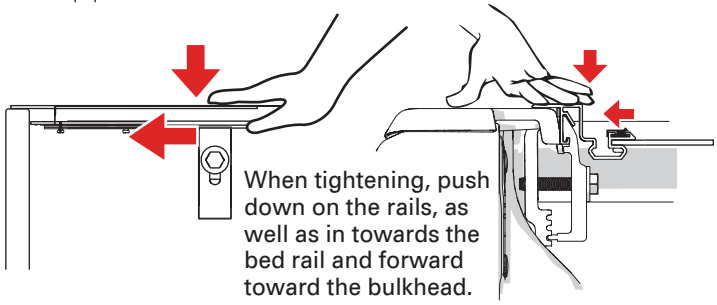


When tightening, push down on the rails, as well as in towards the bed rail and forward toward the bulkhead.

4 The lower adjustment bolt and rubber stops are used to support and level the rail.

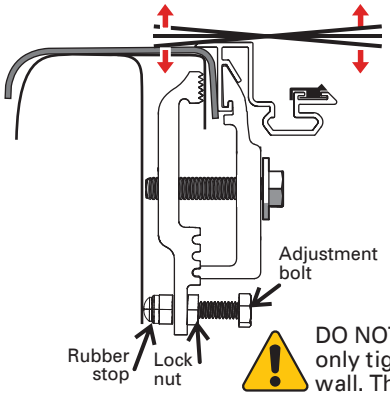

Loosen the lock nut and adjust the bolt in or out. Re-tighten the lock nut.

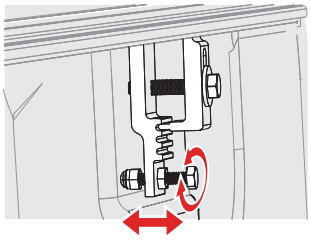

DO NOT torque the adjustment bolt, only tighten to position it to the bed wall. The lock nut needs only to be snug.

5 Repeat all of the steps for both sides. Return to the standard installation instructions. Follow step 2 for the bulkhead seal, then skip to step 8.

RealTruck Extang Corporation
5400 S. State Road, Ann Arbor, MI 48108
800-877-2588 ©RealTruck Group, Inc., 2026

Part# 31800002-30 Rev. 11-3-26


ENDURE ALX

INSTALLATION SUPPLEMENT

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


Nissan Titan 2016+ WITH the Utili-Track System

1 It is important that all areas where the bed cover mounts are clean and free of debris prior to installing.

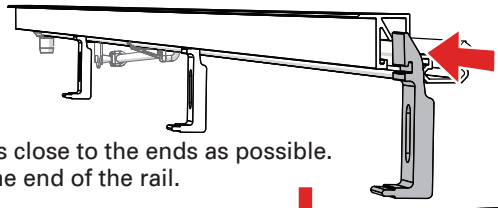


Slide the outer clamp halves into the tapered slot of the bed rails.

Position the front and rear clamps as close to the ends as possible. They should be less that 12" from the end of the rail.

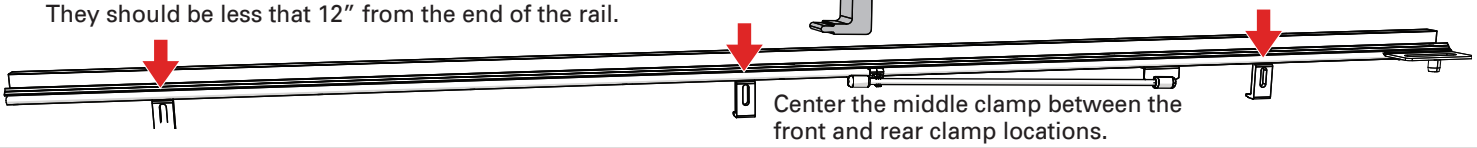


Center the middle clamp between the front and rear clamp locations.

2 Slide the back half of the clamp directly into the vehicle tracks. The clamp halves install with the grooves facing out. Align the clamp as shown with the large grooved end first. **NOTE:** If reusing the factory tie-downs be sure to install them intermittently with the bed cover clamp halves.

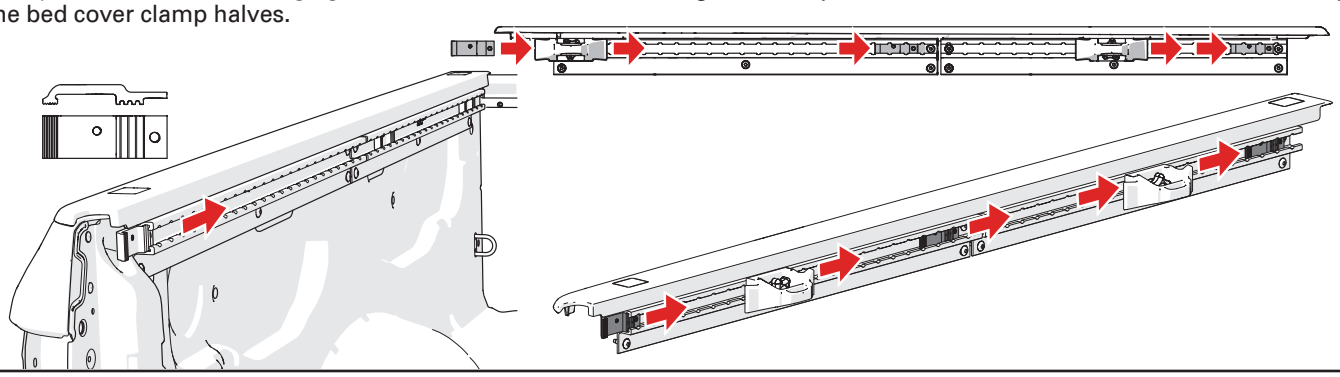


3 Place the rail onto the truck bed rail, match the two clamp halves, thread a bolt through a washer into the inner clamp half.


NOTE: Some drop-in liners may require trimming in the corners to fit the rail.

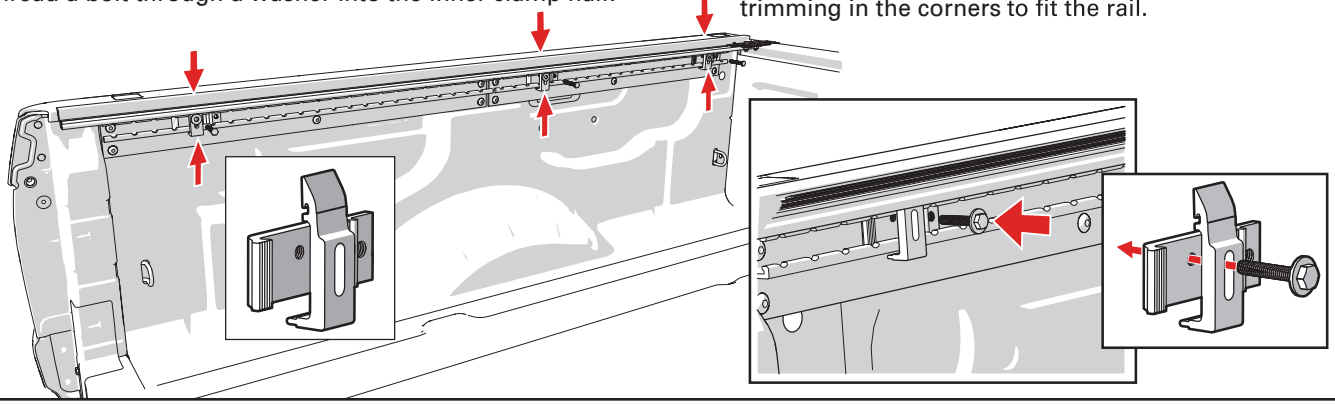

4 Tighten the clamp bolts, the front, middle and rear.



When tightening push down on the rails, as well as in towards the bed rail and forward toward the bulkhead.

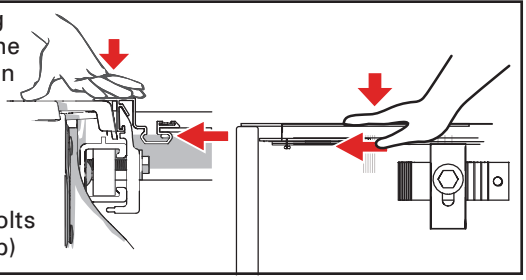

Torque the clamp bolts to 13.6 Nm (120 in-lb)

5 Repeat all of the steps for both sides. Return to the standard installation instructions. Follow step 2 for the bulkhead seal, then skip to step 8.

RealTruck Extang Corporation
5400 S. State Road, Ann Arbor, MI 48108
800-877-2588 ©RealTruck Group, Inc., 2026

Part# 31800002-30 Rev. 11-3-26

ENDURE ALX


INSTALLATION SUPPLEMENT

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


Toyota Tacoma 2016+

1 It is important that all areas where the bed cover mounts are clean and free of debris prior to installing.


Remove the factory cab header rail. Remove the backing from the foam seals, and adhere a seal to both sides of the header rail. Reassemble the header rail to the truck, tighten the fasteners to 7.5Nm, (66.5 in-lb)

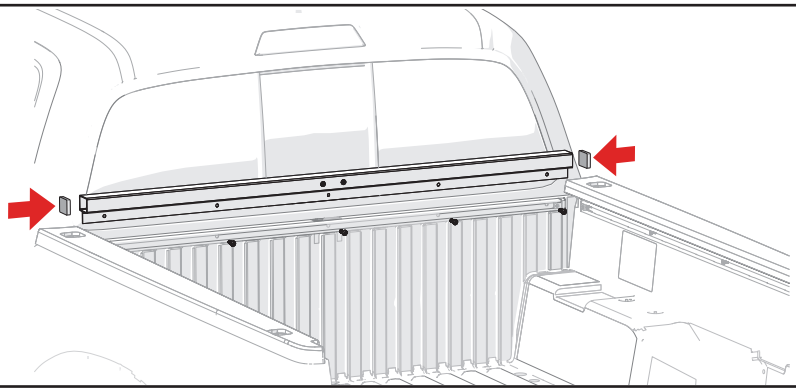


2 Remove the factory cargo rail and fasteners. Retain both for later reinstallation.

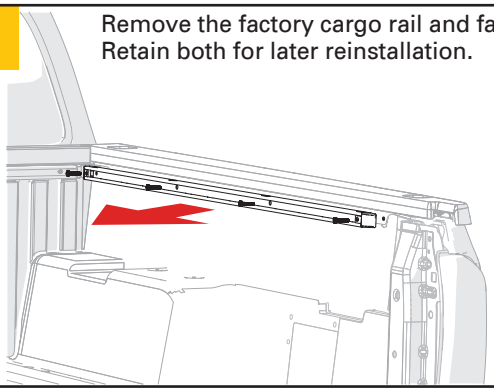


3 Align and slide the cover rail brackets into the slot in the rail. The brackets will be spaced to match the factory cargo rail holes.

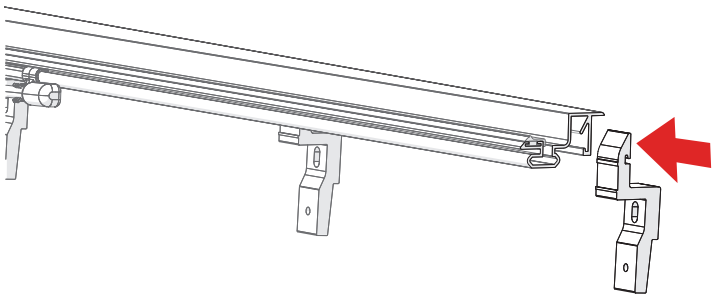

4 Mount the cover rail and brackets to the truck bed using the factory cargo rail fasteners and into the cargo rail mounting holes.

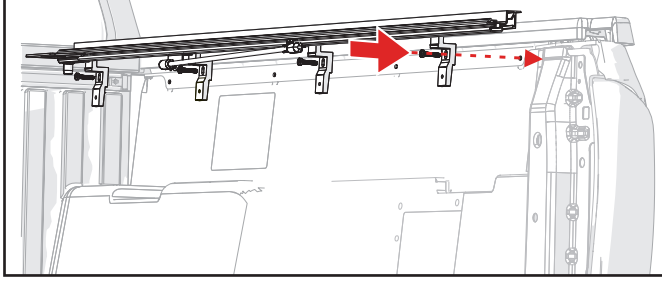


5 Make sure the cover rail is pushed forward, tight against the bulkhead. Tighten the fasteners.

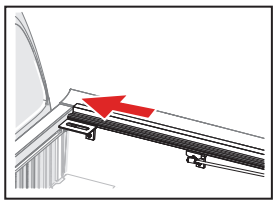


Torque the fasteners to 7.5 Nm (66.5 in-lb)

6 Mount the factory cargo rail to the lower holes of the cover brackets using the provided small fasteners.

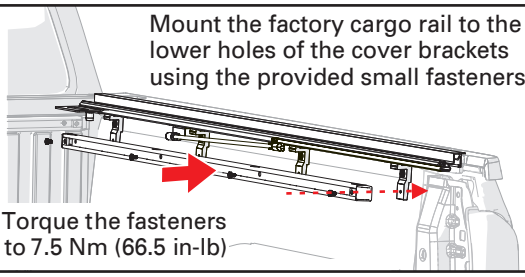

Torque the fasteners to 7.5 Nm (66.5 in-lb)

7 Repeat all of the steps for both sides. Return to the standard installation instructions. Follow step 2 for the bulkhead seal, then skip to step 8.

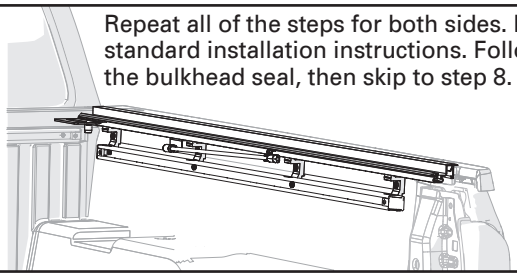

RealTruck Extang Corporation
5400 S. State Road, Ann Arbor, MI 48108
800-877-2588 ©RealTruck Group, Inc., 2026

Part# 31800002-30 Rev. 11-3-26

ENDURE ALX


INSTALLATION SUPPLEMENT

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


Toyota Tundra 2016+

1 It is important that all areas where the bed cover mounts are clean and free of debris prior to installing.


Remove the factory cargo rails and fasteners. Retain both for later reinstallation.

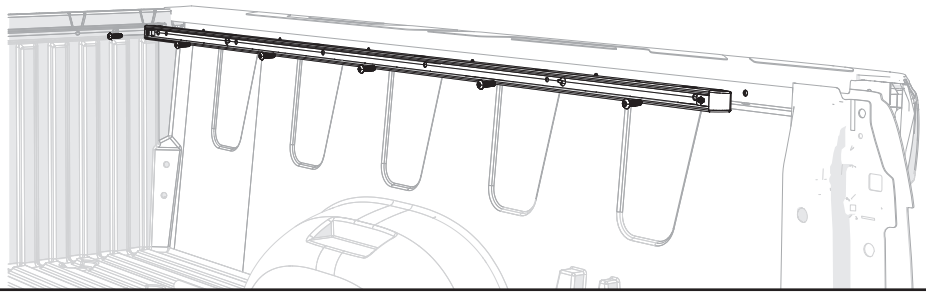


2 Align and slide the cover rail brackets into the slot in the rail. The brackets will be spaced to match the factory cargo rail holes.

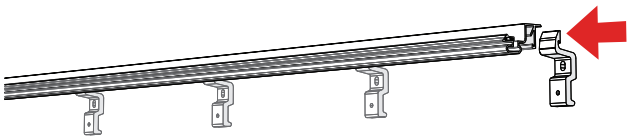


Mount the cover rail and brackets to the truck bed using the factory cargo rail fasteners and into the cargo rail mounting holes.

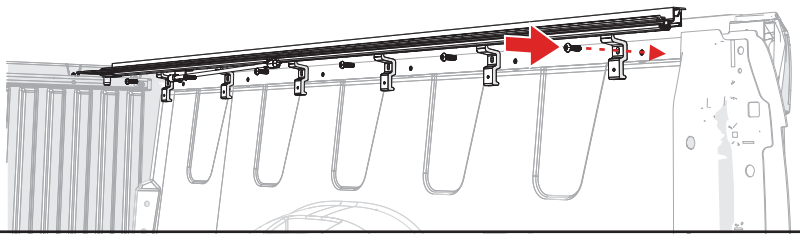


3 Make sure the cover rail is pushed forward, tight against the bulkhead. Tighten the fasteners.

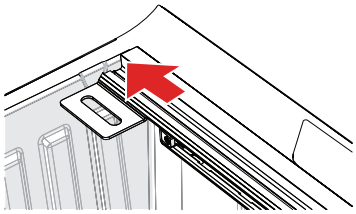


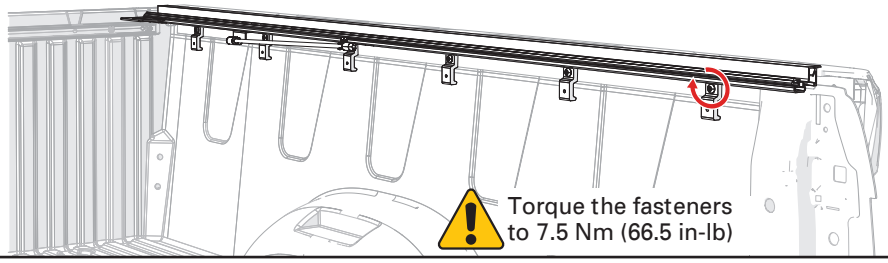

4 Mount the factory cargo rail to the lower holes of the cover brackets using the provided small fasteners.

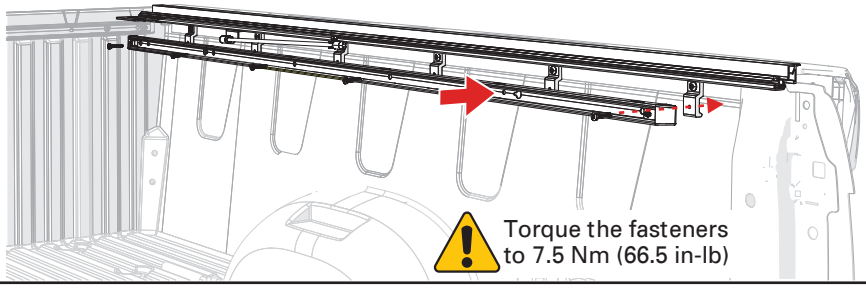

5 Repeat all of the steps for both sides. Return to the standard installation instructions. Follow step 2 for the bulkhead seal, then skip to step 8.

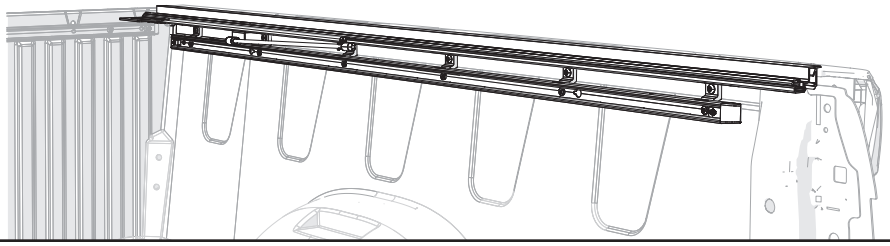

ENDURE ALX


INSTALLATION SUPPLEMENT


This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

Honda Ridgeline 2017+


1 It is important that all areas where the bed cover mounts are clean and free of debris prior to installing.

Assemble the cab and rear mounting brackets to the accessory mount brackets slide them into the rail channels.

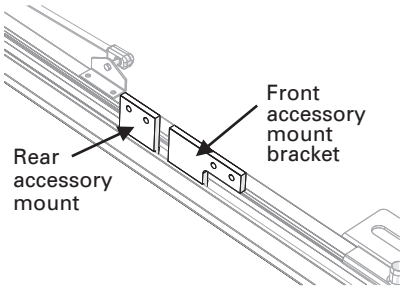


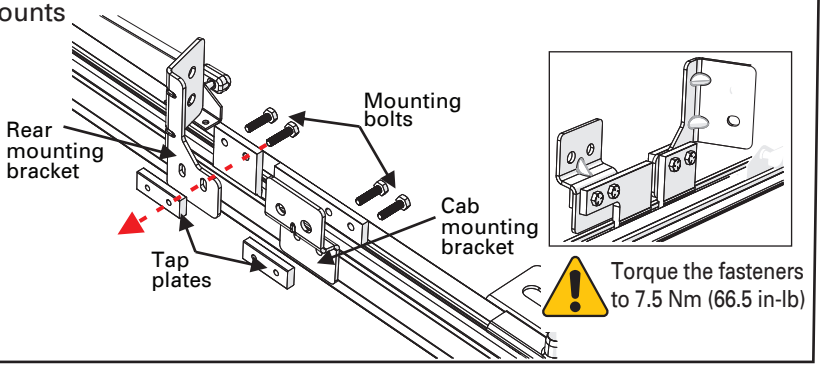


2 Remove the upper factory cleats and fasteners. Keep the fasteners for reuse, the cleats will not be reinstalled.

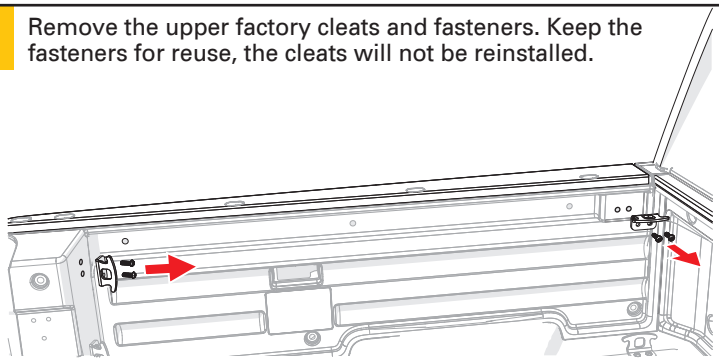


Slide the mounting brackets to the front and to the rear. Set the cover rail onto the truck bed rail and align the bracket holes with the factory cleat mounting holes.

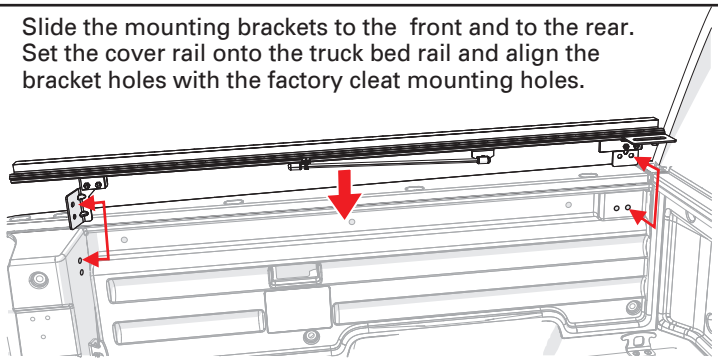


3 Thread the factory fasteners through the cover rail mounting brackets and into the factory holes where the cleats where mounted.

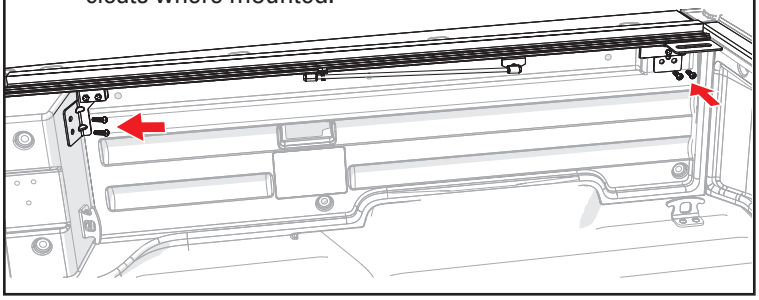

4 With all four fasteners in place, start at the front and push down and forward on the rail while tightening. Push down on the rear of the rail while tightening the fasteners.

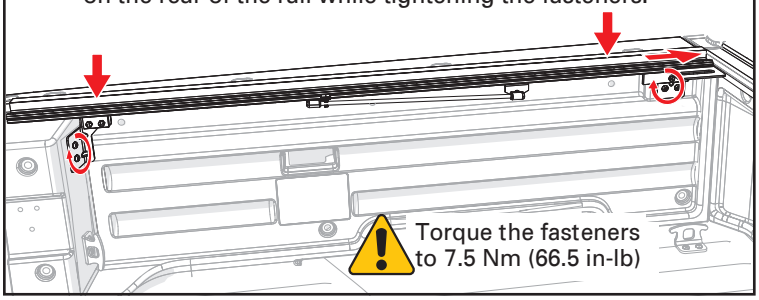

5 Mark the holes for the drain tube using the provided template.

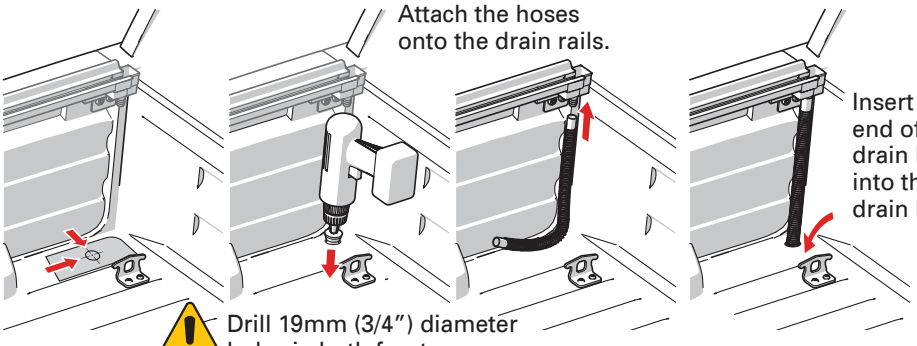

6 Repeat all of the steps for both sides. Return to the standard installation instructions. Follow step 2 for the bulkhead seal, then skip to step 8.

RealTruck Extang Corporation
5400 S. State Road, Ann Arbor, MI 48108
800-877-2588 ©RealTruck Group, Inc., 2026

Part# 31800002-30 Rev. 11-3-26

ENDURE ALX

INSTALLATION SUPPLEMENT

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

Honda Ridgeline 2017+

When copying or printing, this dimension should be 6 3/4" or 171.45mm.

Drill Template Driver/Left side


Mark the holes for the drain tube using this template.

19mm (3/4") diameter hole

Drill Template Passenger/Right side

Mark the holes for the drain tube using this template.

19mm (3/4") diameter hole

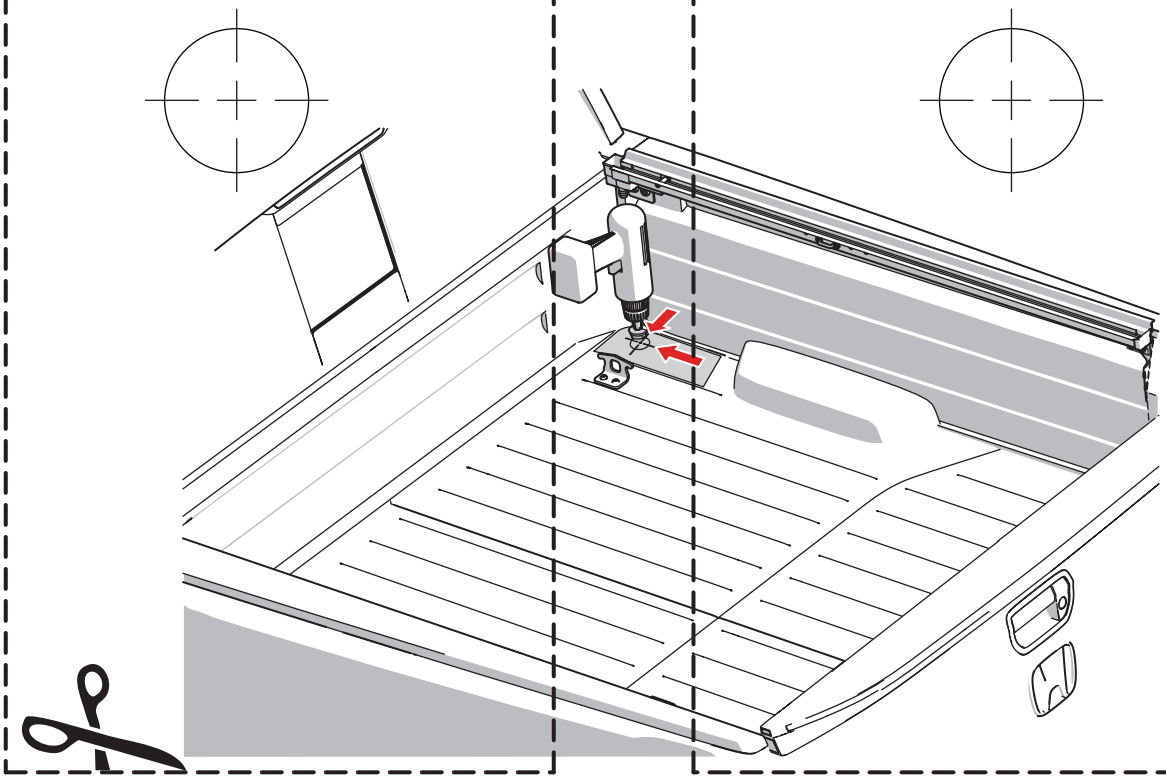

RealTruck Extang Corporation
5400 S. State Road, Ann Arbor, MI 48108
800-877-2588 ©RealTruck Group, Inc., 2026

Part# 31800002-30 Rev. 11-3-26

ENDURE ALX


INSTALLATION SUPPLEMENT

This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.


RamBox DT 2019+

1 It is important that all areas where the bed cover mounts are clean and free of debris prior to installing.


Remove the factory accessory rails.

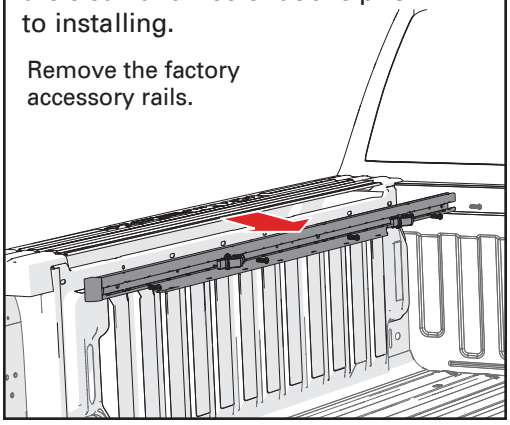


2 Apply the roll of flat seal along the bed to be between the bed and the factory accessory rail. Make sure the seal extends beyond the ends of the accessory rail, from the bulkhead through to the back corner trim cap. Do this for both sides.

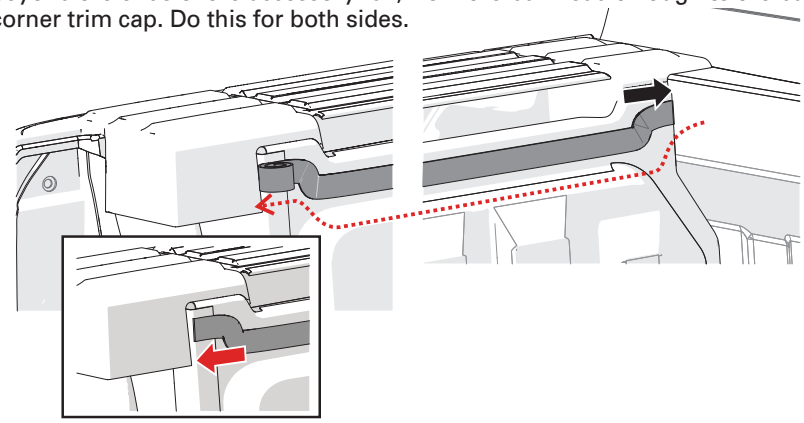


3 Continue to place the flat D-seal across the back end cap.

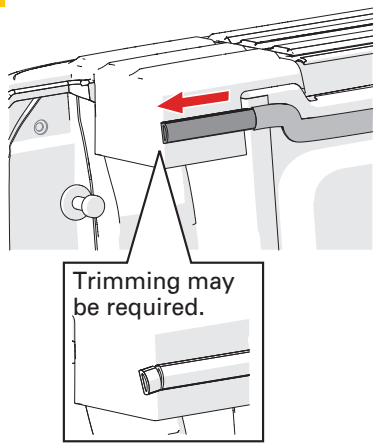

4 With the seals in place on both sides, reinstall the factory accessory rails.

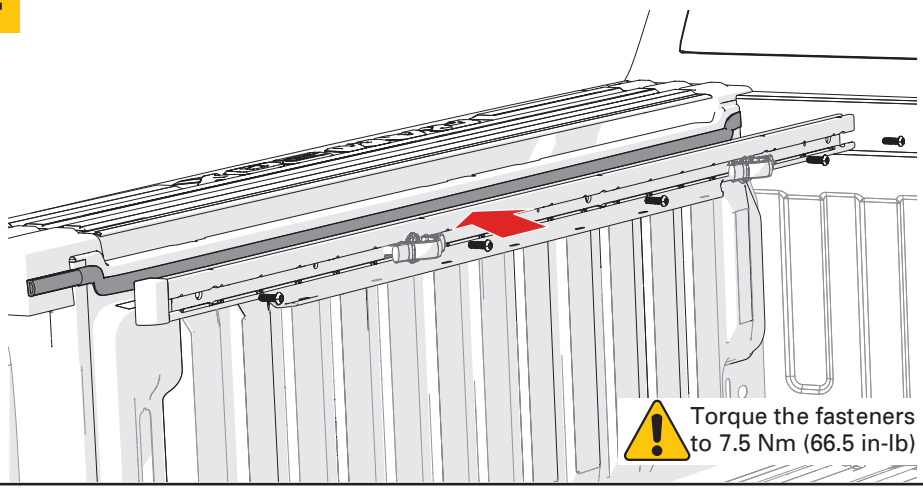

5 **NOTE:** In the rail installation, the folding cover prop rod (A) and prop rod bracket (B) will conflict with the factory tie-down cleats (C & D). If a tie-down cleat is needed forward in the bed it can remain in the front (C). Otherwise the tie-down cleats need to be removed for rail installation.

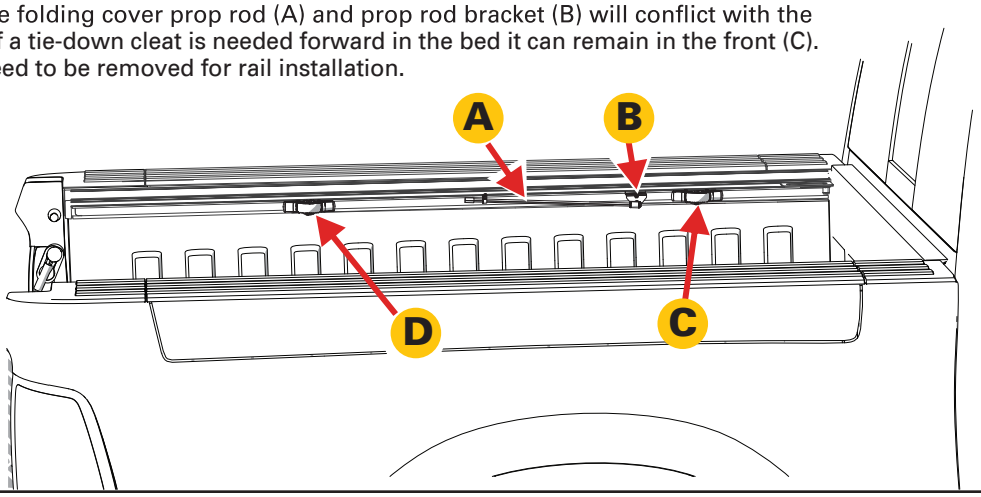

RealTruck Extang Corporation
5400 S. State Road, Ann Arbor, MI 48108
800-877-2588 ©RealTruck Group, Inc., 2026

Part# 31800002-30 Rev. 11-3-26


ENDURE ALX

INSTALLATION SUPPLEMENT


This supplement replaces **steps 3-7** in the main install sheet for the vehicles noted. Read this guide before proceeding with the installation.

RamBox DT 2019+

6 Remove the cargo rail end caps and tie-down cleats as noted in step 5.

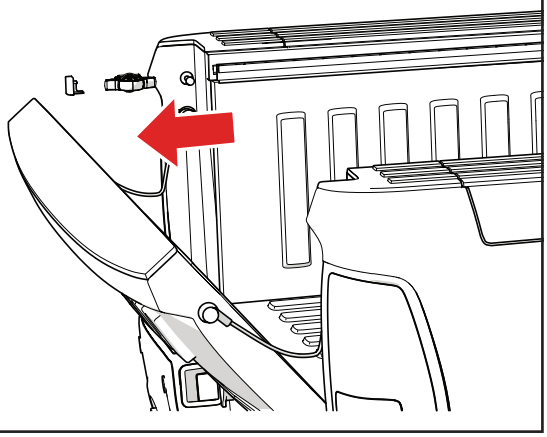


7 Slide the hard folding cover rails into the top of the cargo rails with the slotted bracket (E) in front and on the inside of the truck bed. The hard folding cover rails use the rounded clip ends (F) to spring into the cargo rail groove (G).

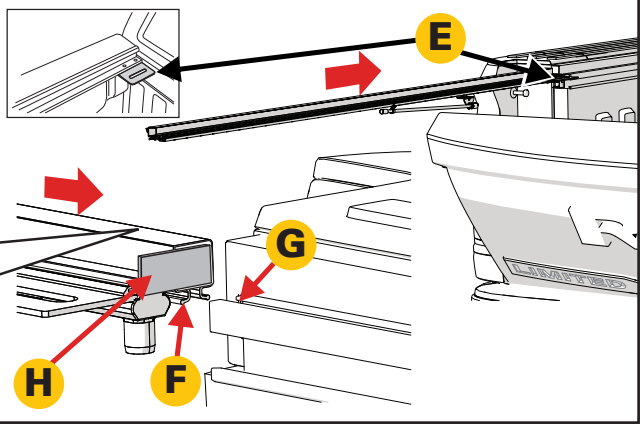


NOTE:
A soapy water solution will help with assembly.


8 Slide the hard folding cover rails forward until the foam seal (H, from Step 7) contacts the bulkhead (I).

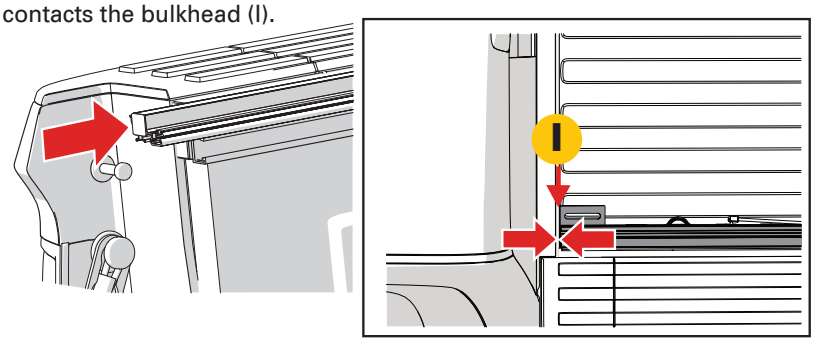

9 Replace the tie-down cleats and the cargo rail end caps, both sides.

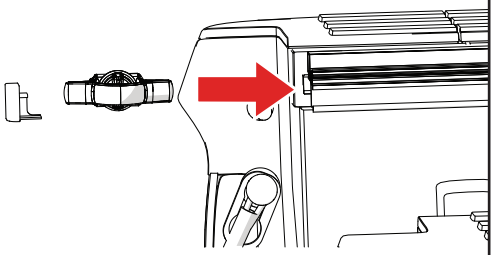

10 Adhere the ribbed D-seal in the end cap corner to span the mounting rail caps and rear trim panel. Add one to each side. Trimming the seal may be required.

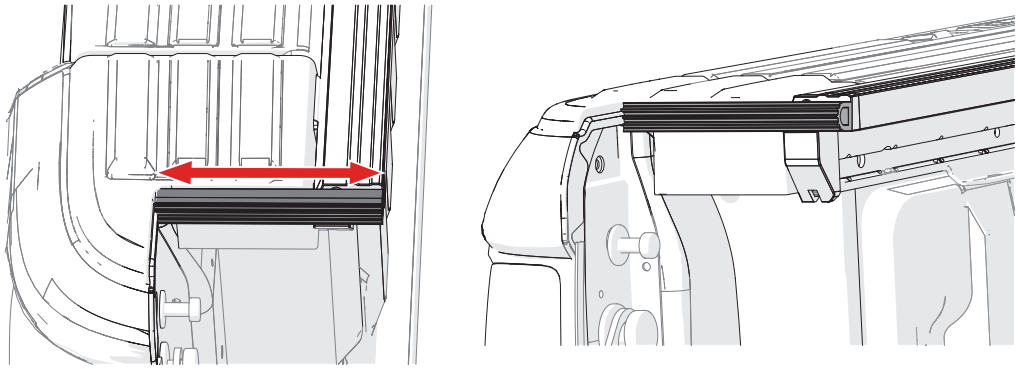

11 Repeat all of the steps for both sides. Return to the standard installation instructions. Follow step 2 for the bulkhead seal, then skip to step 8.

RealTruck Extang Corporation
5400 S. State Road, Ann Arbor, MI 48108
800-877-2588 ©RealTruck Group, Inc., 2026

Part# 31800002-30 Rev. 11-3-26