

TRUXPORT REPLACEMENT CABLE GUARD INSTALLATION SHEET


NOTE: It is important that all installation surfaces are clean and free of dirt, debris, and contaminants before installation.

TOOLS REQUIRED

● No tools required


PARTS INCLUDED

● 2x Cable Guard

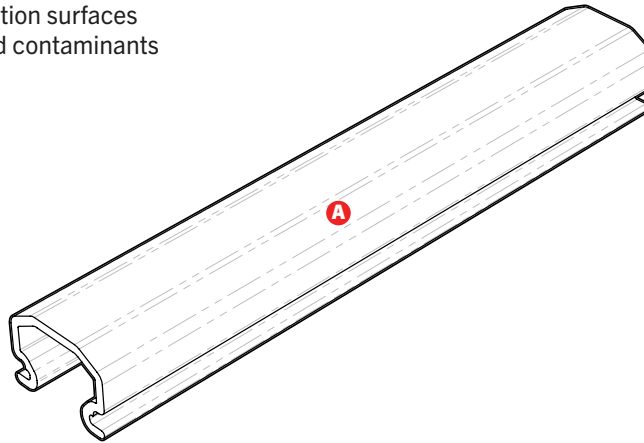


INSTALLATION STEPS

1 Open cover.

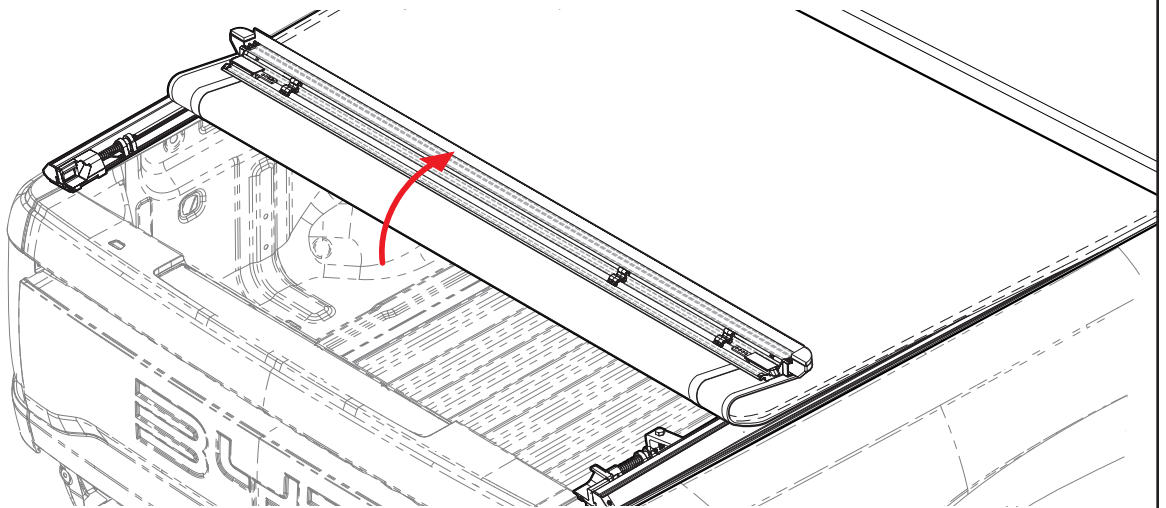


2 Locate where the release cable attaches to the slam latch. Slide the cable clip out of the way.

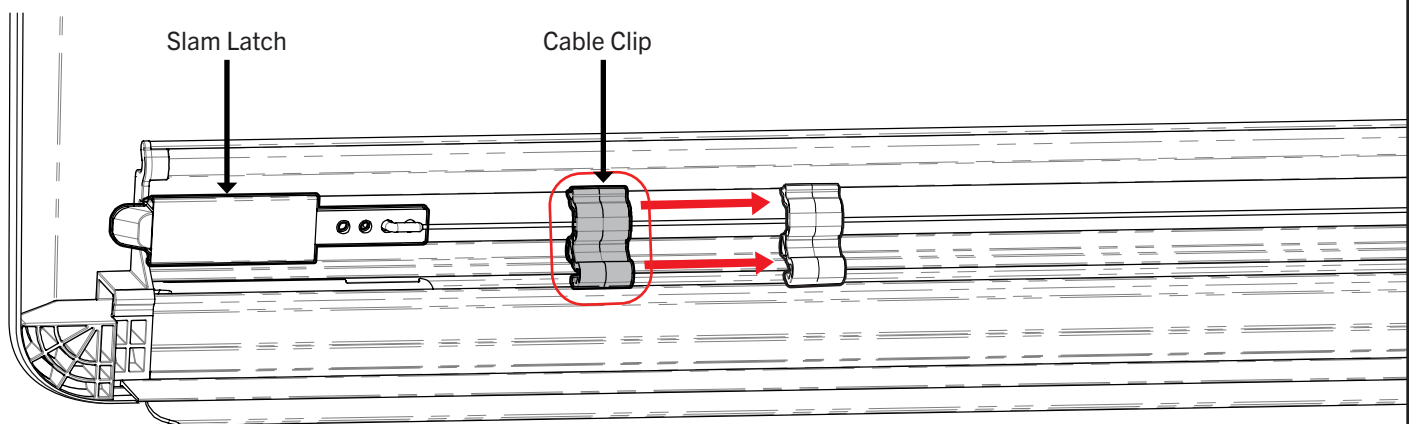


INSTALLATION STEPS

- 3** Squeeze and clip Cable Guard (A) into rear header extrusion.

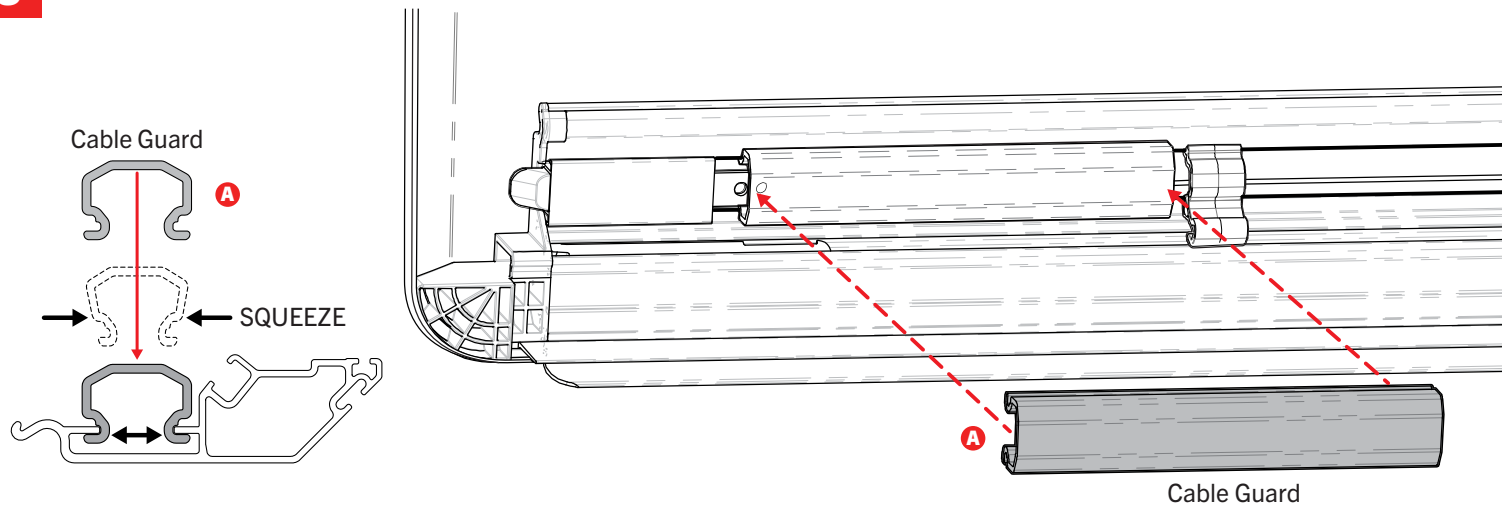

- 4** Align Cable Guard (A) FLUSH with latch. Slide Cable Clip FLUSH with Cable Guard (A).

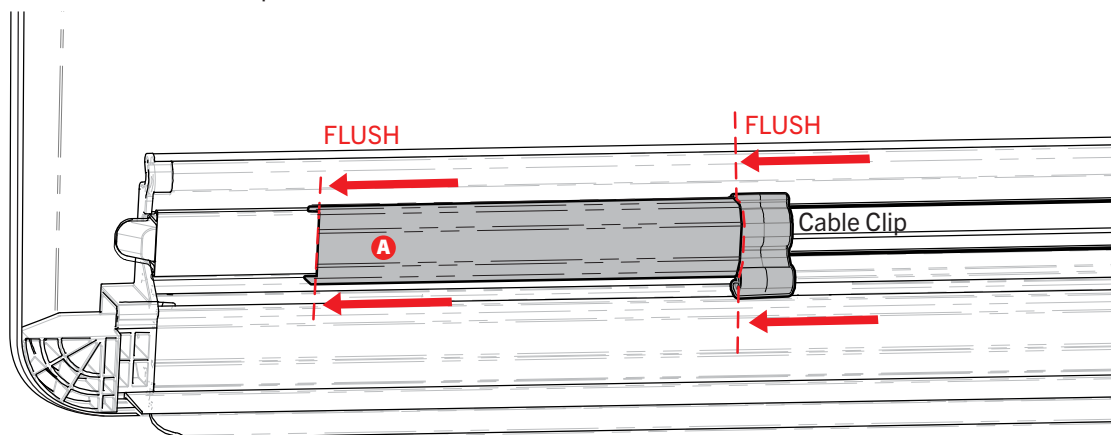

Note: Mirror installation process for opposite side of vehicle.

- 5** Close Cover.

