




MISHIMOTO

2024+ TOYOTA TACOMA RECOVERY POINTS (REAR)

MODEL: MMTH-TAC-24

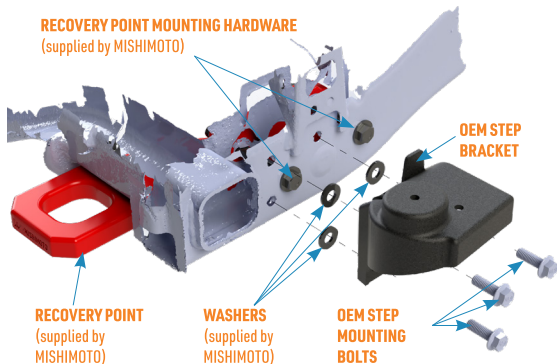

REAR RECOVERY POINTS + OEM BED STEP

INSTALLATION INSTRUCTIONS

1. Install the Mishimoto Rear Recovery Point according to the recovery point installation instructions.
2. Place 1x of the provided washers between the frame rail and the OEM step bracket at each of the 3x OEM bolt locations. These washers will provide clearance between the recovery point mounting bolt and the OEM step bracket.
3. Follow the manufacturer's instructions for the remainder of the OEM bed step installation.

For questions or assistance with your MISHIMOTO product, contact us at 1.877.466.4744 or visit [MISHIMOTO.COM](https://www.mishimoto.com)