



2024+ Honda Prologue Installation Instructions












Manufacturer warranty covers material defects on new, never installed parts. Once installed, customer is responsible for all replacement part costs. Caution against blind spots during parking. Avoid curbs and excessive compression to flaps. **Check for sufficient exhaust, wheel, suspension clearances.**

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools 7mm/10mm/11mm wrench, Phillips screwdriver, Pick.

Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

CONFIRM PARTS & QUANTITIES BEFORE INSTALLATION		
MUD FLAP KIT PN MF144 SEE PAGE 4	PART DESCRIPTION	QUANTITY
MF144-LF	LEFT FRONT	1
MF144-RF	RIGHT FRONT	1
MF144-LR	LEFT REAR	1
MF144-RR	RIGHT REAR	1
BRACKET KIT PN BMF144		
BMF144	 BRACKET FRONT	2
BMF118-RE2	 BRACKET	4
HARDWARE KIT PN HMF144		
.25SP	 SPACER	2
.5SP	 LONG SPACER	2
1.5SS6TR	 SCREW	6
BLKNUT	 NUT	4
HXBLT	 BOLT	4
RACLP	 CLIP	4
SMWASH	 WASHER	14

Do not fully tighten fasteners until flaps are aligned to vehicle.

FRONT FLAP Access interior wheel well by turning steering wheel towards the installation side.

Parts x 1 Flap → 1 x BMF118-RE2; 1 x BMF144; 1 x .5SP; 2 x 1.5SS6TR; 1 x BLKNUT; 1 x HXBLT; 4 x SMWASH

IMAGES A/B/C Remove factory fasteners 1 & 2. Temporarily remove 7mm bolt 3. Place round edge of BMF118-RE2 over mount 3, polygon edge of BMF118-RE2 facing ground and extended towards front of vehicle. Reinstall bolt into mount 3.



2024+ Honda Prologue Installation Instructions


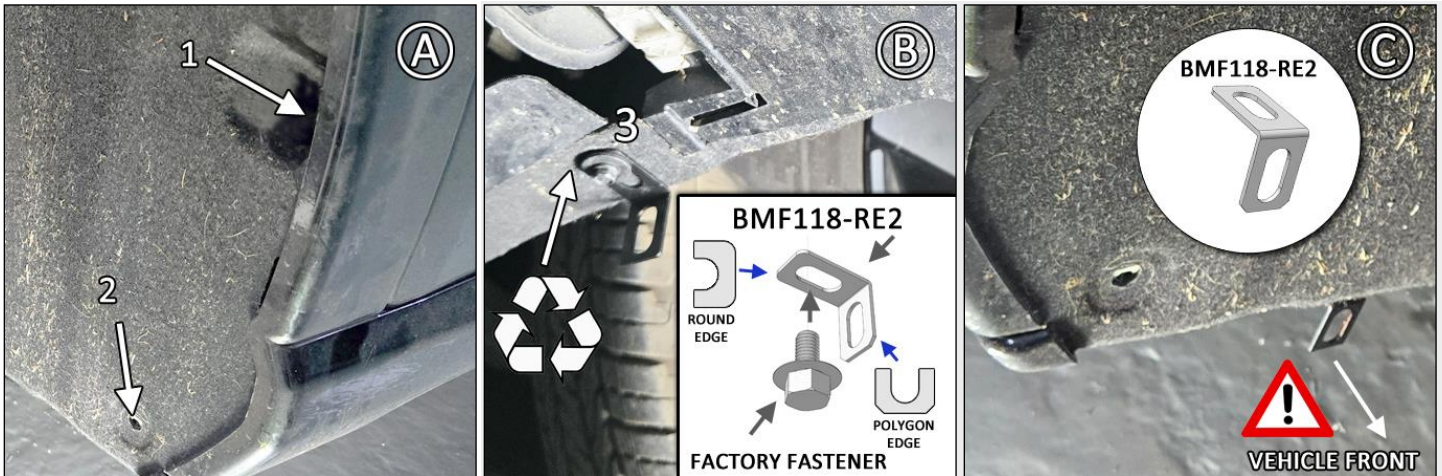


IMAGE D Place logo-side of flap facing rear bumper. Install SMWASH & HXBLT through flap & BMF118-RE2 mount 3. Fasten SMWASH & BLKNUT on logo-side mount 3.

IMAGE E Position BMF144 over tire-side of flap mounts 1 & 2. Place .5SP behind flap and over factory liner mount 1. Install SMWASH & 1.5SS6TR into mounts 1 & 2.

IMAGE F Align flaps to even ground before tightening fasteners until just seated.

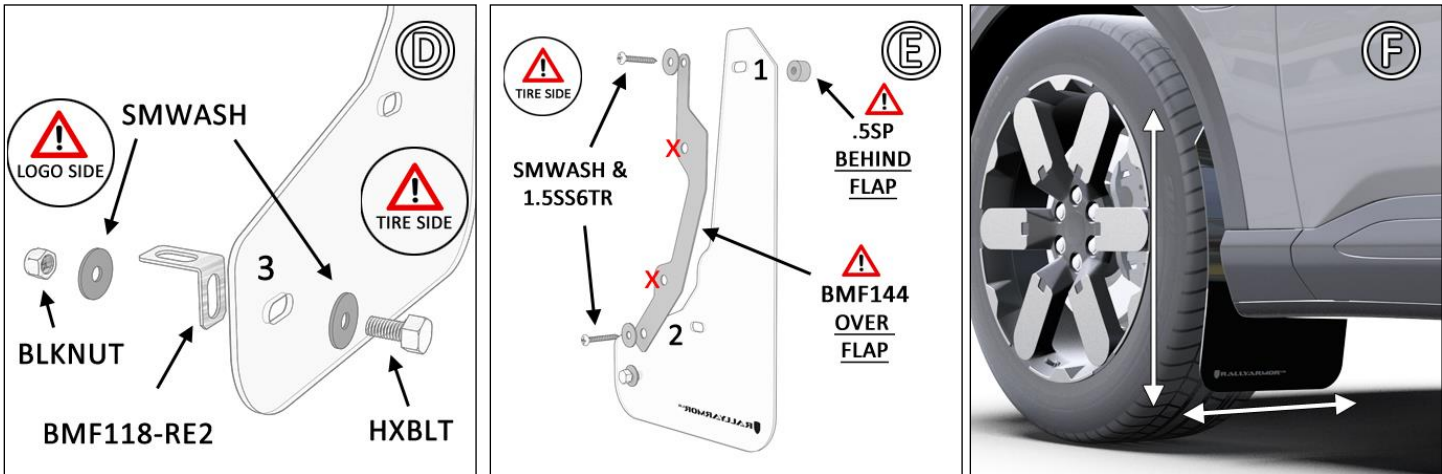

REAR FLAP Parts x 1 Flap → 1 x BMF118-RE2; 1 x .25SP; 1 x 1.5SS6TR; 1 x BLKNUT; 1 x HXBLT; 2 x RACLP;

3 x SMWASH

IMAGES G/H Uninstall fastener 1. Temporarily remove factory bolt 2. Place round edge of BMF118-RE2 over mount 2, polygon edge of BMF118-RE2 facing ground and extended towards front of vehicle. Reinstall bolt into mount 2.

IMAGE I Position logo-side of flap facing rear bumper. Install SMWASH & HXBLT into tire-side of flap & BMF118-RE2 mount 2. Fasten SMWASH & BLKNUT on logo-side mount 2.




2024+ Honda Prologue Installation Instructions



IMAGE J Place .25SP BEHIND flap and over liner mount 1. Install SMWASH & 1.5SS6TR into mount 1.

IMAGES K/L Partially clip RACLP over flap and behind bumper lip. Ensure flap lays flat against bumper before tightening and fully seating clips.

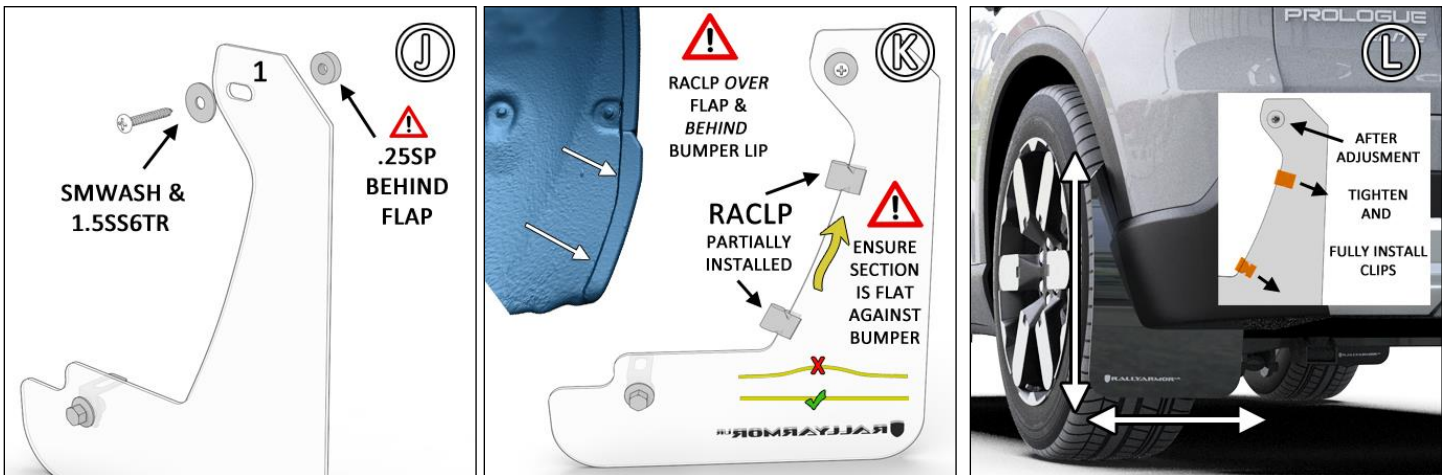



2024+ Honda Prologue Installation Instructions

