


Guardian Comfort Full Bed Liner

BRN04CCK: NISSAN TITAN 65" BED (2004+) BEDLINER INSTALLATION INSTRUCTIONS

WARNING: IMPROPER INSTALLATION WILL RESULT IN LINER FLYING OUT OF THE TRUCK! FOLLOW INSTRUCTIONS EXACTLY!

1. Read all instructions before installing.
 2. **NOTE: TRUCK BED SURFACE TEMPERATURE SHOULD BE 68° FOR HIGHER IN ORDER FOR THE HOOK FASTENERS TO ACHIEVE MAXIMUM ADHESION. ALSO, NEVER CONTAMINATE THE ADHESIVE BY TOUCHING IT WITH YOUR FINGERS.**
 3. Remove factory tie down hooks ('04 - '15 models), tailgate cover and plastic liner (if equipped).
 4. Remove Bed Liner floor, siderugs, floor rib filler strips, and installation kit from box.
 5. For 2016 and newer models, attach six (6) 1 3/4" wide floor rib filler strips, and two (2) 3 3/4" wide floor rib filler strips to location on foam side of Bed Liner floor with double sided tape included in the kit. Floor rib filler strip locations are scored as dashed lines into backside of part.
- For 2015 and older models, attach four (4) 2 3/8" wide floor rib filler strips and two (2) 3 3/4" wide floor rib filler strips to locations on foam side of Bed Liner floor with double sided tape included in the kit. Floor rib filler strip locations are scored as solid lines into backside of part.
- For models without Utili-Track Bed System, attach four (4) 1 3/4" floor rib filler strips, stacked (2) pieces thick, in deep areas.
- NOTE:** The floor rib filler strips fit both Titan bed sizes. Score lines indicate where to cut the strips for the Crew Cab versions. For models with Utili-Track Bed System, discard four (4), 1 3/4" wide floor rib filler strips, and cut along bold perforation only (see Illustration 1.1).
6. If truck is equipped with the Utili-Track Bed System:
 - A. Cut top edge of bulkhead panel just below the top strip of loop where part will fit below Utili-Track rail. (see Illustration 1.2) Be sure not to cut any sewn seams!

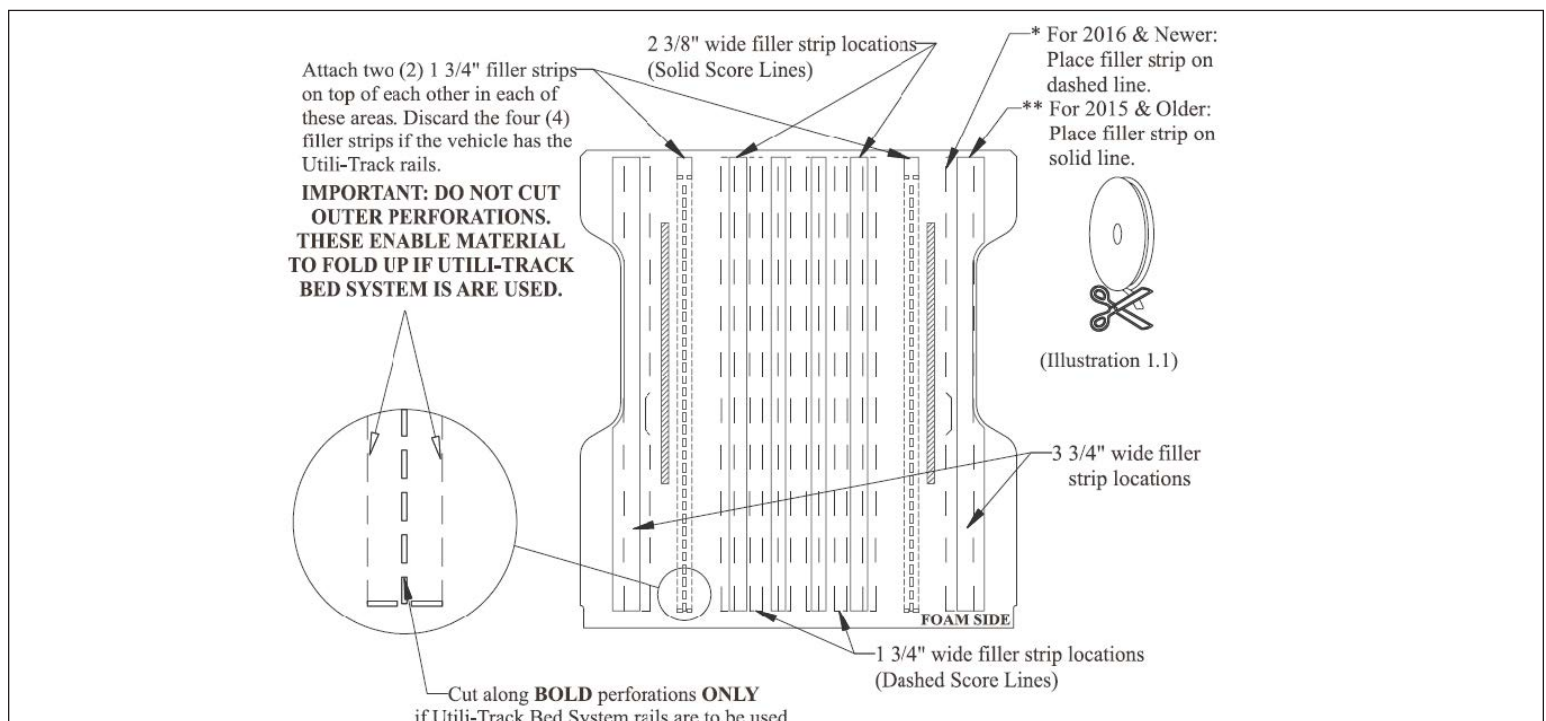


Guardian Comfort Full Bed Liner

- B. Cut along premarked lines on each sidewall in order for liner to fit around Utili-Track rails. (see Illustration 1.2) Be sure not to cut any sewn seams!
- C. Cut access hole on score line for power outlet (if equipped).

7. Zip Bed Liner floor and siderugs together to form the one-piece soft bed liner.

8. Attach self adhesive backed hook fasteners to the loop per Illustration 1.2. For siderugs, be sure to place the 2" long hook fasteners at the locator marks which are molded into the foam.

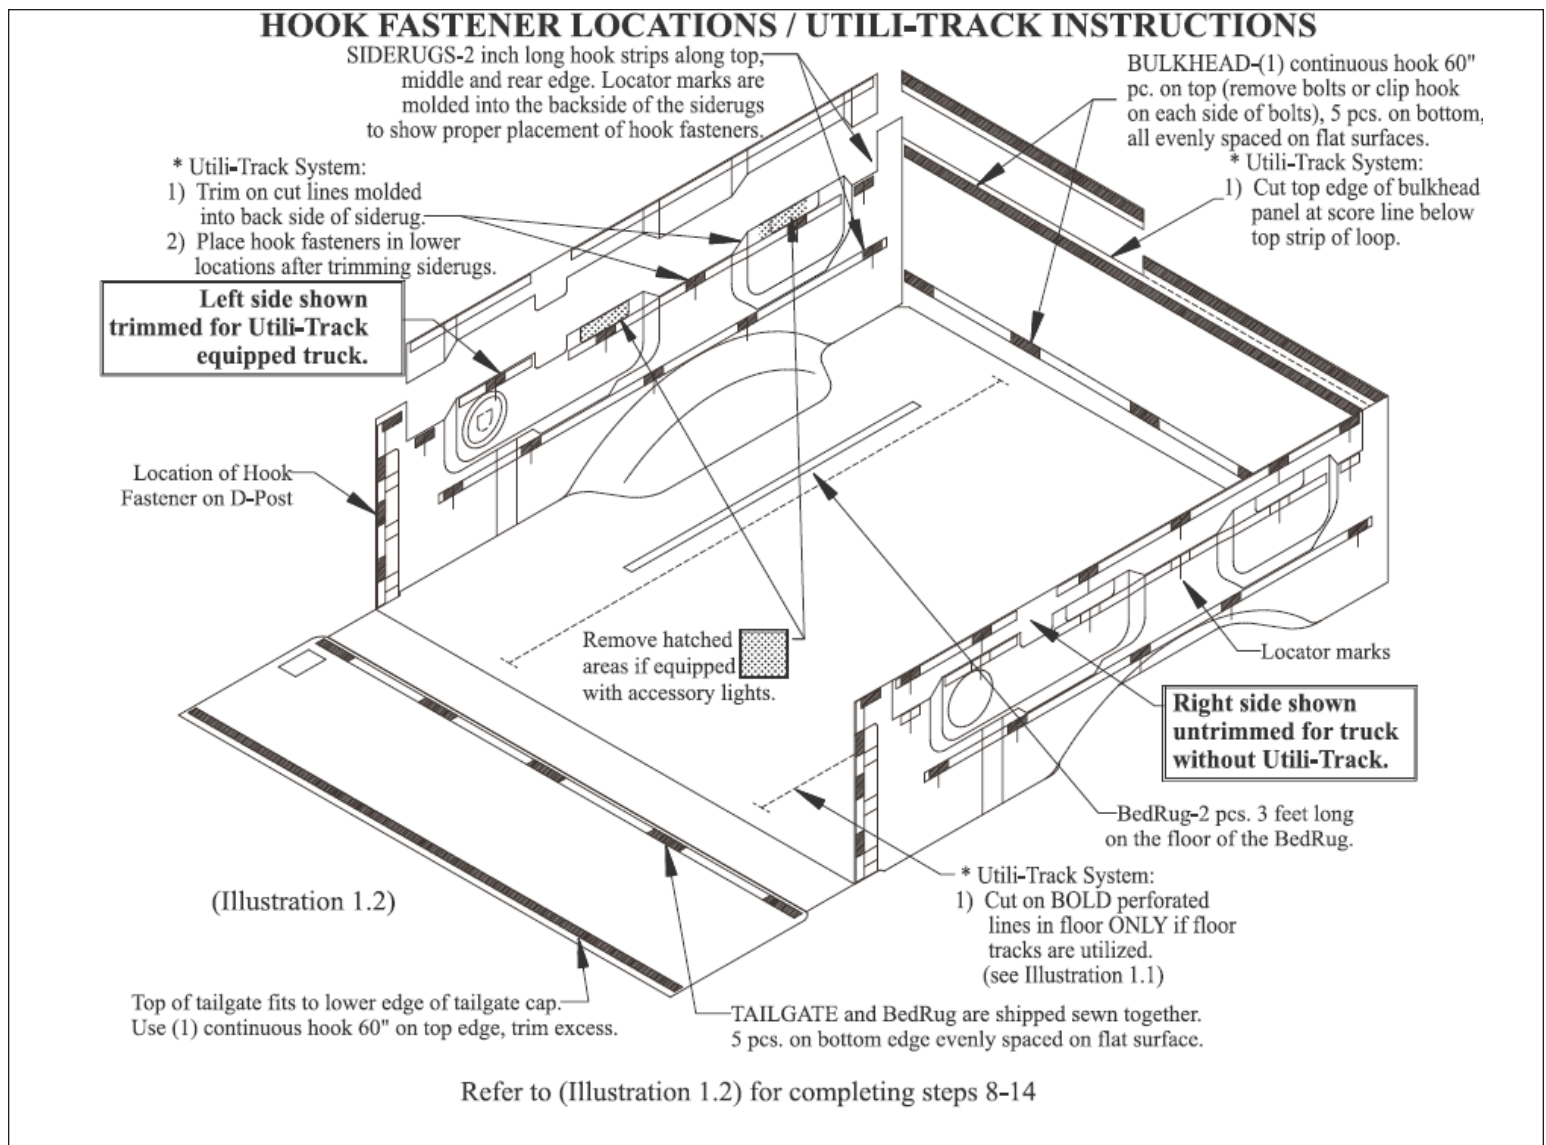

Guardian Comfort Full Bed Liner

9. Lay the Bed Liner soft bedliner in the bed of the truck to determine the exact location and fit. **IMPORTANT:** Never cut or put slits through any seams or sewn areas of the Bed Liner. This will cause the seam to come completely apart.
10. Roll one side of the Bed Liner floor up exposing the area where the 3' strip of hook fastener is to be adhered.
11. Using a clean lint-free cloth, clean this area thoroughly using NON-PETROLEUM based solvent. Then with a separate cloth, clean the same area again with alcohol. If the cloths become visually soiled, replace them with clean ones.
12. Lay the Bed Liner down, then **FIRMLY** rub the fastener(s) down **VERY AGGRESSIVELY** to assure full engagement of the fastener(s) and the adhesive.
13. Repeat steps 11 and 12 for the opposite side of the Bed Liner floor.
14. Repeat steps 11 and 12 on the bulkhead.
15. Repeat steps 11 and 12 on the siderugs.
16. Repeat steps 11 and 12 on the tailgate.

CLEANING INFORMATION

The mildew resistant Bed Mat foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your Bed Mat will remain serviceable for as long as you own your truck.

Cleaning your Bed Mat is easy:

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch, etc. Due to the fact that water will not harm the Bed Mat, pressure washing is also an effective way to clean a soiled Bed Mat.
2. Although most acids will not harm the Bed Mat, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your Bed Mat use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The Bed Mat polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

Retain this cleaning information with your vehicle owner's manual for future reference.

Congratulations!

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

www.huskyliners.com

Phone: 800-344-8759

Email: customerservice@huskyliners.com



GUARANTEED...FOR LIFE.