





INSTALLATION INSTRUCTIONS





Cleaning Notes

- Spray with a firm water spray to remove any loose dirt.
- Wash with water, detergent and a soft cloth or sponge.
- Do not use petroleum based solvents or abrasives.
- Do not drive for four hours after installation.
- Do not use automatic car wash.

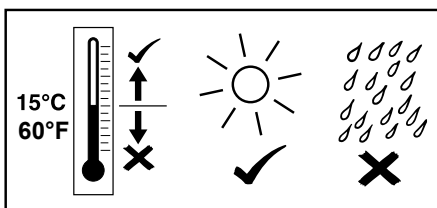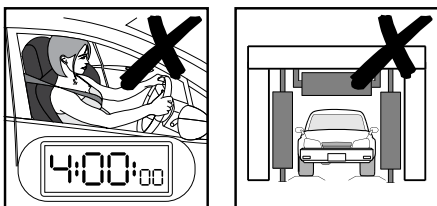

For Technical Support/ Warranty Information
please call: 800-757-7075

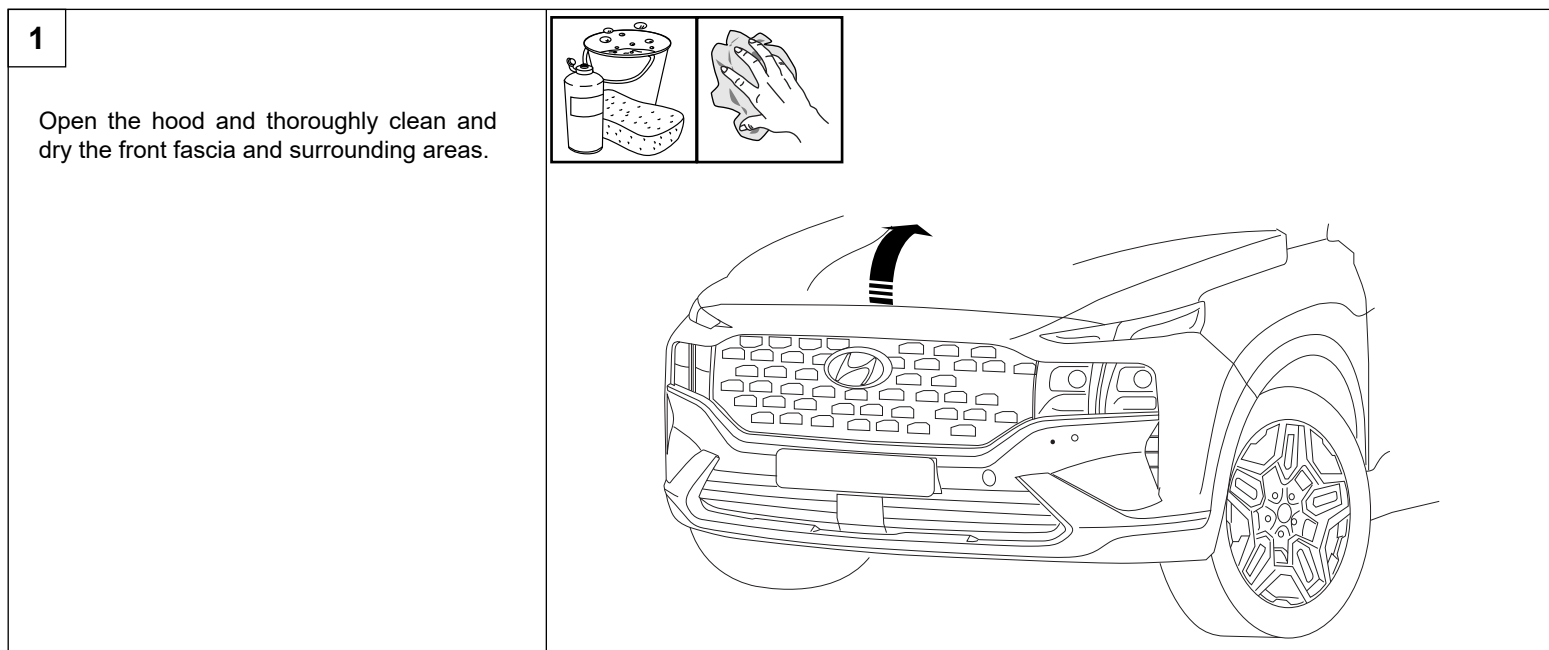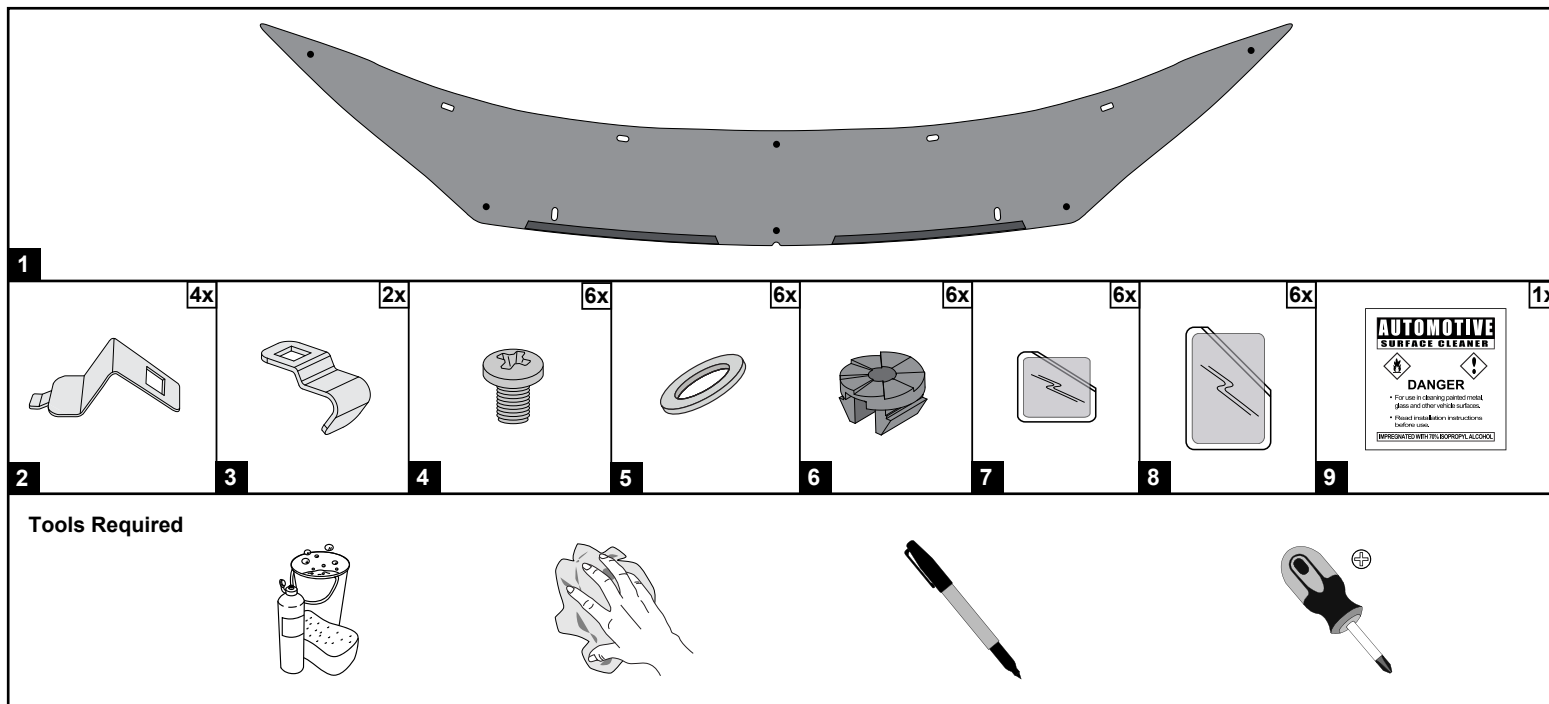



INSTALLATION INSTRUCTIONS

2

Trial fit the Nose Cone Protector centrally onto the front fascia (1).



Note the areas of the front fascia that corresponds to the four top slots in the Nose Cone Protector (2).

Note the area of the front fascia that corresponds to the two lower slots in the Nose Cone Protector (3).

Note the areas of the front fascia that corresponds to the six bumpers attached to the Nose Cone Protector (4).

Mark these positions on the front fascia with a non-permanent felt pen or pencil.



Remove the Nose Cone Protector.

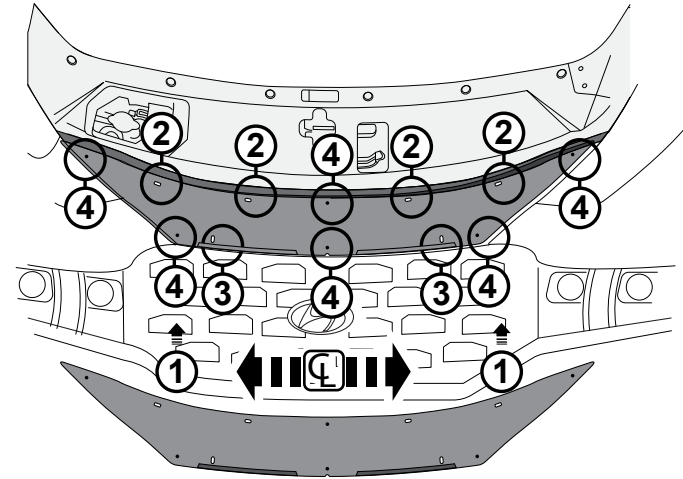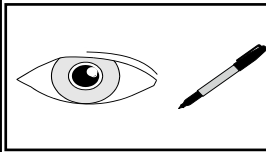

3

Clean the previously marked positions with the alcohol wipe provided. Allow to dry.


At the metal clip positions adhere the medium abrasion resistant tape over the nosecone.

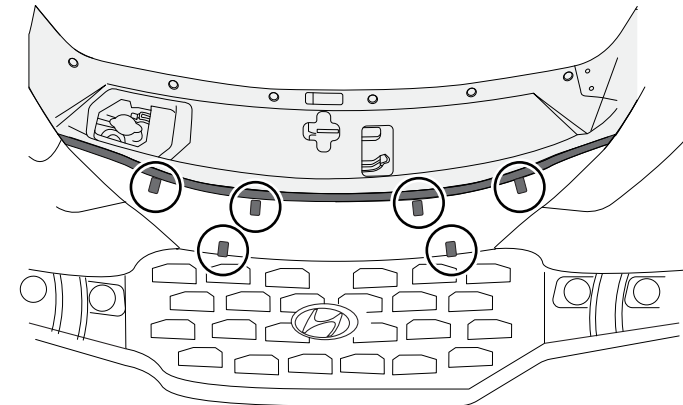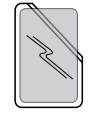

4

Clean the previously marked bumpon positions with the alcohol wipe provided. Allow to dry.

At the bumpon positions adhere the small abrasion resistant tape over the nosecone.

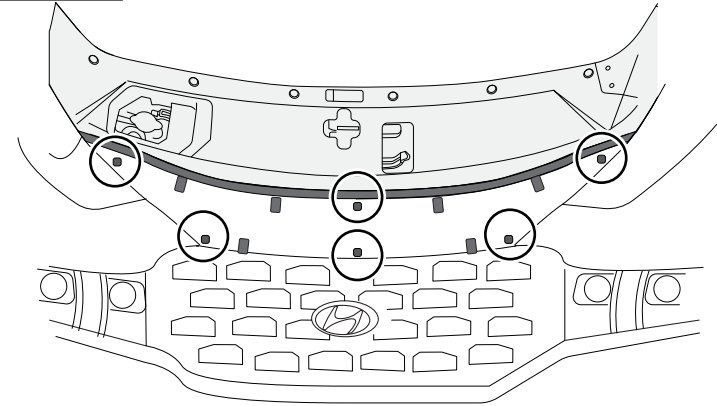

5

Fit the nut inserts into the square slots of the top metal clips.


Carefully unclip the rubber seal from the mouting holes at the noted locations.

Remove the plastic retaining clips from the rubber seal at each of the noted locations and discard.

Slide the clips under the rubber seal and engage the small tongue at the end of the clip with the round hole. Push the clip down and replace the rubber seal back to its original position.

IMPORTANT: Install Nut Inserts by hand. Do not use tools.

IMPORTANT: Ensure that the metal clips are positioned over the Abrasion Resistant Tape and do not come into contact with the nosecone surface.

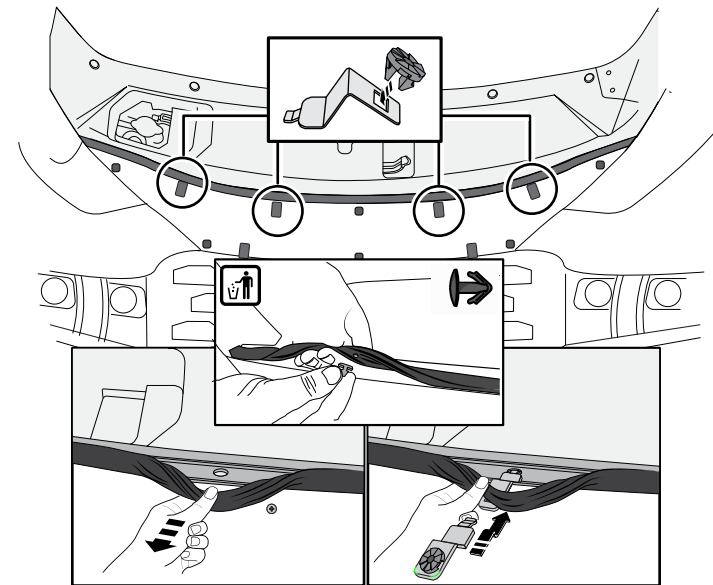




INSTALLATION INSTRUCTIONS

6

Fit the nut inserts into the square slots of the lower metal clips

Hook the lower metal clips under the bottom lip of the fascia

IMPORTANT: Install Nut Inserts by hand. Do not use tools.

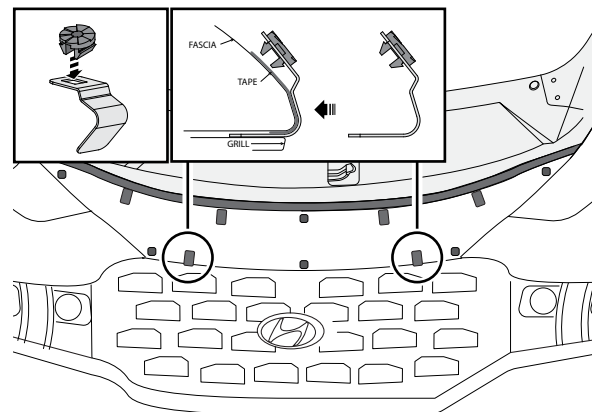



7

Re-fit the Nose Cone Protector by centrally aligning on the vehicle(1).

Fasten the Nose Cone Protector at the top four metal clips with the screws and washers(2) provided.

IMPORTANT: Do not overtighten screws.

IMPORTANT: Ensure the clips rest over the abrasive resistant tape and do not come in contact with hood paint work. Failure to do this may result in permanent paint damage.

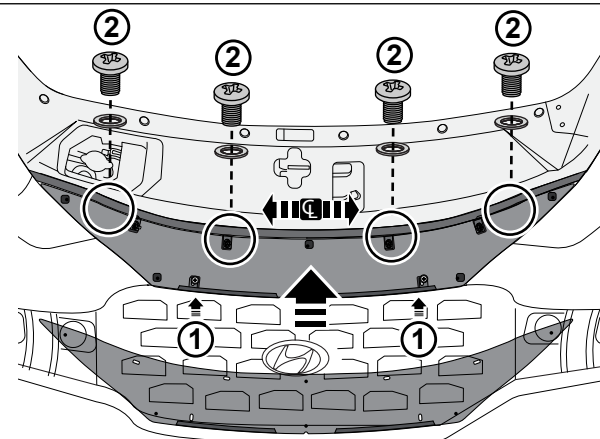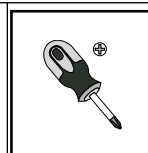

8

While applying downward pressure to the Nose Cone Protector, tighten the two bottom metal clips.

Ensure the screw is as close to the top of the Nose Cone Protector vertical slot as possible.

