

Jeep JL/JT Element Window Visor Installation instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: **1-800-247-3974**
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.

Front Visor Installation

1. Lower front window into the down position. The key will need to be in the accessory position.
2. Determine which visor corresponds with the driver and passenger side doors. Start on either side of the vehicle as the same steps are repeated for the other side.
3. Before removing the tape liner, test fit the visor to ensure proper alignment.
4. Insert the top edge of the visor into the weather stripping. Work the edge of the visor into the weather stripping starting from the top edge.
5. To insert the lower edge of the visor into the channel, lift up and push back on the edge of the window visor, moving it up and over the window trim.

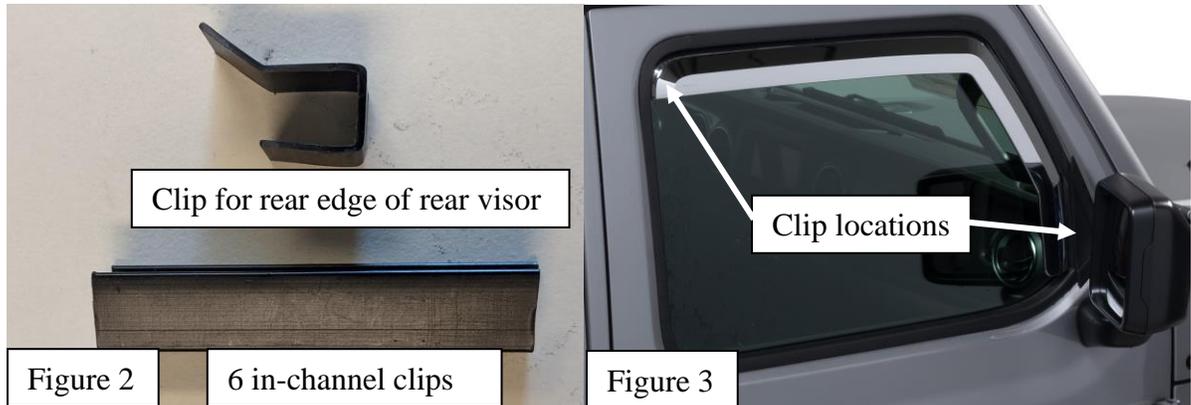


Figure 1

5. To insert the lower edge of the visor into the channel, lift up and push back on the front edge of the window visor, moving it up and over the window trim.
6. After you have test fit the visor. Remove the tape liner and repeat steps 4-6.

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

7. Once the visor is installed grab 2 of the 6 in-channel support clips. The clip installs in the channel directly on the backside of the visor in the back corner and in the front edge. As seen in figure 3.



8. Once the clips are installed roll up the window and allow the visor to cure for 12-24 hours before use.
9. Repeat steps 3-8 for the other front visor.

Rear Visor Installation


1. Determine which visor corresponds with the driver and passenger side rear doors. Start on either side of the vehicle as the same steps are repeated for the other side.
2. Lower rear windows into the down position. Test fit visors in window track to determine proper alignment.
3. Remove visor and wipe down weather-strip with rubbing alcohol that meets window visor.



4. Remove the tape liner and place the rear visor into the channel. Place inner corner in position and swing rear up being careful not to contact the weather-strip with the tape until in position.

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

5. Once the visor is installed grab 1 of the in-channel support clips. The clip installs in the channel directly on the backside of the visor in the front edge of the window.

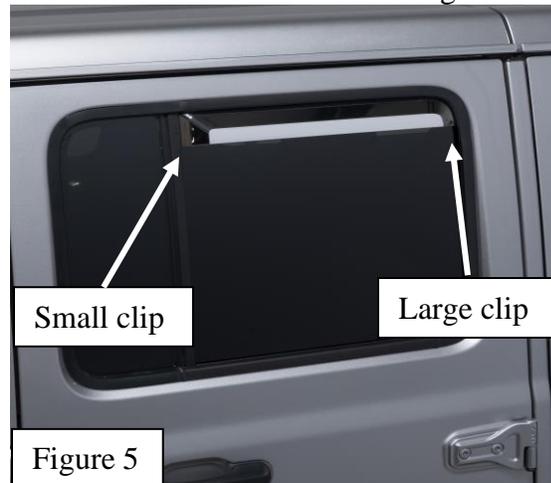

6. The small in channel clip should be installed in the rear edge of the visor with the tab going away from the vehicle and pressing on the inside edge of the visor as seen in figure 6. This figure shows the clip just before pushing it behind the backside of the visor.



7. Roll up the window until the visor is fully seated. Allow 12-24 hours for the tape to cure before use.
8. Repeat steps 2-7 for the other rear visor.

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.