


HARDWARE DESCRIPTION		QTY.
HWKT-05682X		
FLBW-00894X	M8-1.25 X 30MM CLASS 8.8 FLANGE CAP SCREW W/WASHER	8

PARTS INCLUDED	QTY
Driver Side	1
Passenger side	1

DO NOT USE IMPACT TOOLS




Step 1: Locate the driver side step rail.

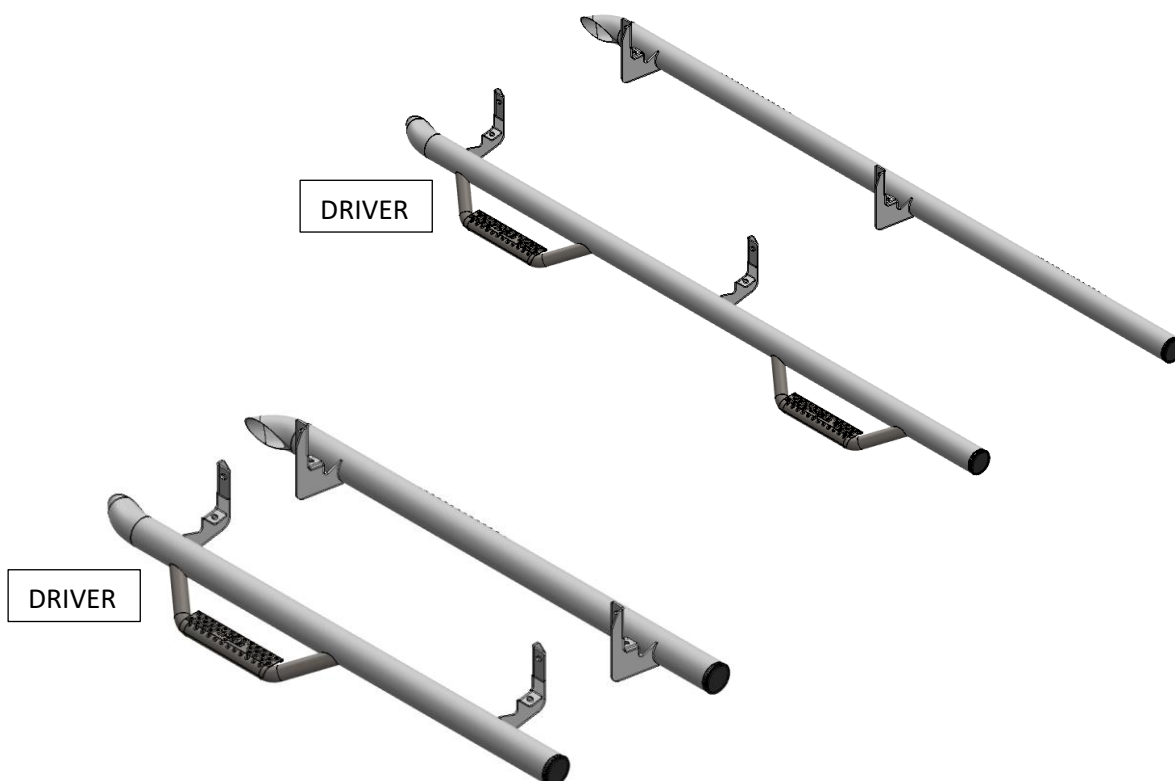

Step 2 Carefully raise the Nerf Step up into position aligning the mounting brackets with the factory-threaded holes. Beginning with the front bracket start one of the supplied M8x30mm Hex bolts in the upper mount and do the same with the rear bracket.

Step 3 Next, start all remainder hardware in the factory locations and leave loose.

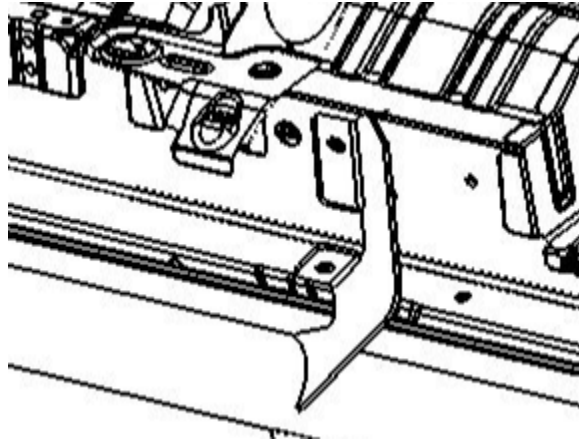

Step 4 After final adjustment tighten the two lower mounts first then the upper mounts.

Step 5: Repeat steps 2-4 for the passenger side.

