



2023+ Chevy Colorado ZR2 Installation Instructions












Manufacturer warranty covers material defects on new, never installed parts. Once installed, all replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to flaps. **Check for sufficient exhaust, wheel, suspension clearances.**

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools 10mm/11mm wrench, Phillips screwdriver, Pick.

Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

CONFIRM PARTS & QUANTITIES BEFORE INSTALLATION		
MUD FLAP KIT PN MF141 SEE PAGE 3	PART DESCRIPTION	QUANTITY
MF141-LF	LEFT FRONT	1
MF141-RF	RIGHT FRONT	1
MF141-RE-TOP	REAR TOP	2
MF85-LF-BOT 	LEFT REAR BOTTOM	1
MF85-RF-BOT 	RIGHT REAR BOTTOM	1
BRACKET KIT PN BMF141		
BMF141 	BRACKET FRONT	2
HARDWARE KIT PN HMF141		
.5SP 	SPACER	2
1.5SS6TR 	SCREW	4
BLKNUT 	NUT	16
HXBLT 	BOLT	16
RACLP 	CLIP	4
SMWASH 	WASHER	36

Do not fully tighten fasteners until flaps are aligned to vehicle.

FRONT FLAP Access interior wheel well by turning steering wheel towards the installation side.

Parts x 1 Flap → 1 x BMF141; 1 x .5SP; 2 x 1.5SS6TR; 4 x BLKNUT; 4 x HXBLT; 1 x RACLP; 10 x SMWASH

IMAGE A If equipped, remove factory splash guards. Remove fasteners 1 & 2. Clean mounting area.

IMAGE B Gently curve, not bend, corner of BMF141 towards rear of vehicle. Repeat as needed so flap contours to vehicle.

IMF141



2023+ Chevy Colorado ZR2 Installation Instructions

IMAGE C Assemble BMF141 to MF141-LF/RF with SMWASH & HXBLT on logo-side and SMWASH & BLKNUT on tire-side mounts 3 - 6.


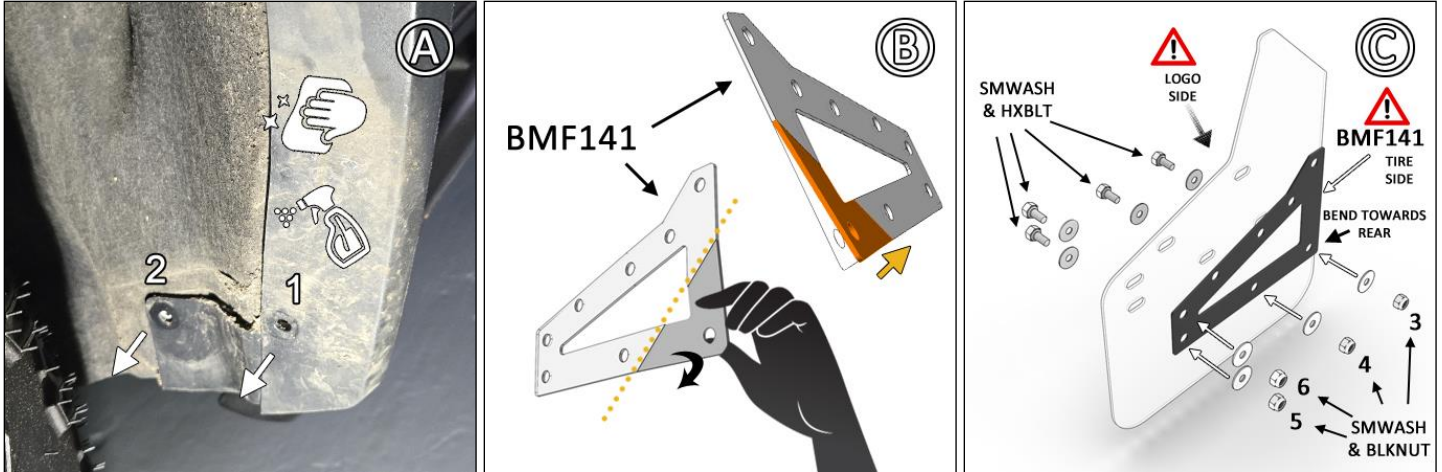


IMAGE D/E Place logo-side of flap facing rear bumper. Install SMWASH & 1.5SS6TR into mounts 1 & 2. 5SP mounts behind flap mount 2. Align flap to vehicle before tightening fasteners.

IMAGE F Clip RACLP over top end of flap and fender flare.

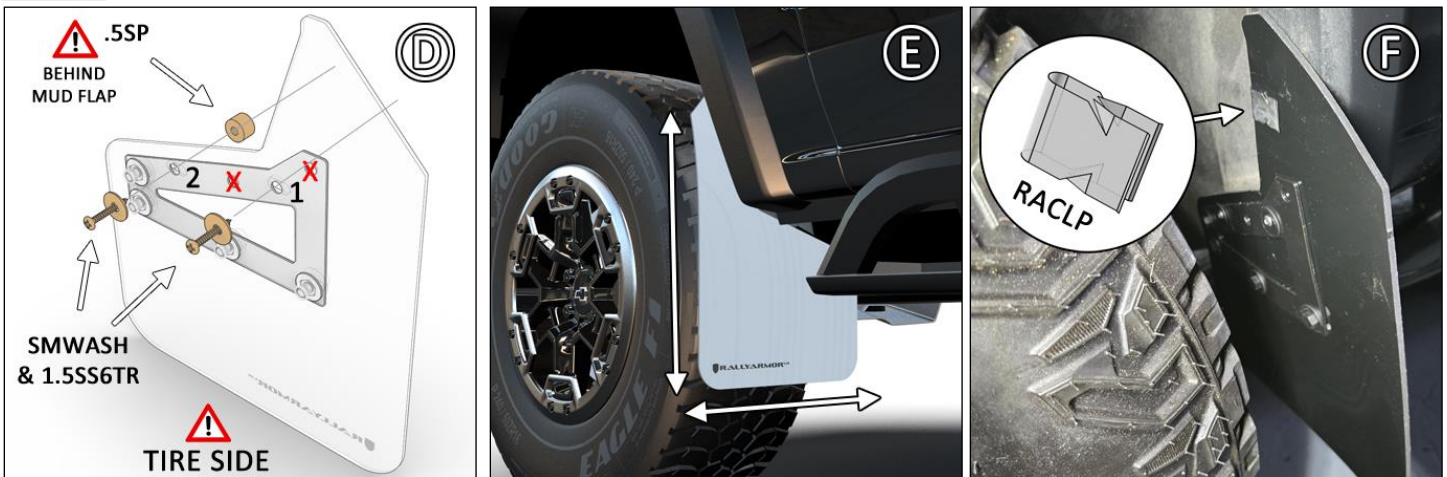

REAR FLAP Parts x 1 Flap → 4 x BLKNUT; 4 x HXBLT; 1 x RACLP; 8 x SMWASH

IMAGE G If equipped, remove factory splash guards. Temporarily uninstall/retain fasteners 1 - 3.

IMAGE H Assemble MF141-RE-TOP & MF85-LF/RF-BOT flap using SMWASH & HXBLT on logo-side and SMWASH & BLKNUT on tire-side.

IMAGE I Reinstall factory fasteners through mounts 1 - 3. Align flap. Install RACLP over top portion MF141-RE-TOP and fender flare.



2023+ Chevy Colorado ZR2 Installation Instructions

