

INSTALLATION INSTRUCTIONS

AT6 RUNNING BOARDS



APPLICATION:


2015-2025 CHEVROLET COLORADO CREW CAB, 2015-2025 GMC CANYON CREW CAB

PART NUMBER:

24-64015



ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1,2	2	STEP BAR, DRIVER(1) AND PASSENGER(2)	13MM SOCKET
3	8	MOUNTING BRACKETS	10MM SOCKET
4	16	M8 HEX CAP SCREW (YELLOW ZINC)	SOCKET EXT.
5	32	M8 FLAT WASHER (YELLOW ZINC)	6MM HEX KEY
6	32	M8 SPLIT LOCK WASHER (YELLOW ZINC)	RATCHET
7	16	M8 U-CLIP NUT (YELLOW ZINC)	TORQUE WRENCH
8	16	M8 SQUARE HEAD SCREW (YELLOW ZINC)	
9	16	M10 INTERNAL TOOTHED LOCK WASHER (YELLOW ZINC)	
10	16	M10 FLAT WASHER (YELLOW ZINC)	
11	16	M10 BUTTON HEAD SCREW (YELLOW ZINC)	
12	16	M6 HEX HEAD CAP SCREW (YELLOW ZINC)	
13	32	M6 FLAT WASHER (YELLOW ZINC)	
14	16	M6 NYLON NUT (YELLOW ZINC)	
15	8	PLASTIC BRACKET COVER	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

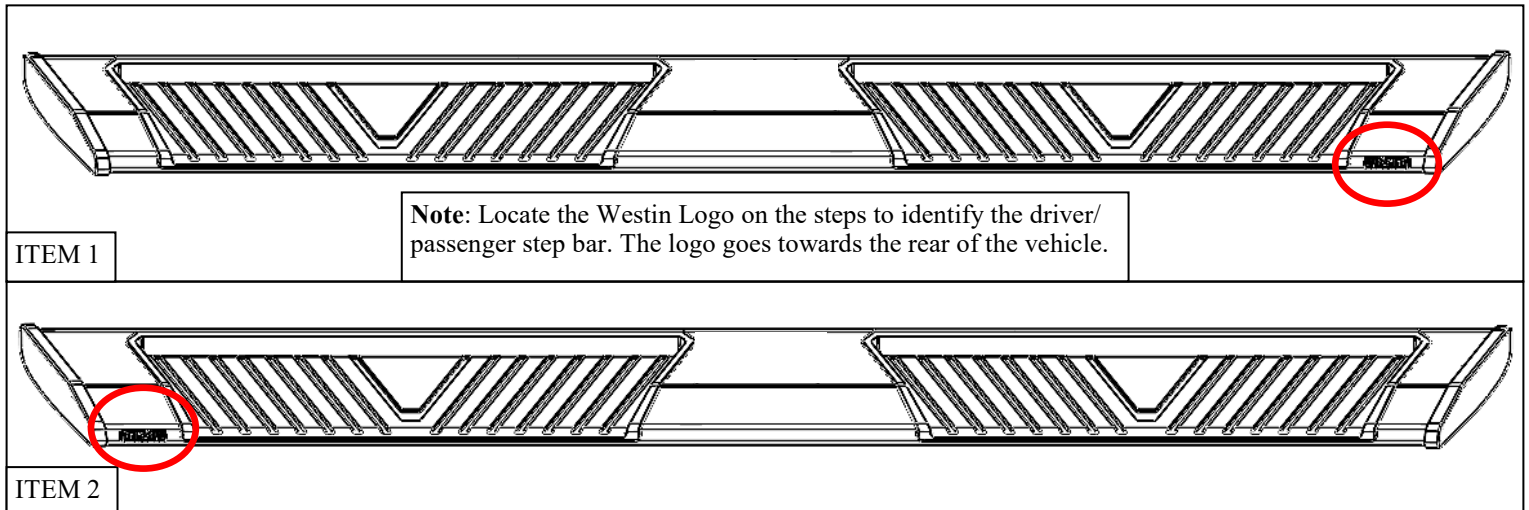



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com

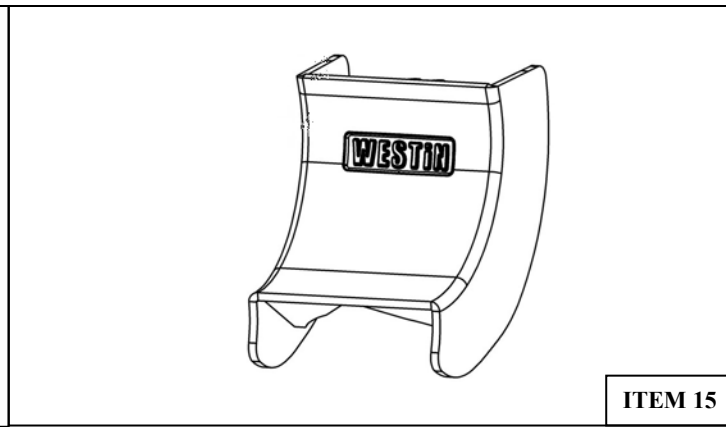
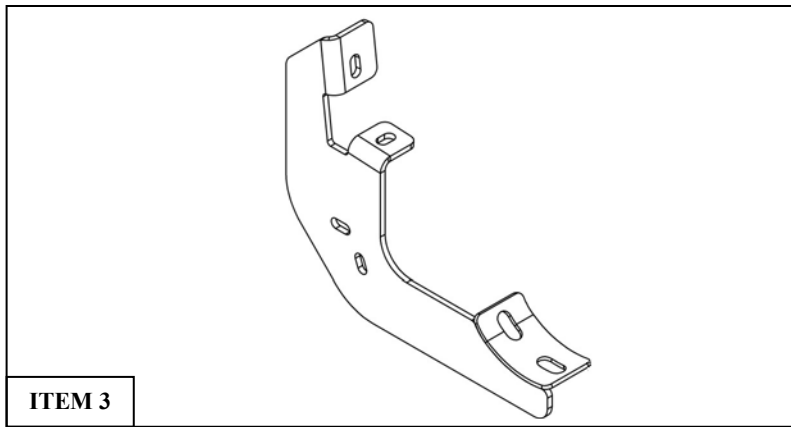


PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.
2. If vehicle has plastic covers, remove the designated covers where mounts will be placed from the rocker panel, see **Figure 1**.
3. Install M8 u-clip nuts in the holes where the plastic covers were removed, see **Figure 2**. **Note:** See **Figure 7** for placement of all designated u-clips (Item 7).

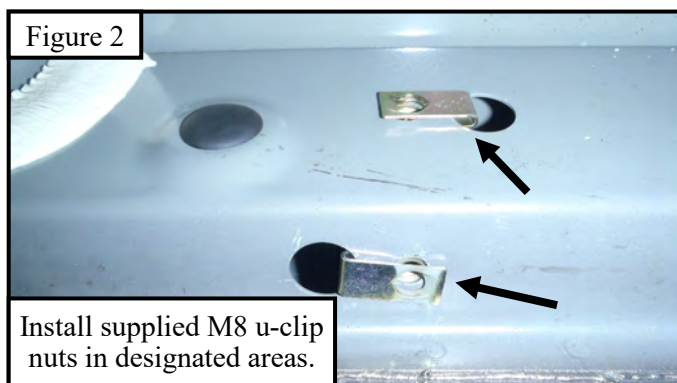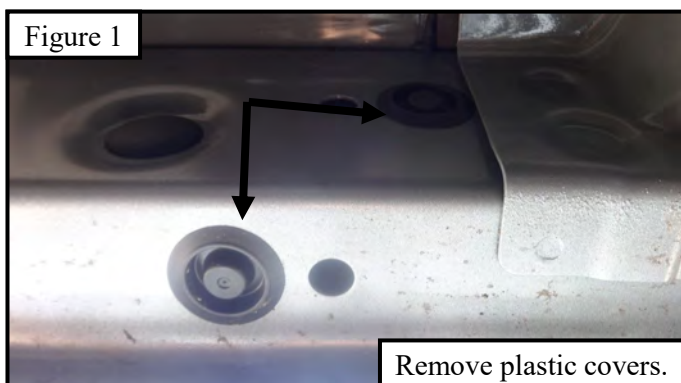


4. Loosely install mounting brackets to the previously installed M8 u-clips with supplied M8 hardware. See **Figure 3**.
5. Locate (1) plastic bracket cover (Item 15) and loosely install one to each of the (4) mounting brackets using the provided hardware: (2) M6 hex head cap screws, (4) M6 flat washers, and (2) M6 nylon nuts. Repeat for the other side of the vehicle every bracket. See **Figure 4**.
6. Align and adjust as necessary then torque hardware: M6 to 7 - 8 ft-lbs.

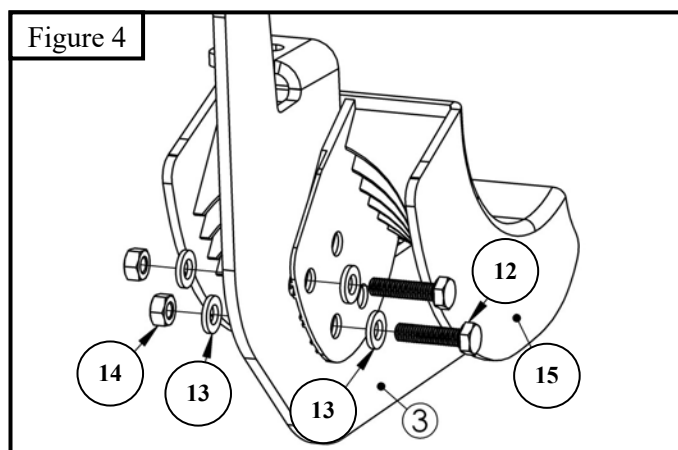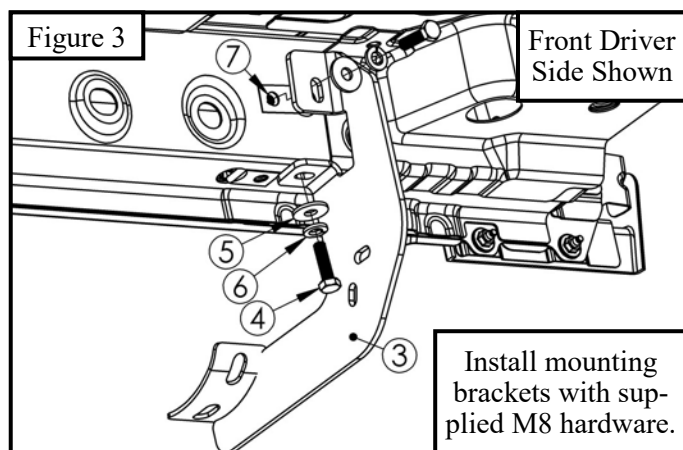


Textured Black Aluminum AT6 Running Boards

7. Slide (4) M8 square head screws (Item 8) into each of the rails underneath the running board. A total of (8) M8 square head screws should be in the running board. See **Figure 5**.
8. Loosely install the Textured Black Aluminum AT6 Running Board to the previously installed mounting brackets using the supplied M8 flat washers, M8 split lock washers, and M8 hex nuts.
9. Align and adjust as necessary then torque hardware : M8 to 15 - 18 ft-lbs

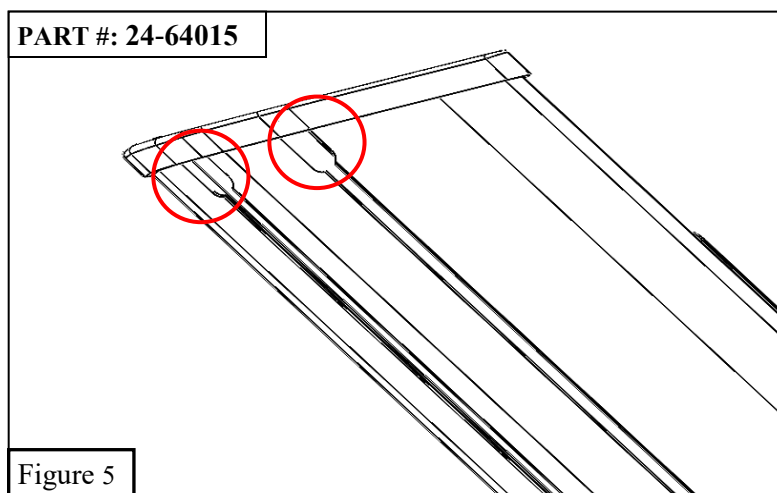


Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com

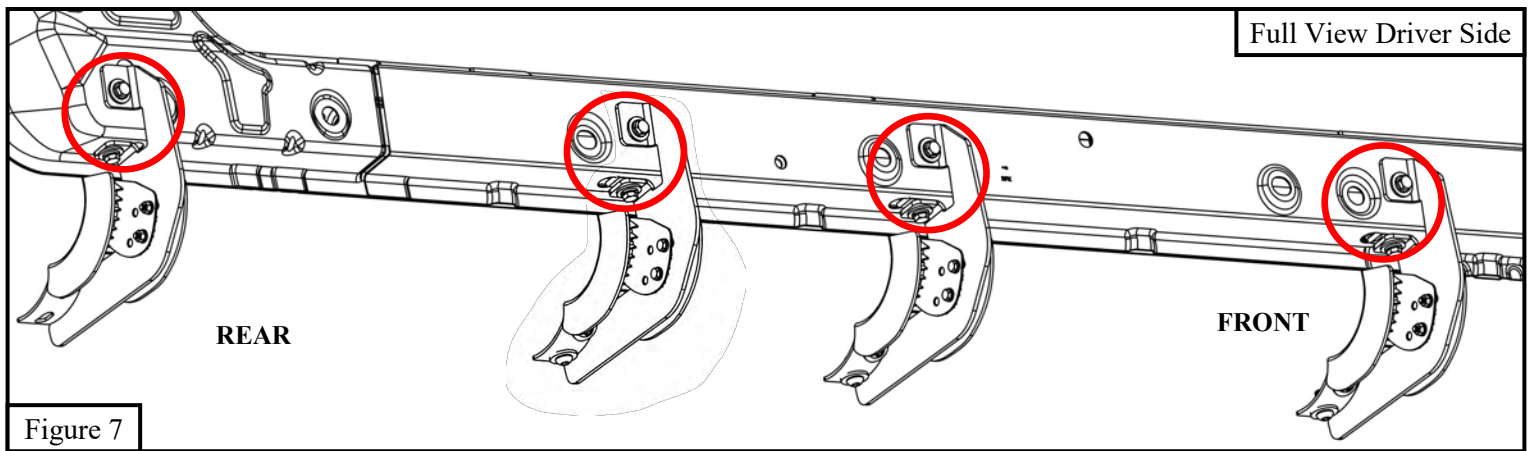

INSTALLATION COMPLETE

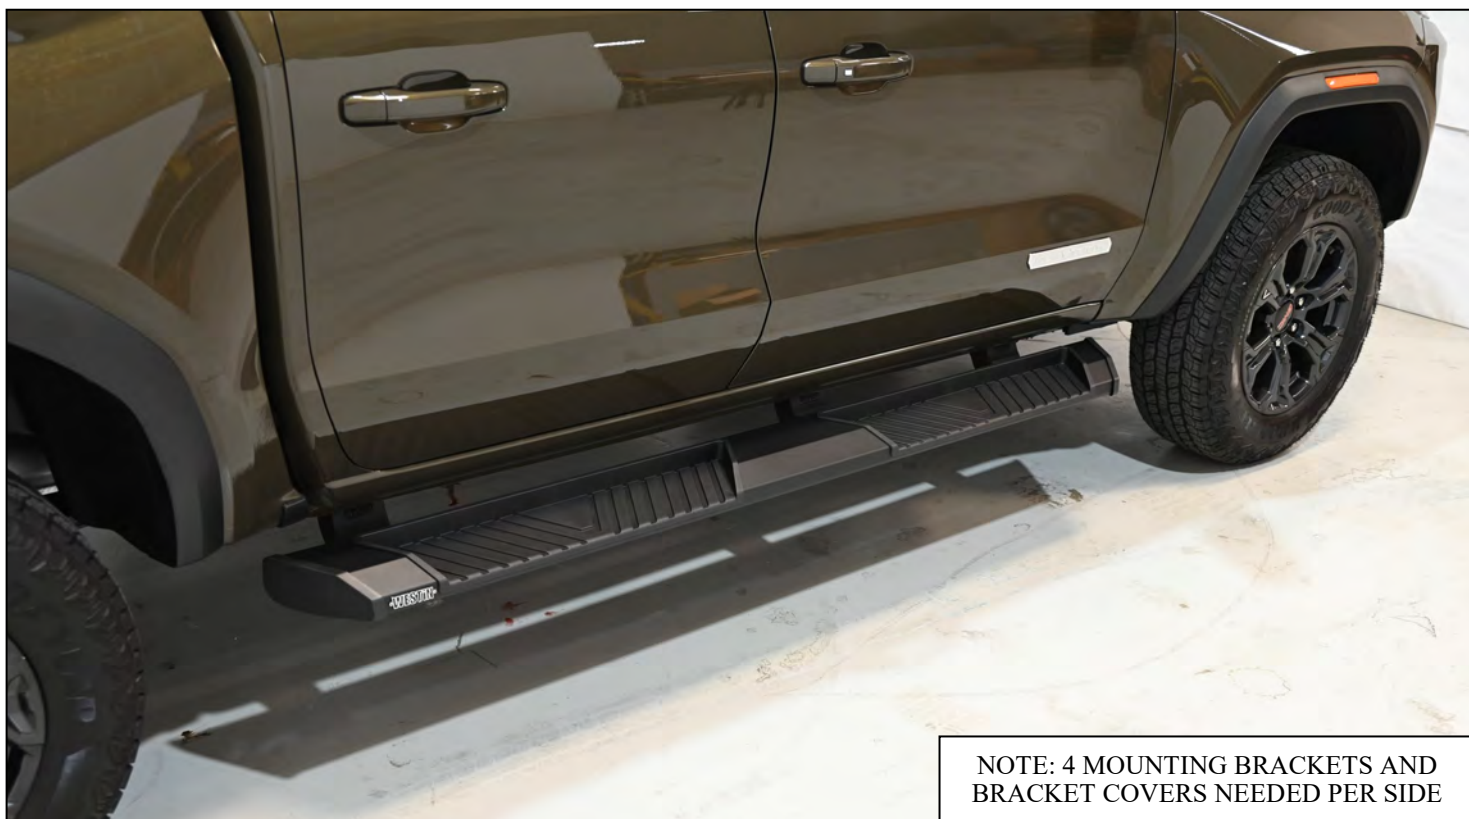

NOTE: 4 MOUNTING BRACKETS AND
BRACKET COVERS NEEDED PER SIDE

CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773