



INSTALLATION INSTRUCTIONS

OUTLAW DROP RUNNING BOARDS


APPLICATION:

Ford Bronco 4dr 2021-2025 (Excl. Bronco Sport)


PART NUMBER:

20-44195


CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	DRIVER STEP BAR ASSEMBLY	15MM SOCKET
2	1	PASSENGER STEP BAR ASSEMBLY	16MM SOCKET
3	1	DRIVER MOUNTING BRACKET "A"	16MM WRENCH
4	1	PASSENGER MOUNTING BRACKET "A"	RATCHET
5	2	DRIVER MOUNTING BRACKET "B"	TORQUE WRENCH
6	2	PASSENGER MOUNTING BRACKET "B"	
7	12	M10 HEX HEAD BOLT	
8	12	M10 FLAT WASHER	
9	12	M10 SPLIT LOCK WASHER	
10	12	M10 SERRATED FLANGE NUT	
11	12	M10 SERRATED FLANGED HEX HEAD BOLT	
ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING			

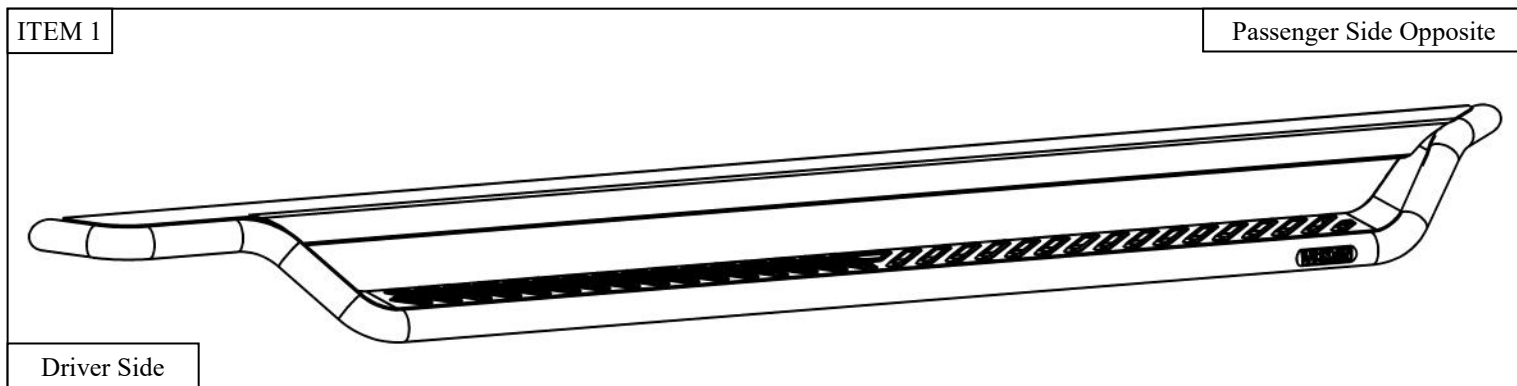

ITEM 3 - Passenger Side Opposite

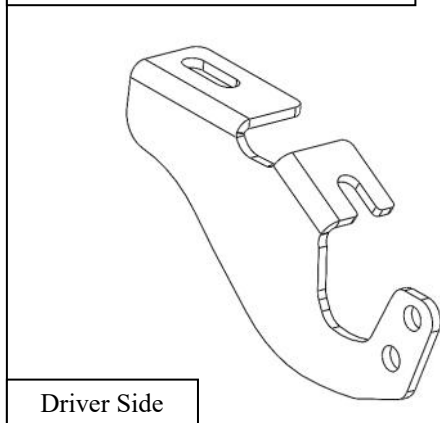

ITEM 5 - Passenger Side Opposite

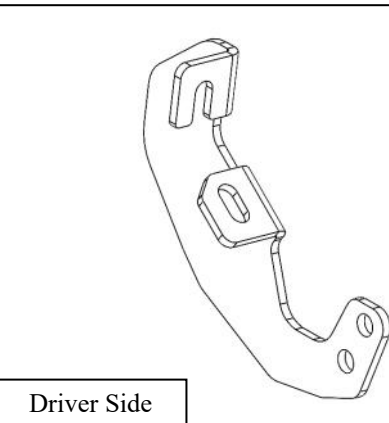

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773


Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com

PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.
2. Beginning on the driver side of the vehicle, remove (2) M10 OEM bolts (or plastic plugs) from each mounting location on the rocker panel if they are present. See **Figure 1**.
3. If any OEM mounting plates are present, remove them by removing the M10 bolt using a 15MM socket. See **Figure 2**.
Note: Factory rock sliders must be removed in order to install this product.


Driver Side 4 Door Rocker Panel Reference

Front →

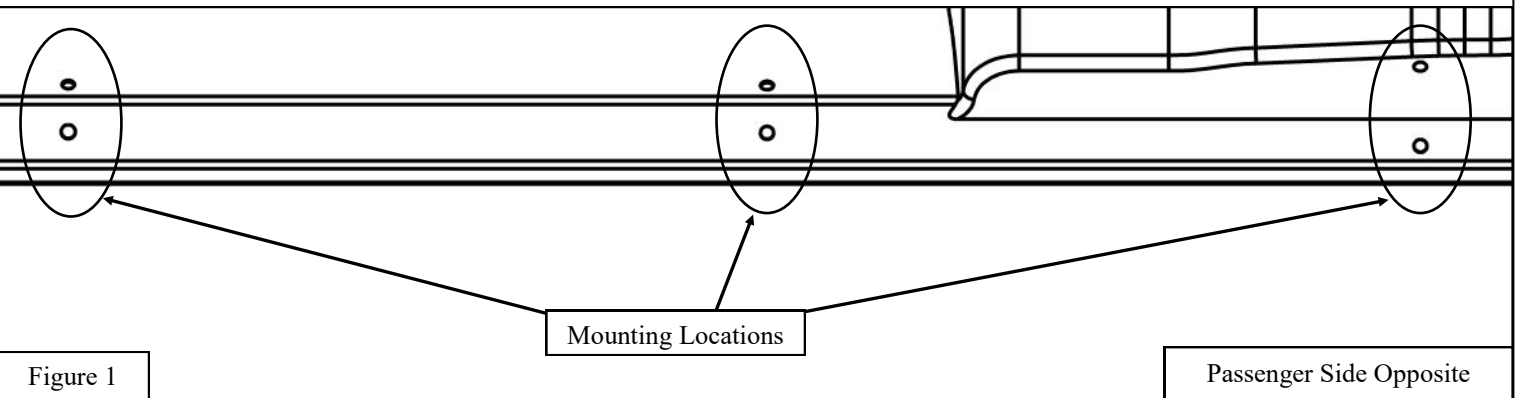


4. Loosely install (1) Driver Mounting Bracket "A" (Item 3) to the rocker panel using the supplied M10 hardware as shown in **Figure 3**. Please refer to **Figures 5 and 6** for bracket orientation and locations.
5. Loosely install (2) Driver Mounting Bracket "B" (Item 5) to the rocker panel using the supplied M10 hardware as shown in **Figure 4**. Please refer to **Figures 5 and 6** for bracket orientation and locations.
6. Repeat **Steps 2-5** on the passenger side of the vehicle.

Figure 3

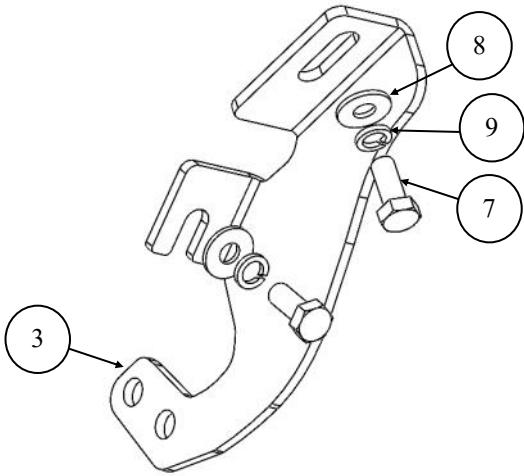

Driver Mounting Bracket "A" shown

Figure 4

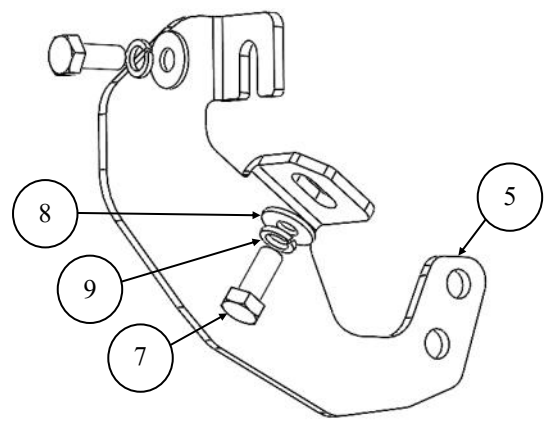

Driver Mounting Bracket "B" shown

Figure 5

Driver Side Shown



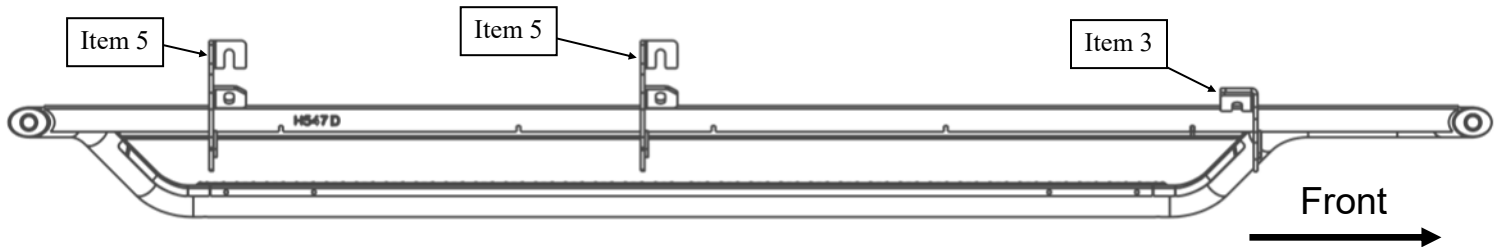


Figure 6

Passenger Side Shown

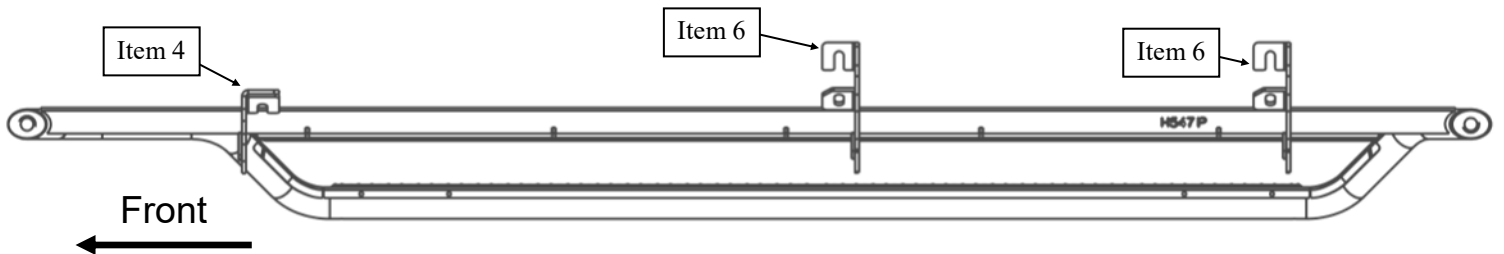

7. Use the supplied serrated M10 Hardware (Items 10 and 11) to attach the Outlaw Running Boards (Items 1 and 2) to the Mounting Brackets. See **Figure 7**.
8. Align and adjust the Outlaw Running Boards as needed. Tighten and torque all hardware as specified: M10 to 38 ft-lbs.

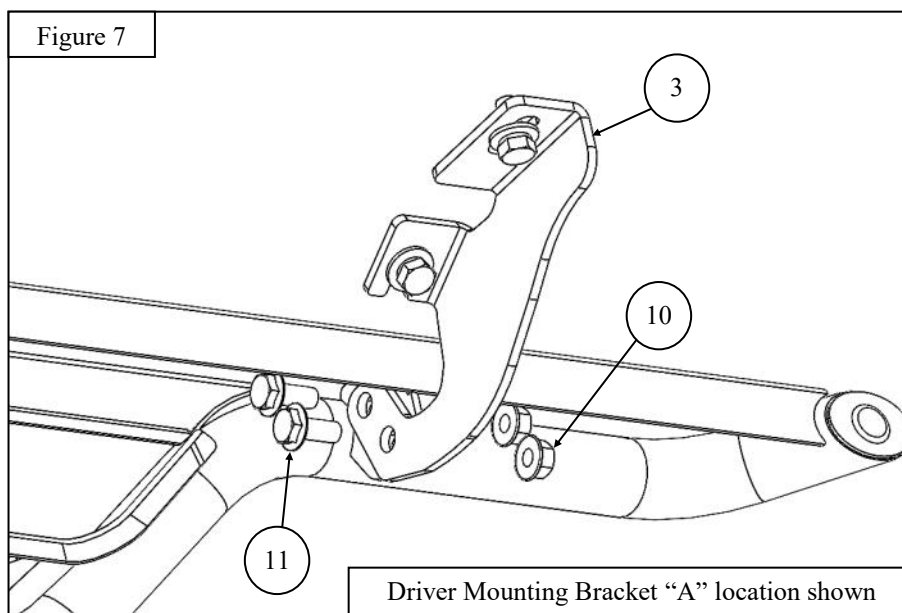

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

INSTALLATION COMPLETE



CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773