

INSTALLATION INSTRUCTIONS


OUTLAW DROP RUNNING BOARDS



APPLICATION: TOYOTA TACOMA DOUBLE CAB 2024

PART NUMBER: 20-42785


CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	STEP BAR ASSEMBLY DRIVER	13MM SOCKET
2	1	STEP BAR ASSEMBLY PASSENGER	15MM SOCKET
3	1	DRIVER BRACKET A	RATCHET
4	1	PASSENGER BRACKET A	
5	2	DRIVER BRACKET B	
6	2	PASSENGER BRACKET B	
7	12	M8 HEX HEAD BOLT	
8	12	M8 SPLIT LOCK WASHER	
9	12	M8 FLAT WASHER	
10	12	M10 SERRATED FLANGE HEX HEAD BOLT	
11	12	M10 SERRATED FLANGE HEX NUT	
ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING			

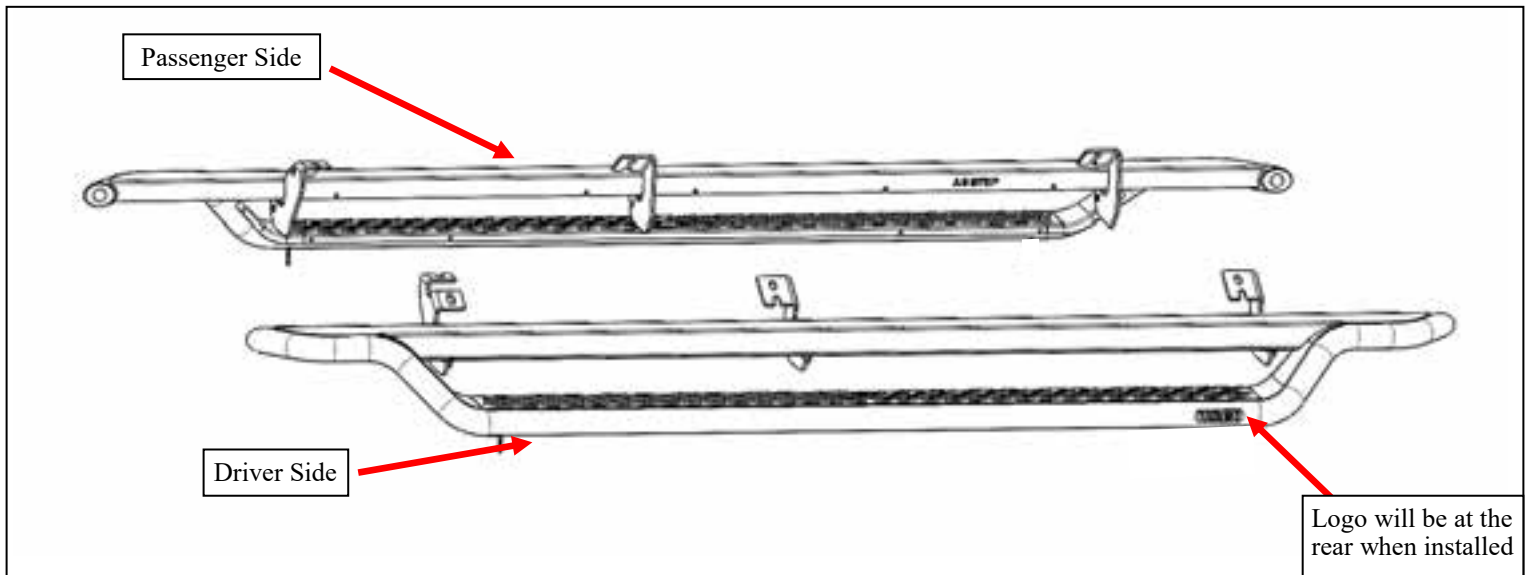

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com


ITEM 1

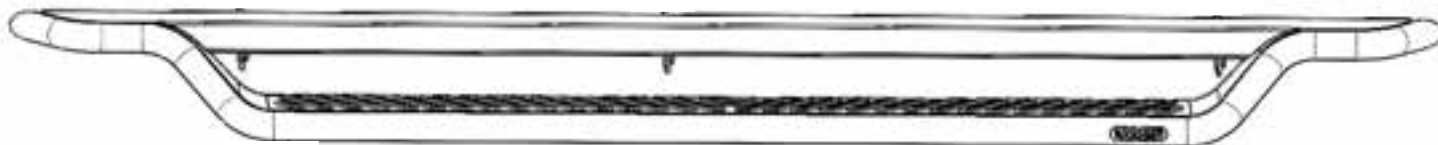

ITEM 2



ITEM 3

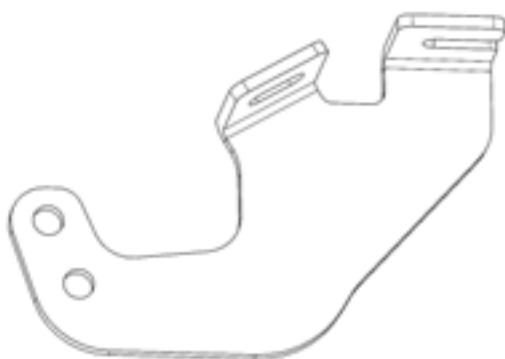


ITEM 4



ITEM 5



ITEM 6

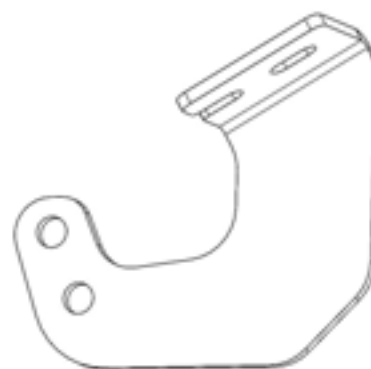

PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.




Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com


2. Locate the front mounting holes on the driver side of the vehicle and remove the factory bolts.
3. Loosely install Driver Bracket A (**item 3**) using the M8 hardware (**items 7-9**). See **Figure 1**.



4. Remove the factory hardware from the center and rear mounting holes.
5. Loosely install (1) Driver Bracket B (**item 5**) in the center mounting location using the M8 hardware (**items 7-9**). See **Figure 2**.
6. Loosely install (1) Driver Bracket B (**item 5**) in the rear mounting location using the M8 hardware (**items 7-9**).

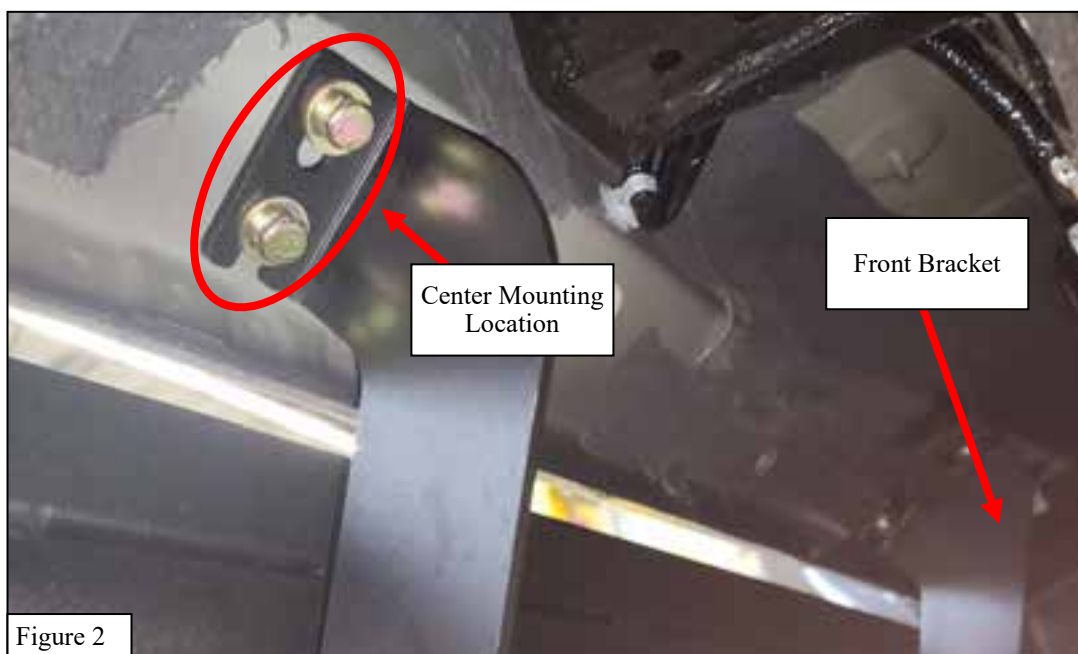

7. Repeat Steps 2-6 on the passenger side of the vehicle.
8. Using the M10 hardware (**items 10 and 11**), loosely attach the Step Bar Assemblies (**items 1 and 2**) to the brackets. See **Figure 3**
9. Align and adjust the running boards and brackets as needed. Tighten and torque all hardware as specified: M8 hardware to 15-18 ft-lbs, M10 hardware to 35-38 ft-lbs.

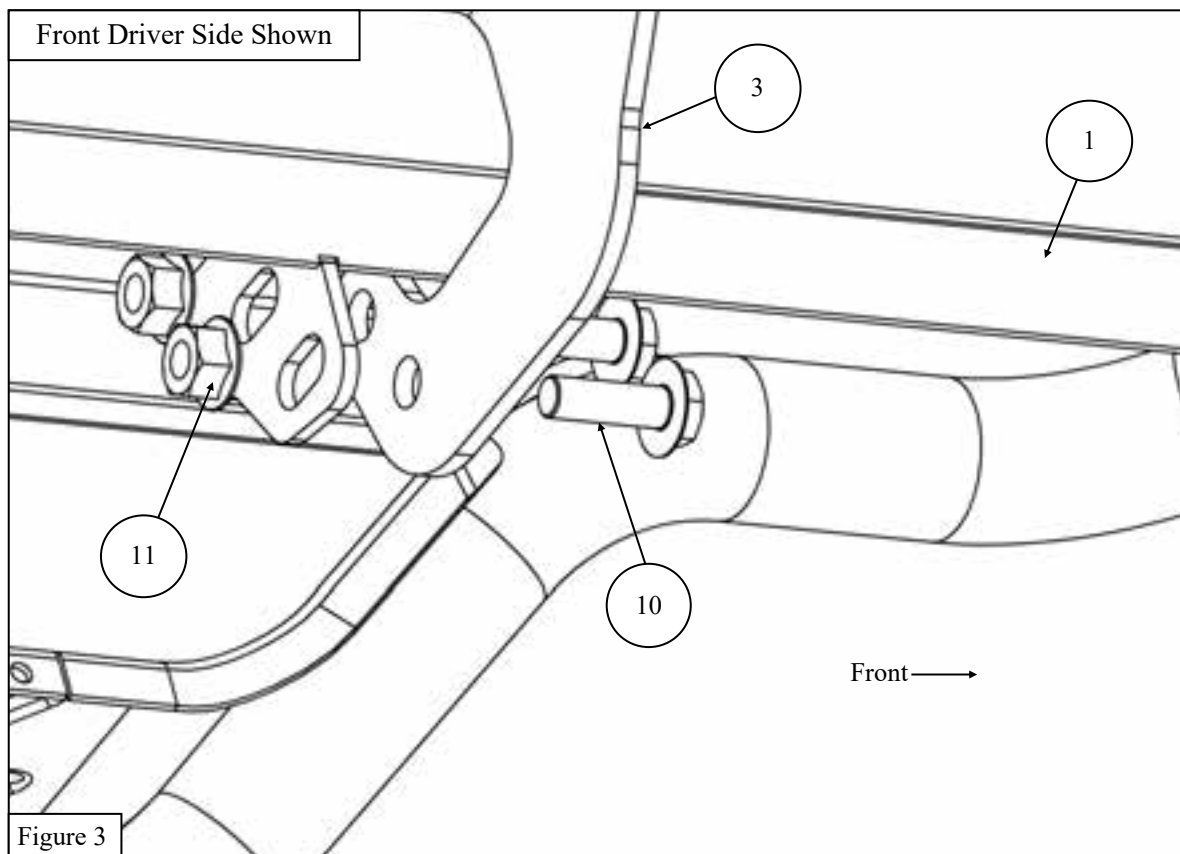

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

INSTALLATION COMPLETE



CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.

WESTIN

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com