



2026+ Subaru Trailseeker, E-Outback & Toyota bZ Woodland Installation Instructions






Manufacturer limited-warranty covers material defects on new & never installed parts. Customer is responsible for installation, usage, and replacement part costs. Caution against blind spots during parking. Avoid curbs and compression to flaps. **Ensure sufficient exhaust, wheel, suspension clearances.**

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SUBMIT ORDER RECEIPT OR VEHICLE PHOTO to rallyarmor.com/support

Recommended Tools Low-profile/offset/ratcheting/flat, Phillips screwdrivers, 10 & 11mm wrenches, pick, isopropyl alcohol & utility razor. **Install on even surface. Use hand tools, not powered. AVOID OVERTIGHTENING HARDWARE.**

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may have superficial surface marks that blend into the material over time. These **visual variations** do not affect construction or performance.

MUD FLAP KIT PN MF156		PART DESCRIPTION	QUANTITY
MF156-LF		LEFT FRONT	1
MF156-RF		RIGHT FRONT	1
MF156-LR		LEFT REAR	1
MF156-RR		RIGHT REAR	1
BRACKET KIT PN BMF156			
BMF92-1		BRACKET LEFT REAR	1
BMF92-2		BRACKET RIGHT REAR	1
BMF156-1		BRACKET REAR	2
HARDWARE KIT PN HMF156			
.25SP		SPACER	4
1SS		SCREW	4
1.5SS		LONG SCREW	2
1.5SS#8		THIN SCREW	2
BLKNUT		NUT	2
HXBLT		BOLT	2
INS3		INSERT	2
INS9		INSERT 2	2
SMF29-1		FOAM SPACER	2
SMWASH		WASHER	12
SSLNUT		LOCK NUT	4
UNUT2		CLIP	4



2026+ Subaru Trailseeker, E-Outback & Toyota bZ Woodland Installation Instructions

Do not fully tighten fasteners until mud flaps are completely aligned to vehicle.

FRONT FLAP Turn steering wheel towards installation side to access interior wheel well.

Mount Rally Armor logo printed side of flap facing rear bumper.

Parts x 1 Flap → 2 x .25SP; 2 x 1SS; 1 x 1.5SS; 1 x SMF29-1; 3 x SMWASH; 2 x UNUT2

IMAGE A Remove factory fasteners 1 – 3. Temporarily remove/keep under-vehicle fastener 4.

IMAGE B Move liner aside. Install UNUT2 on **REAR METAL** portion of mount.

IMAGE C Install UNUT2 on fender mount **BEHIND** rocker panel. Replace liner


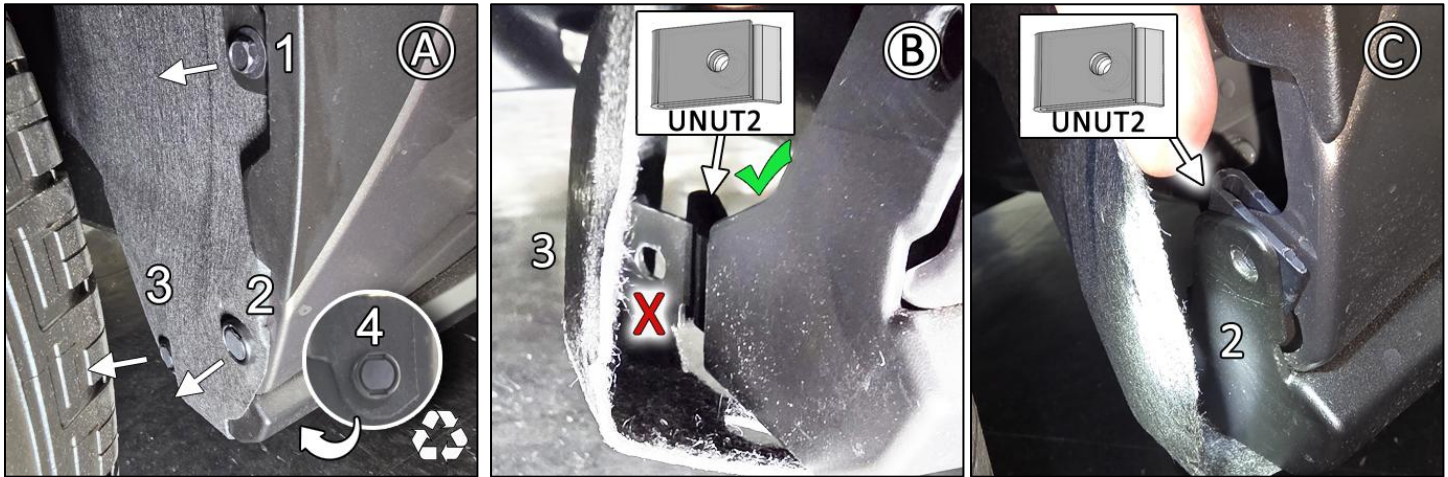


IMAGE D Remove backing from SMF29-1 by dabbing isopropyl alcohol over paper side, then adhere to .25SP.

IMAGE E .25SP mounts directly over liner mount 1 and SMF29-1 & .25SP over liner mount 3, behind flap. Reinstall factory fastener in mount 4.

IMAGE F Place flap against liner. Install SMWASH & 1SS into mounts 1 & 2 and SMWASH & 1.5SS into mount 3. Ensure flap is aligned to vehicle. Adjust preferred width before tightening fasteners flush to flap.

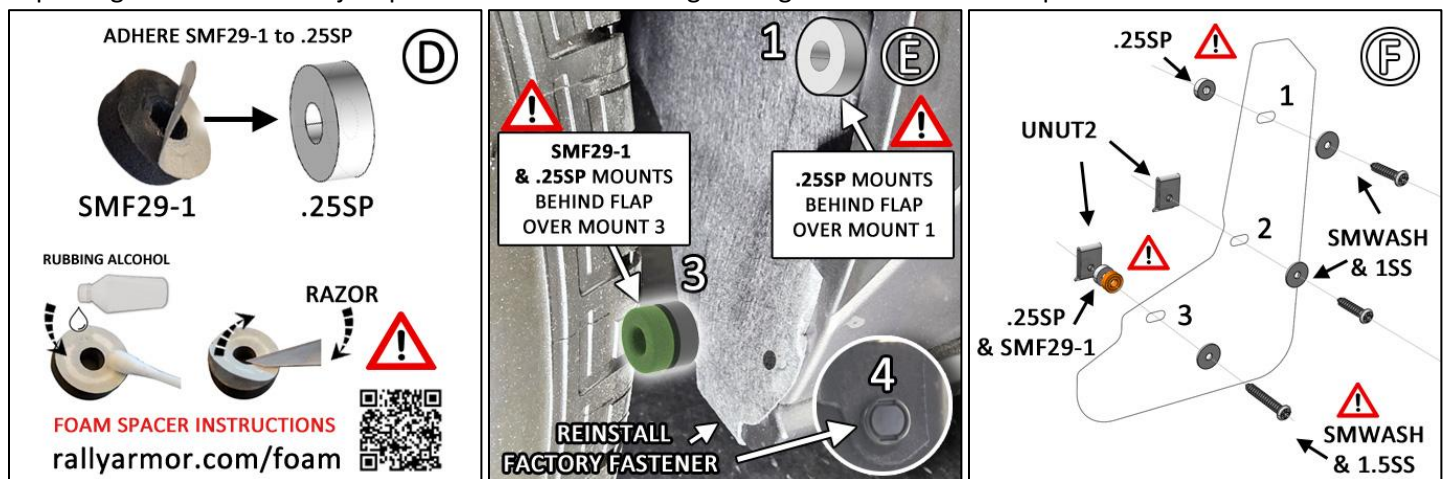

REAR FLAP Parts x 1 Flap → 1 x BMF92-1/2; 1 x BMF156-1; 1 x 1.5SS#8; 1 x BLKNUT; 1 x HXBLT; 1 x INS3; 1 x INS9;
3 x SMWASH; 2 x SSLNUT



2026+ Subaru Trailseeker, E-Outback & Toyota bZ Woodland Installation Instructions

Mount Rally Armor logo printed side of flap facing rear bumper.

IMAGES G/H Remove factory fastener 1 and under-vehicle fastener 2. Pull inner liner aside. Install INS9 into liner mount 2 only, **NOT OVER BUMPER**. Replace liner.


IMAGES H/I. Place BMF92-1/2 BETWEEN liner & bumper cover. Install SMWASH & 1.5SS#8 into under-vehicle mount 2.



IMAGE J Position BMF156-1 over no-logo side of flap, then place SMWASH & HXBLT through flap & bracket mount 3. Fasten SMWASH & BLKNUT onto reverse side of flap/BMF156-1 mount 3 - does not mount to vehicle.

IMAGE K Position flap & BMF156-1 against liner, no-logo side facing tire. Place INS3 into mount 1 but do not lock fastener yet. Fasten SSLNUT onto mounts 4 & 5.

IMAGE L Align flap to vehicle. Adjust preferred width before tightening washers flush to flap. Lock INS3 into mount 1.

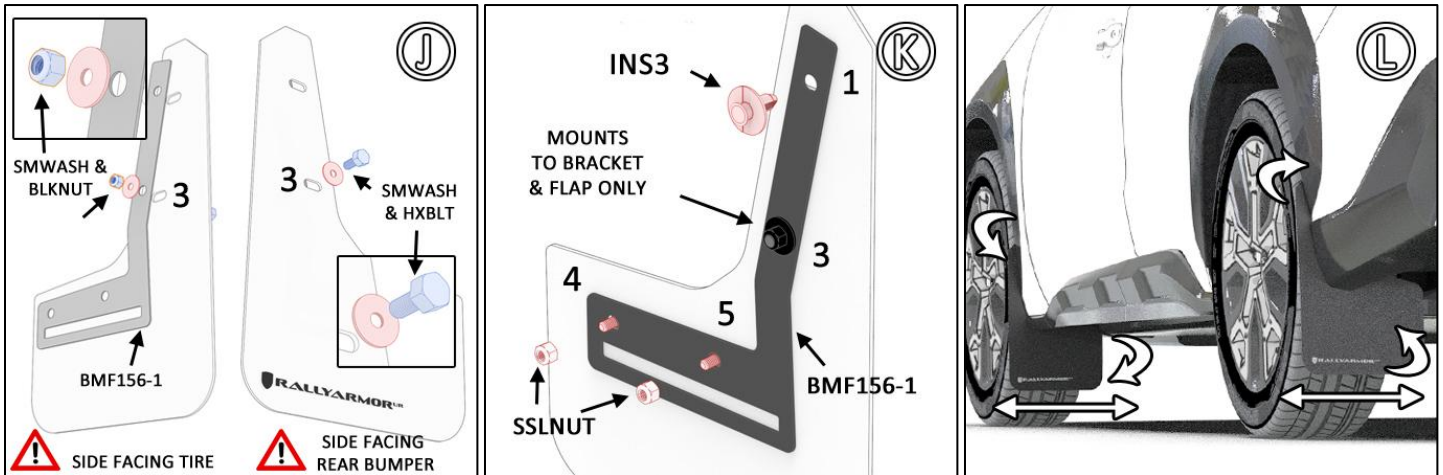

IMF156



2026+ Subaru Trailseeker, E-Outback & Toyota bZ Woodland Installation Instructions

