


# Guardian Comfort Full Bed Liner

## HONDA RIDGELINE BED LINER INSTALLATION INSTRUCTIONS

**WARNING: IMPROPER INSTALLATION WILL RESULT IN LINER FLYING OUT OF THE TRUCK! FOLLOW INSTRUCTIONS EXACTLY!**

1. Read all instructions before installing. THE TRUCK BED SURFACE TEMPERATURE SHOULD BE 68° F OR HIGHER IN ORDER FOR THE HOOK FASTENERS TO ACHIEVE MAXIMUM ADHESION. NEVER CONTAMINATE THE ADHESIVE BY TOUCHING IT WITH YOUR FINGERS.
2. Zip the front half of the Bed Liner floor to the bulkhead and sidewalls. Apply the hook fasteners to the Bed Liner before putting the Bed Liner into the truck bed. Do NOT remove the protective liner on the back of the hook fasteners at this time.
3. Apply the hook fasteners to the Bed Liner per Illustration 1.

### HOOK FASTENER LOCATIONS

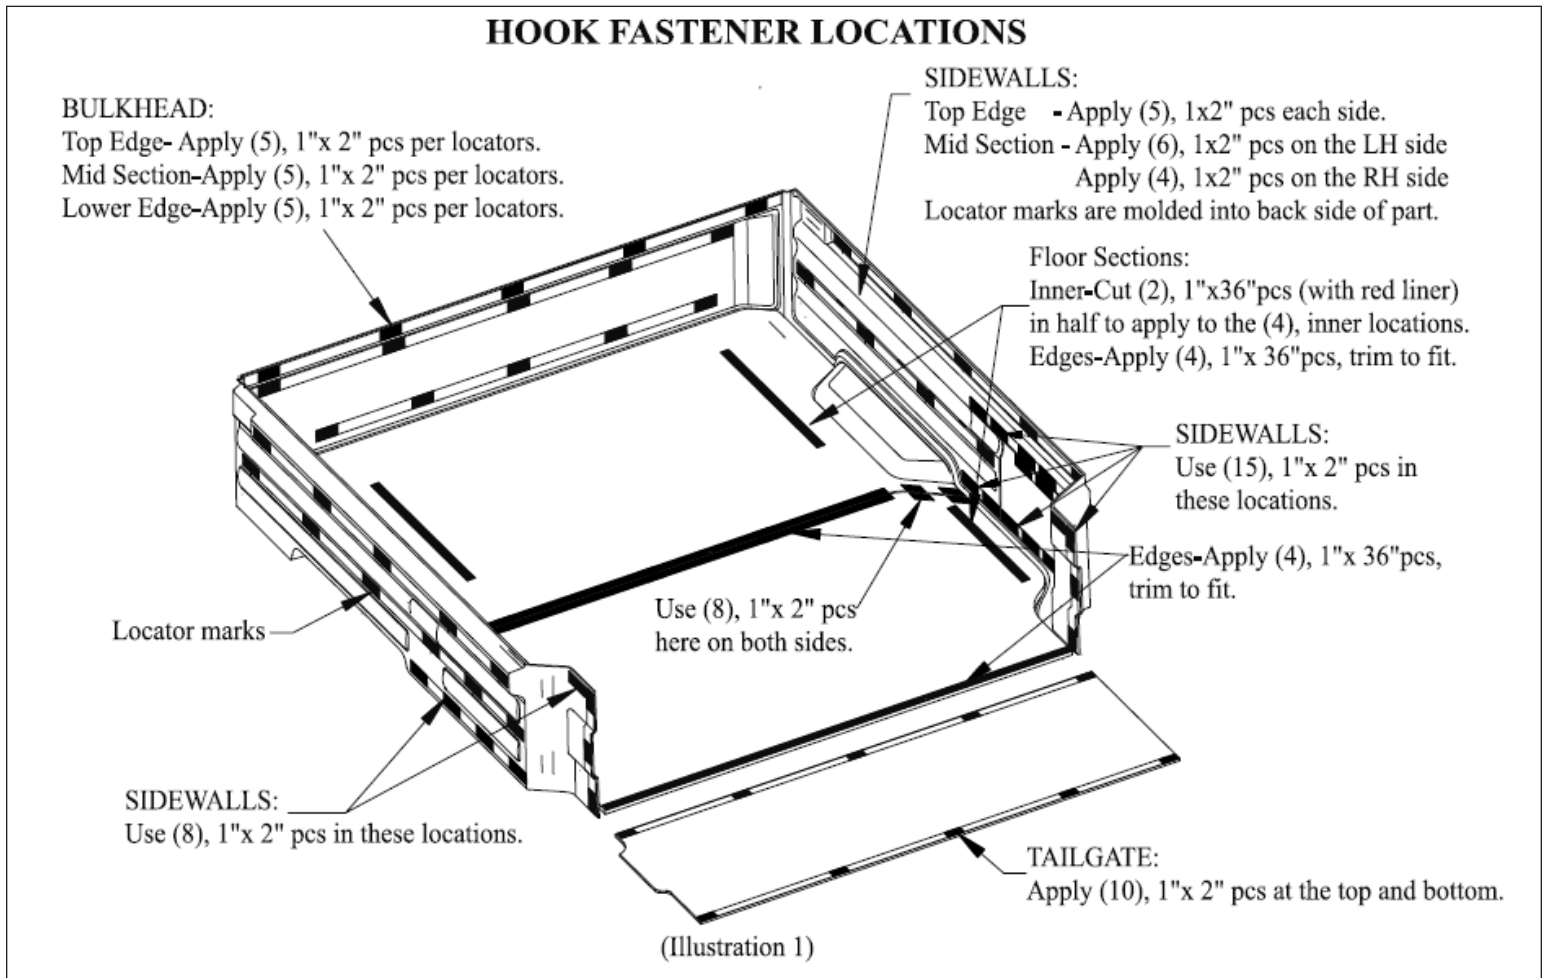

## Guardian Comfort Full Bed Liner

4. Lay the front section of the floor with the bulkhead and sidewalls into the truck bed. Ensure that it is positioned up against the front of the truck bed where the rear edge of the floor does not interfere with the trunk lid.

Clean the areas where the hook fasteners will attach to the truck bed. Clean the areas with alcohol first, then apply the 3M 4298 adhesive promoter and let dry before adhering hook fasteners.


**Note:** Clean, apply promoter and adhere each hook fastener before moving to the next. Do not clean and apply adhesive promoter to multiple areas before adhering hook fasteners because these surfaces may become contaminated where the adhesive will not adhere permanently.

5. Attach Bed Liner components in the following sequence:

- Floor- Roll each side up to locate and attach the inner hook fasteners with the red liner. Slide the cargo hooks through the slits in the front corners of the floor. Attach the rear edge of the floor last. Be sure the rear edge of the front floor section does not interfere with the trunk lid when the trunk lid is opened.
- Bulkhead-Work from the bottom up and the center out.
- Sidewalls-Attach the lower and mid section fasteners toward the front first. Use the cut outs for the lights to locate the rear section of the sidewalls. The sidewalls may be installed either with or without removing the tie down hooks.

Indicators are provided for both options.

- Indicators for cutting around the toolbox door are on the back of the passenger side sidewall (Refer to Illustration 2). BE CAREFUL NOT TO CUT ALL THE WAY THROUGH THE BOTTOM EDGE OF THE SIDE WALL! Indicators are also provided for cutting around the latch openings for permanent access to latch handles, if desired.

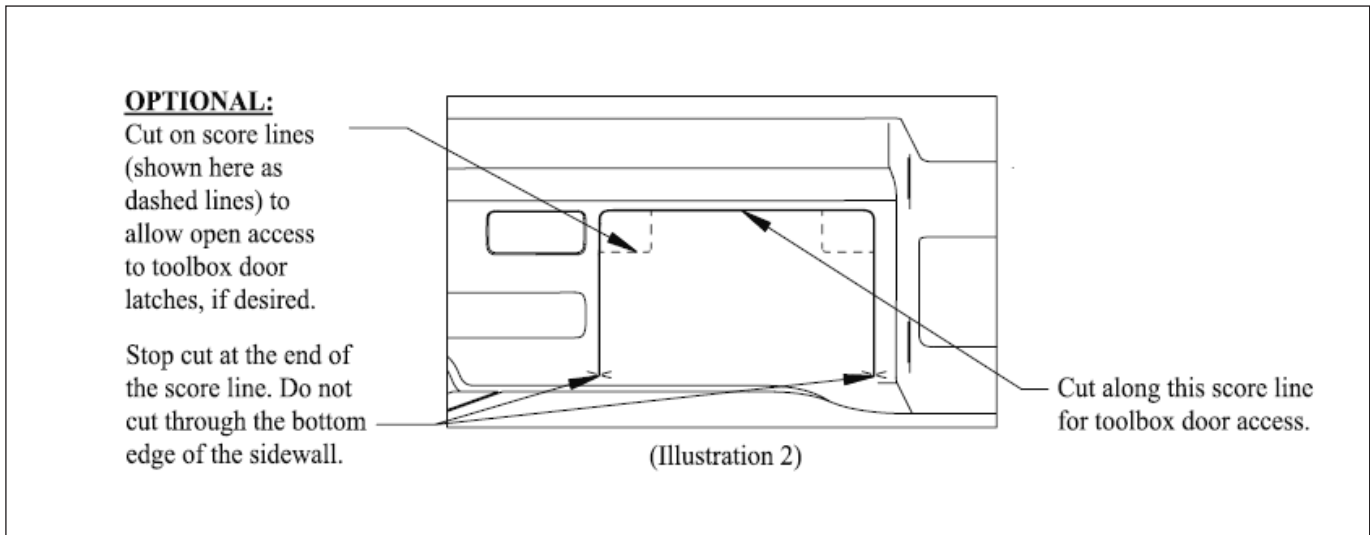

- Attach the lower pieces of hook fastener on the lower edges of the truck bed sidewall.

6. Attach rear floor section to truck lid. Attach the hook fasteners at the side edges with the red liner first then the front and rear edges. Ensure that the front edge does not interfere with the front section of the Bed Liner.

7. Attach the top, bottom, and side hook fasteners to the tailgate.

## Guardian Comfort Full Bed Liner

### CLEANING INFORMATION

The mildew resistant Bed Mat foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your Bed Mat will remain serviceable for as long as you own your truck.

#### Cleaning your Bed Mat is easy:

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch, etc. Due to the fact that water will not harm the Bed Mat, pressure washing is also an effective way to clean a soiled Bed Mat.
2. Although most acids will not harm the Bed Mat, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your Bed Mat use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The Bed Mat polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

Retain this cleaning information with your vehicle owner's manual for future reference.

## Congratulations!

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

[www.huskyliners.com](http://www.huskyliners.com)

Phone: 800-344-8759

Email: [customerservice@huskyliners.com](mailto:customerservice@huskyliners.com)



**GUARANTEED...FOR LIFE.**