



PLEASE READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.

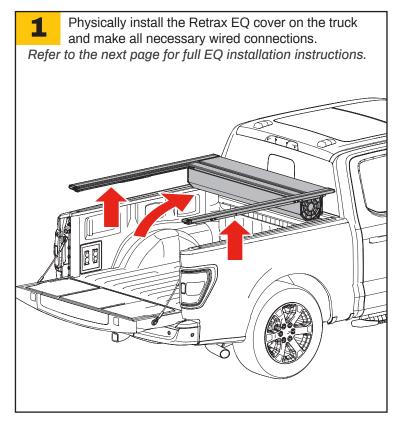


EQ Toyota Tundra 2018-2023 w/deck rails QUICK START INSTALLATION SHEET


Any damaged or missing parts?

Parts will be shipped to you directly.
Call 800-206-4070 Mon - Fri, 8:00 a.m. - 5:00 p.m. CST or email retrax@retrax.com

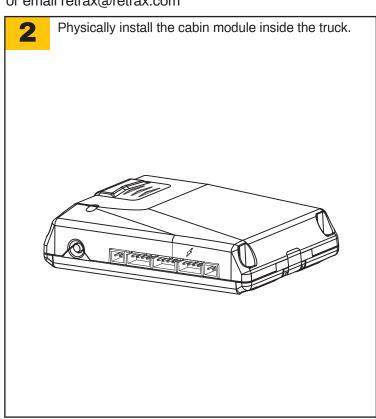



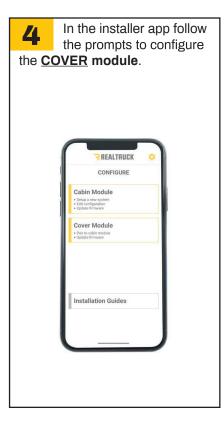

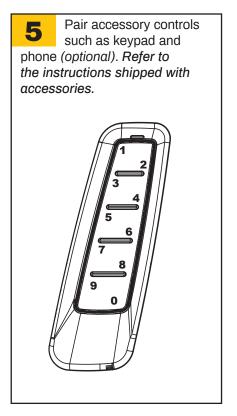



EQ Toyota Tundra 2018-2023 w/deck rails INSTALLATION SHEET

Any damaged or missing parts?

Parts will be shipped to you directly.
Call 800-206-4070 Mon - Fri, 8:00 a.m. - 5:00 p.m. CST or email retrax@retrax.com




PARTS FROM BOX


- A 1 Passenger side cover rail
- **B** 1 Driver side cover rail
- © 1 Cover rolled into canister
- D 2 Drain tubes
- **E** 1 Main wiring harness (with jumper wire)
- F 10 zip ties
- **G** 1 Clamp kit (4 clamp assemblies)
- **H** 6 Canister mounting bolts
- 1 2 Lock nuts
- J 1 Allen wrench 6mm
- K 1 T25 Torx bit
- **■** 1 Cabin Module
- M 1 T-slot seal
- N 1 T-harness (not pictured)
- 1 Driver side canister water shield
- P 1 Passenger side canister water shield


TOOLS REQUIRED


- #2 Philips screwdriver
- 9/16" Wrench or Socket
- 3/8" Wrench or Socket with 1/4" drive
- 1/4" Drive ratchet
- Drill and/or Impact driver
- Scissors or Utility knife
- Tape measure
- Deep well socket set & rachet
- Bit extension for Drill/Impact driver
- Step drill bit or 11/16" Drill bit (Optional)

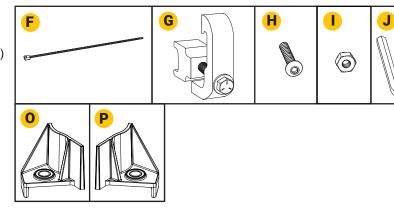


IMPORTANT: You will need to download the RealTruck EQ Installer and RealTruck EQ user apps to complete this installation.

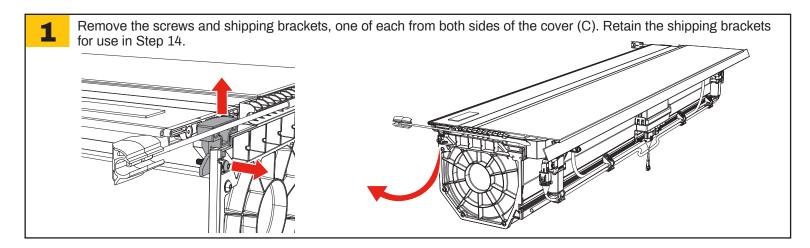

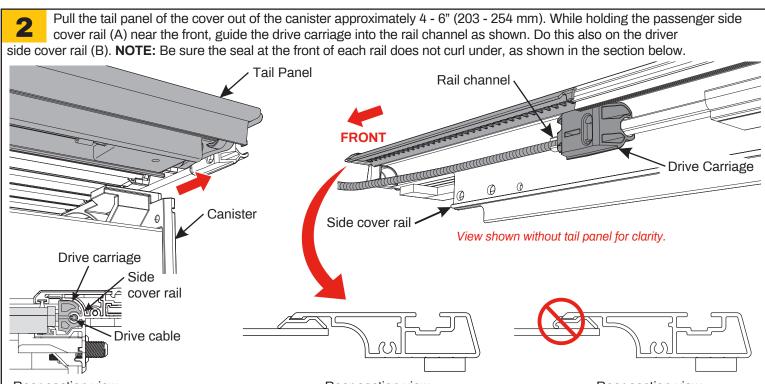


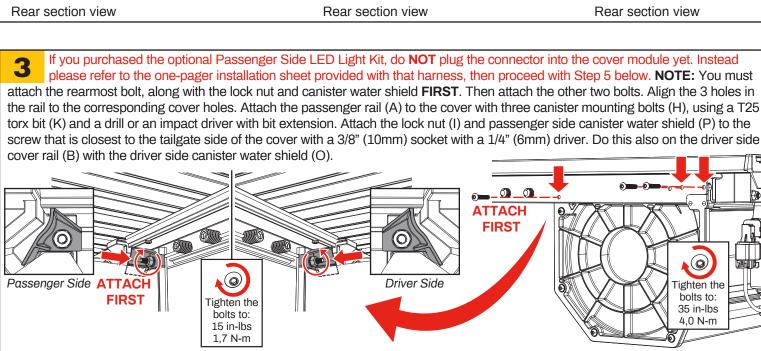


The driver side LED wiring harness with light comes attached to the rail (B), with extra harness tied at the front of the rail, as shown. Remove the tie and continue to route the LED wiring harness around the back of the cover. Route the harness towards the cover module, securing the harness to the two plastic clips. Plug the LED wiring harness connector into the cover modules' connector.

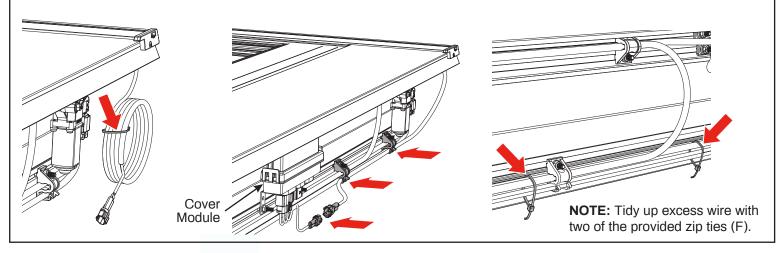

Before routing the main wiring harness (E) from the bed to the battery, first locate your battery in the engine compartment. Determine which side of the vehicle the battery is on - passenger or driver side - and then route the main wiring harness on the same side as your battery. Feed the battery terminal connection end of the main wiring harness (E) into the available pickup bed hole. Bring the wire down between the bed and the cab.

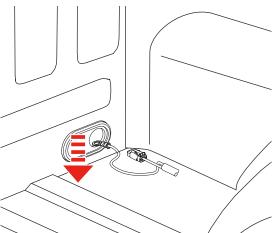


NOTE: If there is not a suitable hole in the bed, one may be drilled, but take great caution to be aware of lines and anything else behind where the hole is drilled. Keep the wires away from moving parts and exhaust.

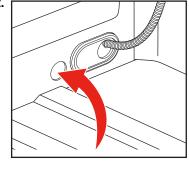


to leave enough wire harness in the bed to attach to the cover module later in Step 16.


NOTE: Make sure

Route the main wiring harness (E) along the frame rails located on the underside. Maintain a wiring route that keeps the wire as high as possible to prevent damage when driving. **Keep the wires away from moving parts and exhaust.**

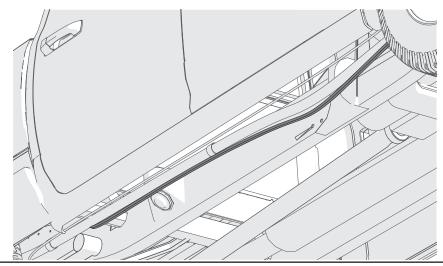



Finish routing the main wiring harness up to the vehicle's battery, then secure the harness near the battery with a zip tie (F). With the ratchet and necessary socket, connect the negative terminal on the harness to the ground on or near the battery. Next, connect the ring terminal on the positive jumper wire to the positive terminal on the battery. Then connect the jumper wire to the main power harness with the in line connector. Lastly, working from the battery back to the cover, neatly organize and secure the main wiring harness with the provided zip ties. **Keep wires away from moving parts and areas that may become hot, such as the exhaust.** Remove the 30A fuse from the fuse holder and disconnect the Negative battery terminal, this will be reconnected after the cabin harness and module are installed under the instrument panel.

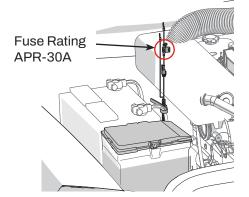

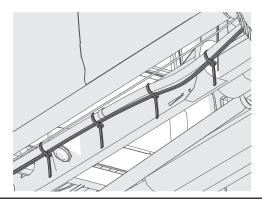



Remove plastic caps:
Remove and save the black plastic cap at the rear of the Deck Rail track system on both sides of the truck. Loosen and slide out the movable truck tie-downs on each side of the bed. NOTE: The tie-down clamps may not fit back into the deckrail after the cover is installed.

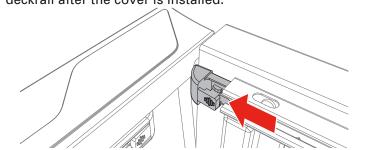


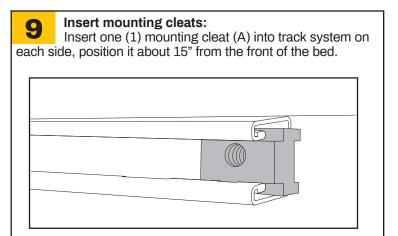


Re-insert tie-downs and second cleat:
Re-insert the tie-down clamps on each side of the bed, before inserting second cleat. After putting tie-downs back into bed, insert second mounting cleat into track system on each side, positioning it approximately 8" from tailgate. Finish by re-inserting the black plastic cap into the rear of the track system.

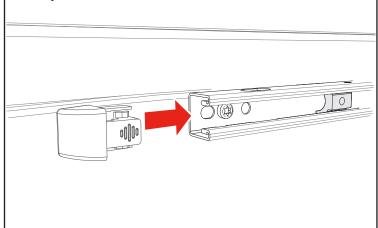


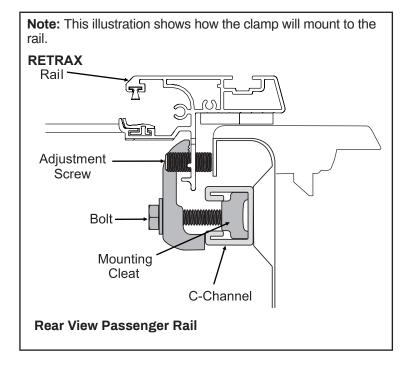


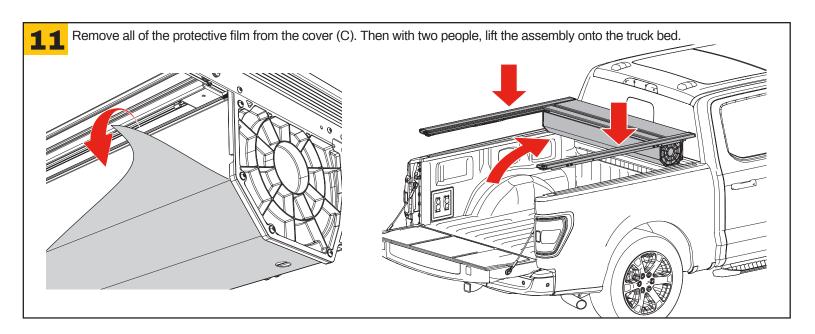

When placing on the truck bed with two people, place the canister portion of the cover (C) near the bulkhead. The front seal of the cover should lay forward towards the cab and lay flat.

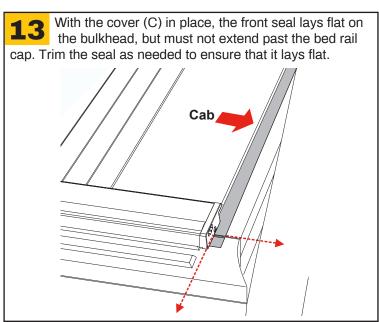

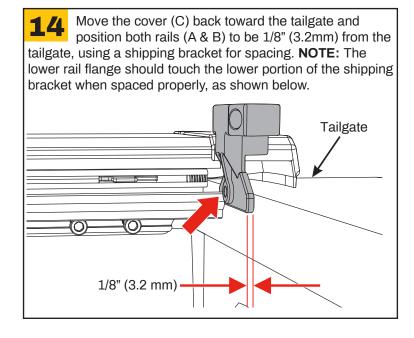

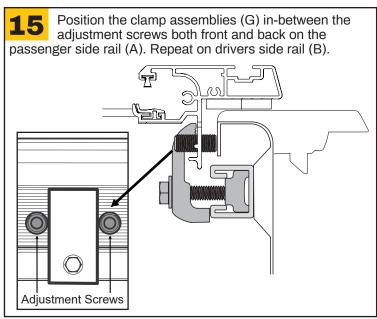


Using a 9/16" wrench, tighten the clamp assemblies (N-T). It is important to push down on the passenger side cover rail (A) while tightening. The pushing down of the rail will position the rail best to minimize water intrusion, but **Do Not** push down too close to top of tailgate because it will interfere with opening and closing of the tailgate. Do this on the driver side cover rail (B) as well.

Contacting/interfering with the tailgate


Tailgate

Small gap between the end cap & tailgate


Measure the distance at point A (on top of the cover (C) near the cab). Then measure the distance at points B & C (above each clamp). They must measure the same +/- 1/16" (1.6 mm) as at point A. It is important that the rails are parallel. If they are NOT, proceed to step 18. If the measurements are correct, then proceed to step 19.

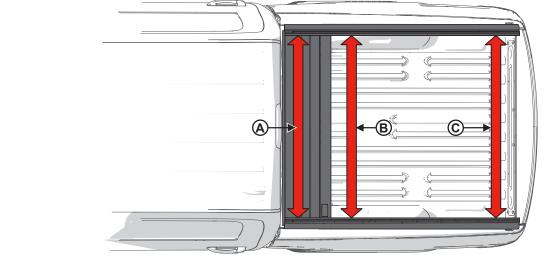


Remove the clamps (G) and turn the white adjustment screws with the 6mm Allen wrench (J) to move the rails. One complete turn = 1/16" (1.6 mm). Turn both screws in each of the two locations on each side of bed until they contact the truck bed rail. When properly adjusted, reposition and tighten the clamps as in **steps 15-16**, **then proceed to step 19**.

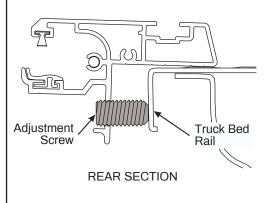

If the rails measure to be too close together, turn the screws counter clockwise.

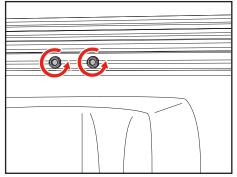

If the rails measure to be too far apart, turn the screws clockwise.

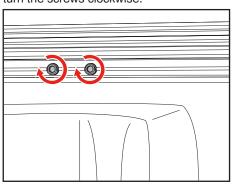


Tighten the clamp bolts to 6.7 ft/lbs


(9.1 Nm)

Tailgate


Locate the main wiring harness (E) that was installed previously in steps 5-7. Attach the connector on the wiring harness to the connector on the cover module on the back of the cover (C). Once a connection is made, secure the main wiring harness to the cover (C) with the provided zip tie (F), as shown.

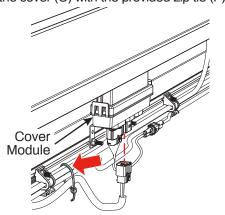


Qo back underneath the vehicle where the main wiring harness (E) was zip-tied and pull out all the extra slack in the harness. Neatly organize and secure the extra slack, using another zip tie (F). Keep the wires away from moving parts and exhaust.

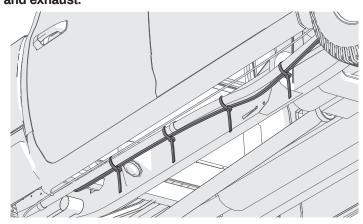


Insert a drain tube (D) into the cover **on both driver and passenger sides.** Rotate to the right; clockwise. The fitting will click twice when secure. Generally the drain tubes (D) will be routed out through a hole drilled in the factory bed plug, otherwise a suitable existing hole must be utilized. Alternately, a new hole can be drilled, but **take great caution to be aware of**

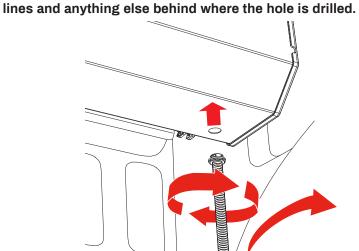


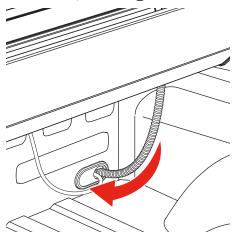

NOTE: For better water drainage, be sure to route the drain hose out of the truck in the most direct line as possible.

Use a scissors or a utility knife to cut the T-slot seal (M) into two pieces, to the length of the rail minus the end caps, as shown. Insert the seal into the T-slot on each rail from the top.

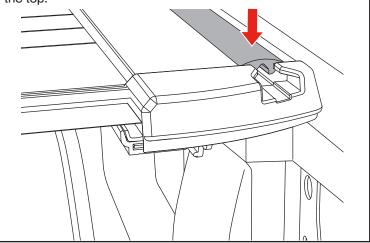


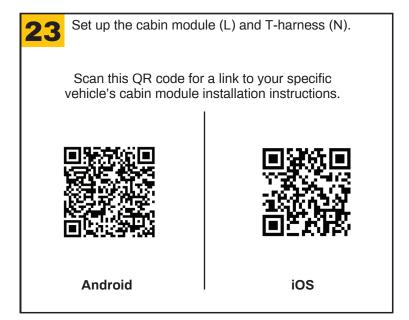

RealTruck EQ installer app, log in with an existing account or register for a new account with credentials and log into app. *Installer app is not required for End user but is required for firmware update flashing process during initial installation*





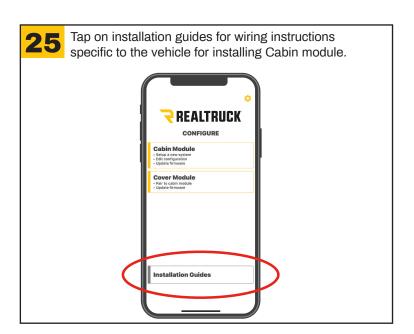



Once wiring is completed, press the yellow back arrow in the upper left-hand corner of the screen to return to the Configure page. *Take note of the Cabin module ID# on the back side of the unit*

INSTALLATION GUIDES


In order to successfully configure your system please read installation guide by tapping on it.


Installation Guide

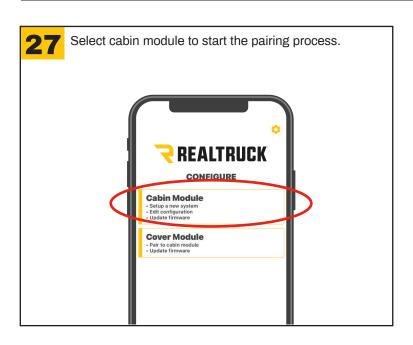


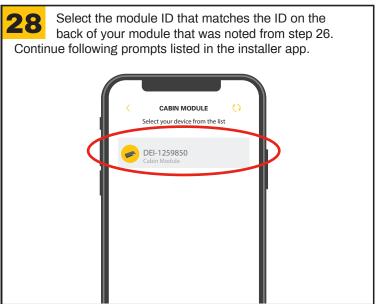


ITEMS REQUIRED FOR CABIN MODULE INSTALLATION

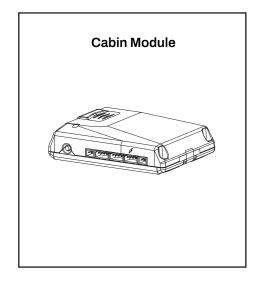

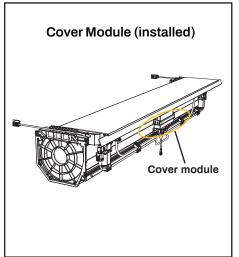

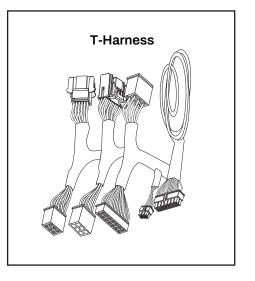

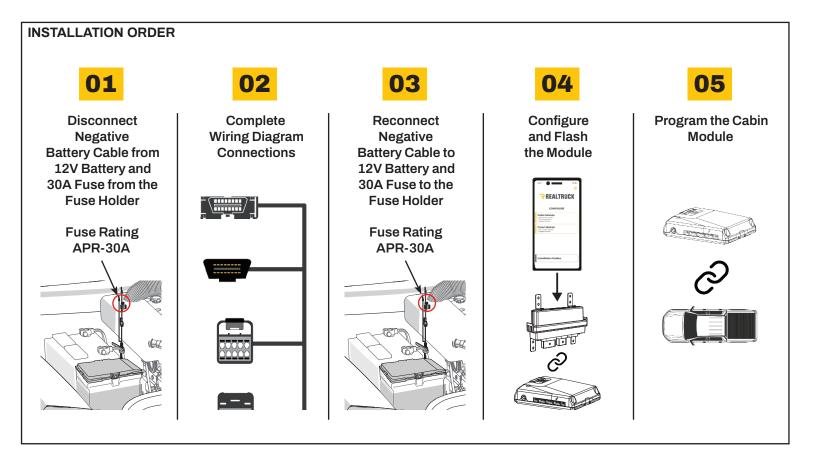

NOTE: It is recommended to wear protective gloves to install the cabin harness and module.



IMPORTANT: Route T-Harness and secure away from sharp edges.


GENERAL SERVICE INFORMATION

Installation notes to remember:

- During installation, be mindful of the potential for sharp edges on the product or vehicle. Always wear protective
 gloves and handle components with care to reduce the risk of injury. Taking proper safety precautions helps
 ensure a safe and smooth installation process. Always wear protective gloves and handle components with
 care to reduce the risk of injury.
- Always cover fenders, seats, and floor areas before starting to work.
- When working on a vehicle, always roll down a window to avoid being locked out of the car.
- Make all necessary connections (wiring diagram) in the truck BEFORE plugging in the modules.
- Never install the cabin module where it could interfere with normal operation or obstruct service technicians.
- Use caution near airbag wires and connectors as they are not always labeled (i.e. yellow split loom/tubing).
 Disconnecting an airbag connector with the ignition turned on may cause a deployment.
- Make sure that all safety equipment (i.e., the hood switch and the warning label) is installed.
- To avoid breaking the plastic fastenings, be gentle when disassembling the dash and interior panels.
- Use extreme caution if the vehicle was parked outside in very cold weather.


MANUAL DISCONNECT GUIDE

Manual disconnect is operated by first locating the knob on the underside of the cover. Next, rotate the knob 1/4 turn to disengage the cover from the drive system. While holding the knob in the retracted position, push or pull the cover. This should allow the cover to move freely. To re-engage the cover to the drive system, push or pull the knob 1/4 turn again and manually push the cover back into engagement with the drive system. Alternatively, you can follow the steps below for the automatic cover connection.

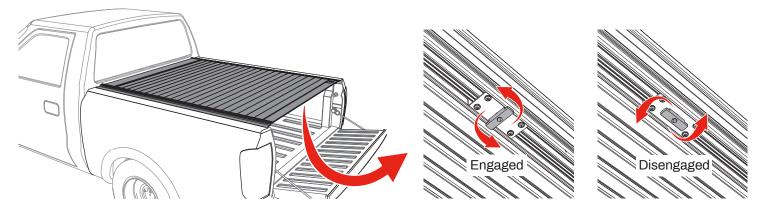


TROUBLESHOOTING

To create more of a seal between the cover (C) and the tailgate, back the set screws out. **NOTE**: It is paramount to move each set screw the same amount of turns. For example, to bring the cover 1/8" (3.2 mm) closer to the tailgate, back each set screw out 2.5 revolutions. **IMPORTANT**: Make sure the set screws are not backed out too far, or else the cover will make contact with the cover stops, which is not advised.

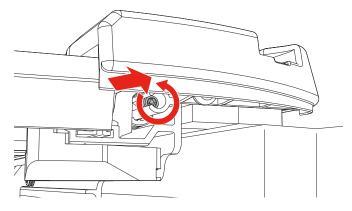


AUTOMATIC COVER CONNECTION

With the cover in the disengaged state, operate the cover electronically, with either the keyfob, keypad, or phone, so that the drive system brings the carriage in both rails toward the stationary cover. Once the carriages reach the tail slat end of the cover, the cover will start moving and snap into engagement. Cycle the cover to the fully open or fully closed position to ensure proper cover engagement.

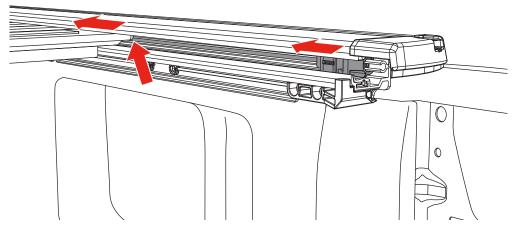

HOW TO CALIBRATE YOUR TONNEAU COVER SYSTEM

- This step must be performed after the cover is installed, firmware updates are made, and the module programming sequence is complete.
- To calibrate the drive cables, they must traverse the length of the rail in both directions. While in calibration mode, the cover and/or drive cables will travel at a slower than normal speed.
- The calibration process will automatically occur every time the system enters Pairing Mode, or if the power is reset to the Cover Module.
- The calibration process can be performed if at any time the carriages become unaligned with one another.
- While performing the calibration process, the Anti-Pinch feature of the cover will not function.
- The calibration process can be completed with or without the cover connected to the drive carriages. It is recommended to perform the initial calibration cycle with the cover disconnected from the carriages.
- 1. Ensure the cover is disconnected from the carriages in each rail and press the **lock** button 3X on the OEM key fob to send the carriages down to the tailgate end of the rails.
 - a. The calibration process can be initiated from any of the user options; OEM Keyfob, User App, and 5-Button Keypad.
- 2. Once the cables have reached the tailgate end of the rails and have stopped moving, press the **unlock** button 3X on the OEM fob to bring the carriages all the way back to the cab end of the cover.
- 3. As the carriages reach the tail panel of the cover, they will engage and the calibration process will be complete.

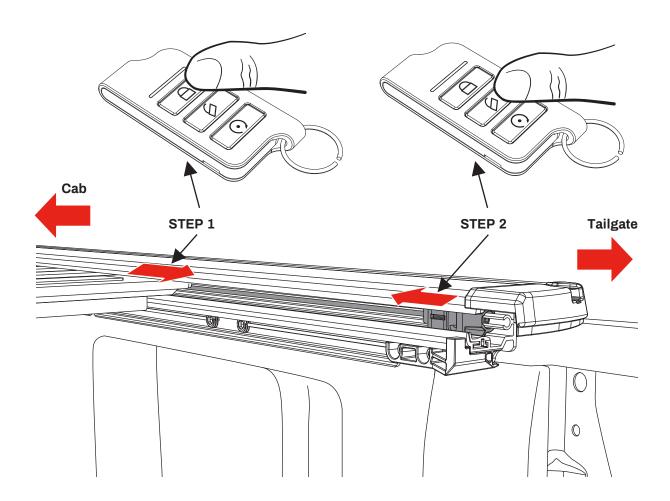

COVER CARE AND MAINTENANCE

Clean with mild automotive soap and water only. Do NOT use any strong chemicals or cleaners.

Do NOT wax your Retrax cover. The weather-stripping on your cover may absorb soapy residue from a car wash, so we recommend wiping down the inside of your rails from time to time.

If the vehicle is driven frequently in dusty conditions, it is recommended to periodically clean dirt and dust from inside the rails and spiral canister with a wet towel. To further improve cover performance, it is acceptable to apply a thin film of plastics safe, silicon based lubricant.

It is recommended that you periodically check that the cover is securely attached to your truck bed. Inspect the clamps and front mounting bolts to ensure they were properly installed and have not come loose or knocked out of adjustment during operation. Covers that are used with high frequency or that are subject to the vibrations and impact from rough roadways can cause the cover to require adjustment.

CLOSE

OPEN

USE

USE OF COVER WITH OEM KEY FOB Press the lock button three times to close. Press the unlock button three times to open.

To enter "Cinch" mode to secure loose cargo in place against the tailgate, press the lock button three times. The cover will meet resistance and retract a couple inches. Press the lock button three times again and the cover will retract and cinch the object in place.

place. REALTRUCK USE OF COVER WITH PHONE APP 5-BUTTON KEYPAD INSTRUCTIONS (OPTIONAL) Press the open icon to open the cover. Press the close icon to close the cover. ACCESS Retrax EQ ##### **UNLOCK ALL DOORS:** Press the 3/4 key within 5 seconds of entering the 5-digit access code. CLOSE **OPEN** Scan this QR code for a link to your specific LOCK ALL DOORS: Press and hold 7/8 and 9/0 buttons simultaneously for at least 2 seconds. vehicle's User App. OPEN COVER: Press 1/2 key within 5 seconds of entering the 5-digit access code CLOSE COVER: Press 9/0 key within 5 seconds of entering the 5-digit access code OPERATE THE TAILGATE:* Press the 5/6 key within 5 seconds of entering the 5-digit access code *Powered tailgates only. 800-206-4070

SAFETY INSTRUCTIONS

Android

- This tonneau cover may create pinch points when closing or operating near solid surfaces such as the truck bed
 rails or tailgate. To prevent injury, keep hands, fingers, and other body parts clear of moving parts during operation.
 Always operate the cover with caution to ensure safe and proper use.
- During high temperatures or extended sun exposure, surfaces of this product may become extremely hot to the
 touch, posing a risk of burns or injury. Use caution when handling the product in hot weather and allow time for it
 to cool before contact. Always check surface temperature before use to ensure safe handling conditions. Always
 check surface temperature before use to ensure safe handling conditions.
- Do NOT tow your vehicle from the rear with the cover on your vehicle. If towing from the rear is required, the cover MUST be removed from the vehicle and properly stored.
- All large and heavy cargo must be secure by straps.
- NEVER allow children or pets to occupy the truck bed while the cover is closed.
- The cover is not airtight. Special care is required to keep cargo clean and dry.
- Tonneau covers won't prevent theft of contents inside the truck box.

iOS

Limited Warranty

WARRANTY COVERAGE

This truck bed cover is warrantied against defects in materials or workmanship as follows. This warranty is void if the product has been damaged in an accident, or due to neglect, unforeseeable use, improper installation, improper servicing, or other cause not arising out of defects in material or workmanship.

The truck bed covers carries a limited warranty for five (5) years from the original date of purchase, subject to the terms below.

WARRANTY IS NOT TRANSFERABLE

The warranty is to the initial consumer purchasing the truck bed cover and it is not transferrable to a subsequent end user. Proof of purchase may be required to enforce these warranty rights.

WARRANTY CONDITIONS

Failure to follow these care and use instructions will void the warranty:

- Clean with mild automotive soap and water only. Do not use any strong chemicals or cleaners. Lubrication of the rails or sealed ball bearings will void the warranty.
- Cargo must be secured at all points when the vehicle is in motion. Failure to adequately secure the cover or tether strap can result in damage and will void the warranty.
- Check all clamps and retention mechanisms for tightness after a week of driving following installation (or re-installation) of the cover and periodically thereafter.
- · Before opening, the cover must be free of all foreign materials including snow and ice.
- Do NOT tow your vehicle from the rear with the cover on your vehicle. If towing from the rear is required, the cover MUST be removed from the vehicle and properly stored.

WARRANTY PERFORMANCE

If all warranty conditions are met, a defective truck bed cover or hardware component will either be repaired or replaced (at our option). We reserve the right, for any warranty, to substitute a newer model or bed cover having a similar form and function, to offer a warranty discount on an entire replacement system, and/or provide remedies other than those mentioned in this document.

WARRANTY RETURN

A Return Material Authorization number must be obtained from our Customer Service Department prior to returning any product. We may require the original item to be returned postage prepaid for final determination. Shipping charges will apply for any repair or replacement. Other than postage or shipping charges, no charge will be made for repair or replacement under this warranty.

This warranty gives you specific legal rights. As a consumer, you may also have additional rights and remedies under the laws of your state.

WARRANTY REGISTRATION

Warranty registration must be on file and/or proof of original purchase (detailed and dated receipt) required for warranty to be effective.

Register online at https://realtruck.com/retrax-warranty.

REGISTER YOUR WARRANTY ONLINE



When calling or emailing, please be prepared to reference your part number and serial number. The serial number is located under the cover next to the lock assembly on the tailgate extrusion. The serial number is 8 - 14 digits and may or may not include a letter in it.

