

2019+ GMC Sierra 1500 Hood Light Brackets

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

KIT CONTENTS:	
Description	Qty.
Driver Side Bracket	1
Passenger Side Bracket	1

Tools Needed:

- Socket set or wrenches
- 13mm socket/wrench

Installation Instructions:

The brackets are designed to utilize the factory mounting locations for the hood hinge. These locations are shown in **Figure 1a**.



Figure 1a: Bracket Locations

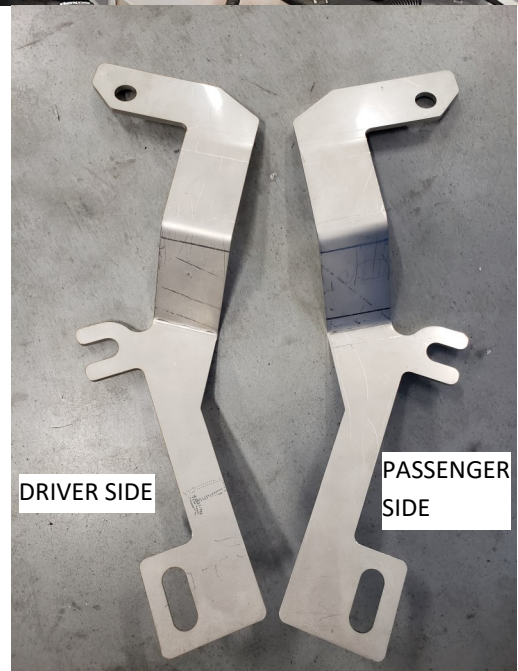


Figure 1b: Bracket Identification

Installation Instructions Cont.

1. Begin by using a 13mm socket to loosen the two nuts holding the hood to the hinge. **It is important to only do one side of the hood at a time to prevent damage to the hood.** It may also be helpful to mark the bracket and hood with a marker before you begin loosening to use as a reference for aligning the hood.

Figure 2.

2. It is necessary to completely remove the top bolt, but the bottom bolt only needs to be loosened enough for the bracket to slide in.
3. Insert the mounting bracket between the hood bracket and bolts making sure to keep the washers on the outside of the brackets.
4. Tighten the bolts while making sure the hood is aligned as it was before the bracket was loosened.
5. Repeat steps 1-4 on the other side of the vehicle.
6. Mount light in top hole of bracket (this kit is designed for Putco 10004 or 10007 LED Block Lamps)

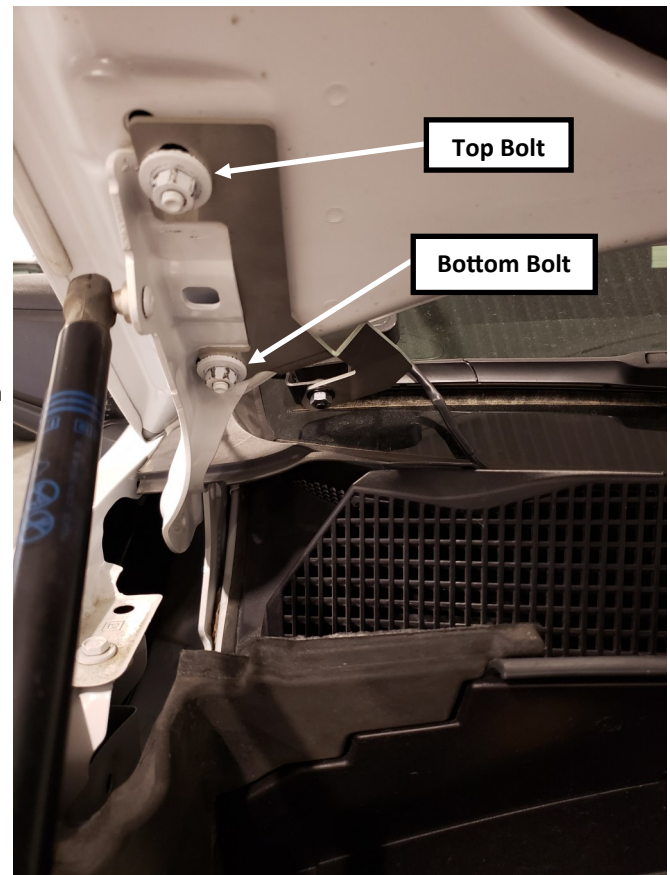


Figure 2: Bracket Installation.

NOTE: After installation is complete, check that the bracket and lightbar do not interfere with the vehicles windshield wiper function.