




INSTALLATION HOOD DEFLECTOR

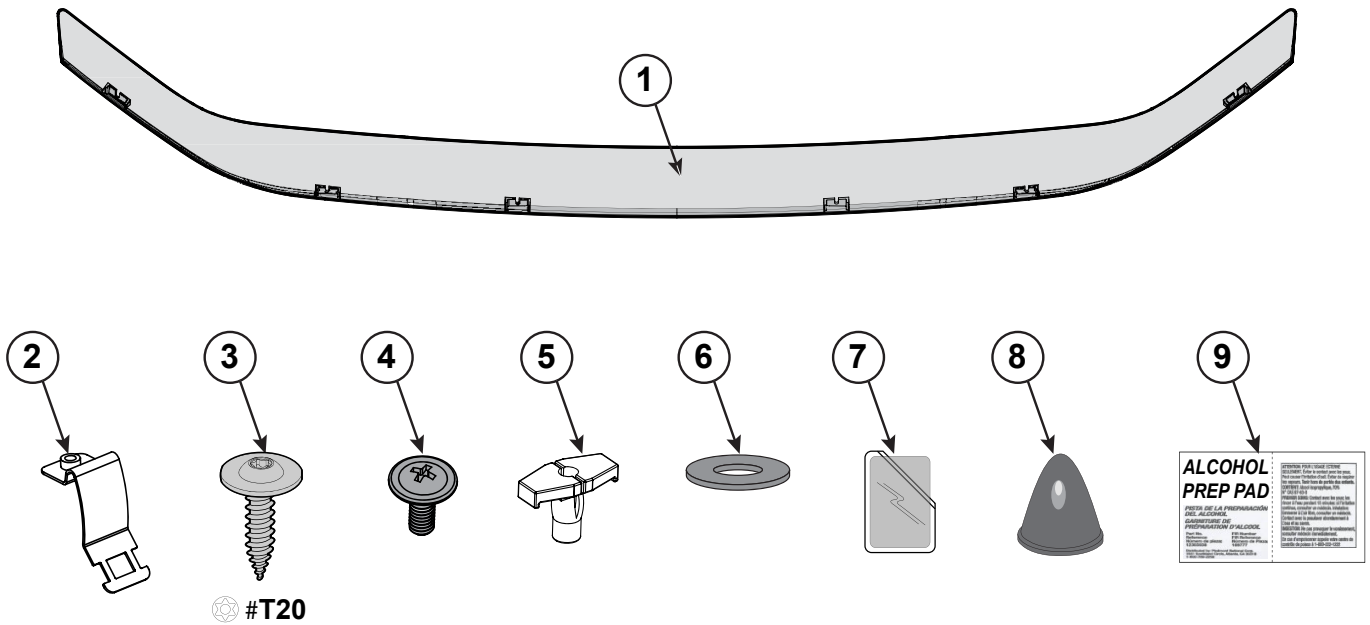

Call Out	Description	Quantity	Part Number
1	Hood Deflector	1	032091COE
2	Fixed Clip	6	
3	Anti Taper Screw	6	
4	Phillips Head Screw	6	
5	Plug	6	
6	Washer	6	
7	Abrasion Resistant Tape	6	
8	Bumpon	6	
9	Alcohol Wipe	2	

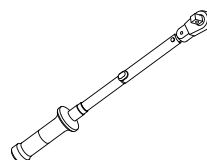


1. Open the hood.
Thoroughly clean the top and underside of the hood as well as surrounding areas.
Wipe away any residue and allow to dry completely.

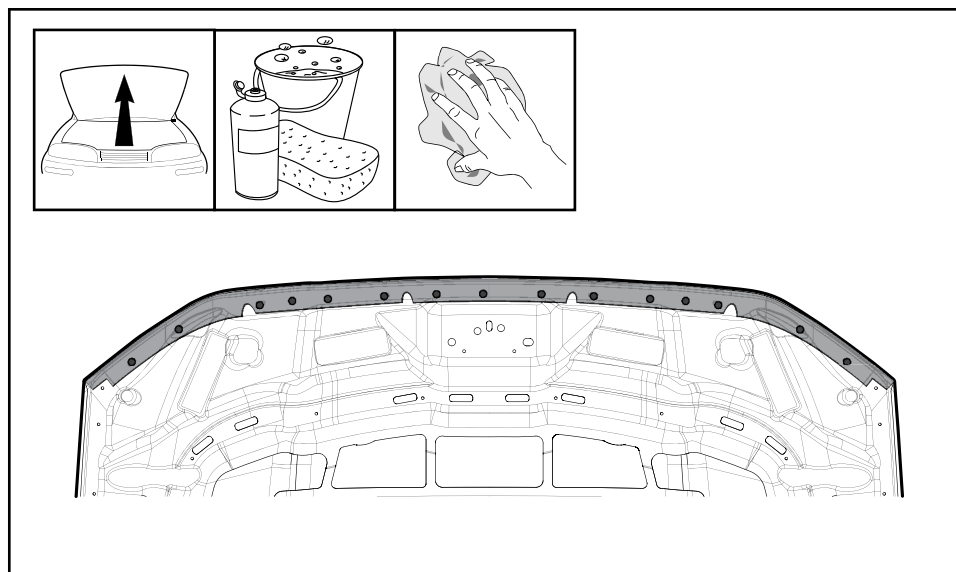


2. Trial fit the Hood Deflector (1) centrally onto the hood, align the front edge of the Hood Deflector with the hood lip.


Note where the six slots on the tags correspond to the scrivenets on the underside of the hood.

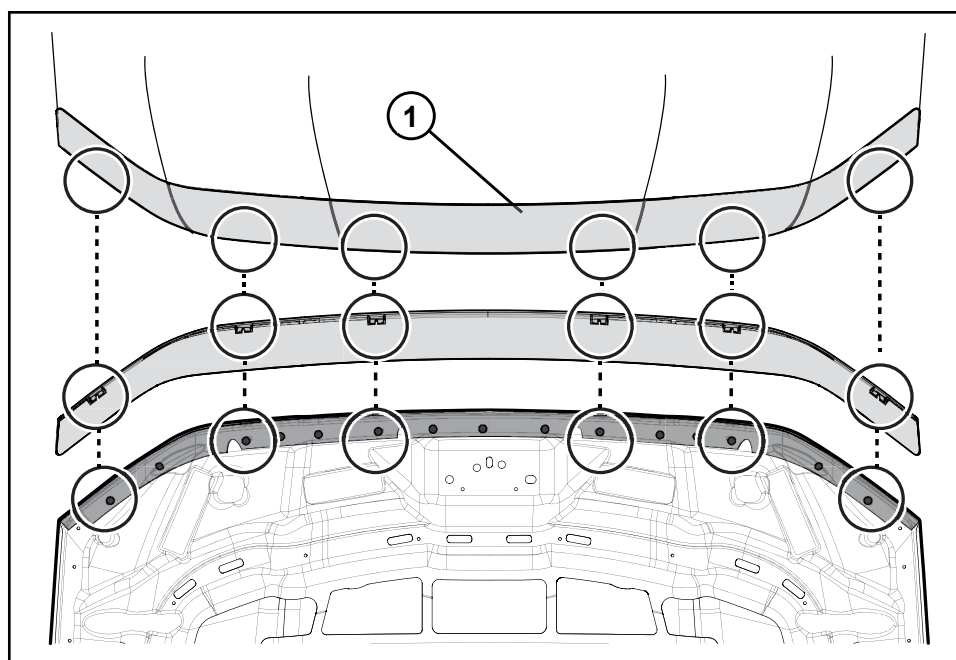

3. Slide the metal clip (2) up the housing of the Hood Deflector (1).
Secure the clip (2) to the Hood Deflector (1) by tightening the screw (4).
Repeat for the other 5 locations.

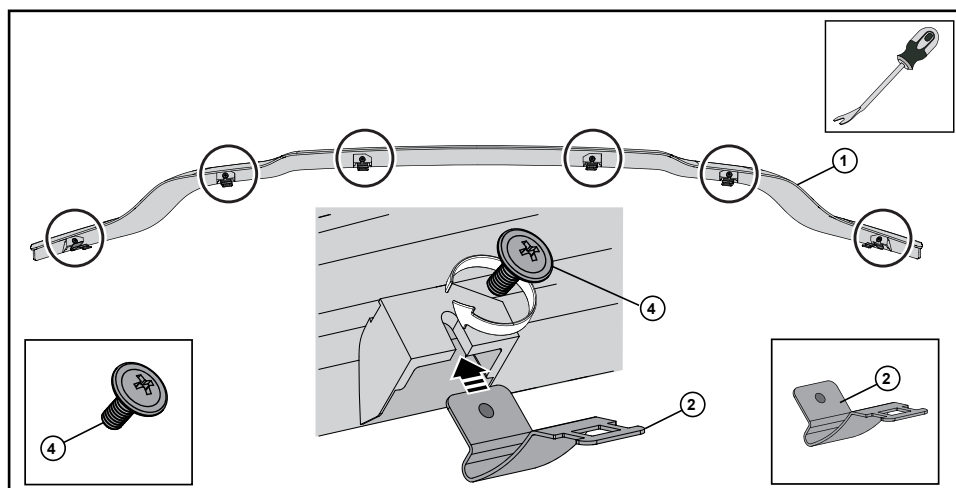


4. At the previously noted scrivett locations carefully remove the scrivetts attaching the hood seal and discard.

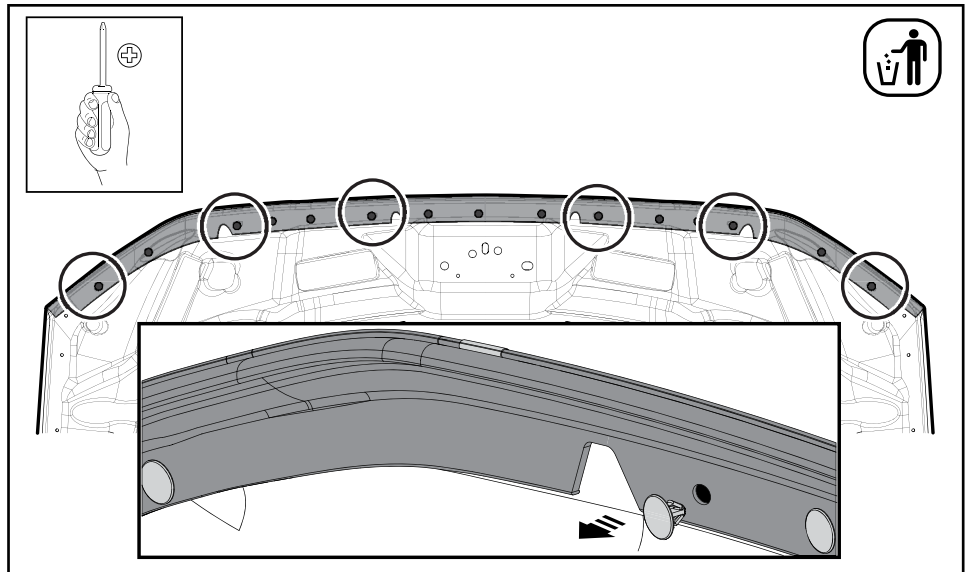

5. Gently peel back the rubber seal at each clip location.

Clean the top and underside face of the hood with the alcohol wipe (9) provided. Allow to dry.

Adhere an Abrasive Resistant Tape (7) to the lip of the hood. Fold over the hood so that 50% of the tape is above and 50% is below the hood.

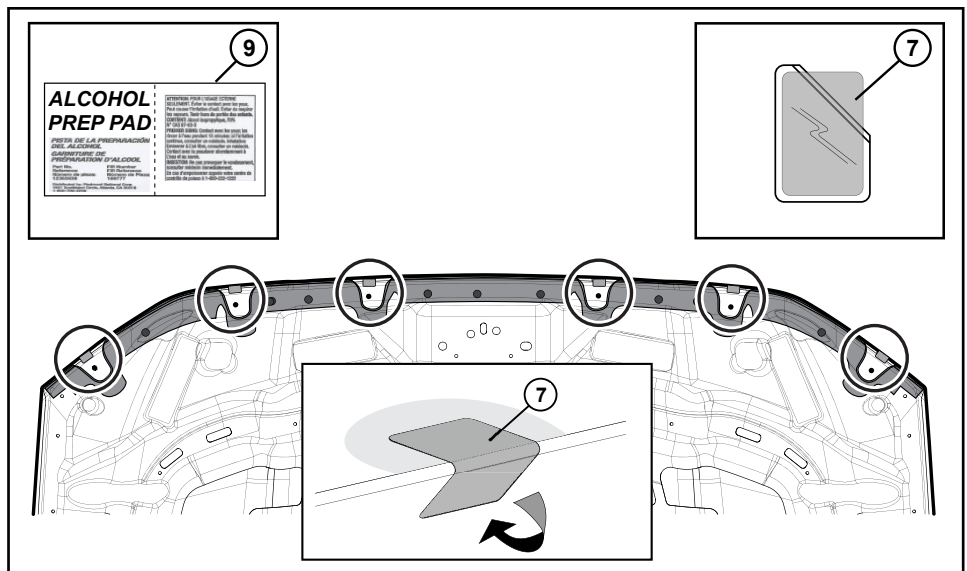


6. Slide the Hood Deflector (1) into position on the hood and align each metal clip (2) over the abrasive resistant tapes.

Align the square hole in the clip with the round hole in the hood and insert a screw plug (5) through the clip into the

Ensure the clips (2) rest over the abrasive resistant tape and do not come in contact with the hood.


Failure to do this may result in permanent damage.

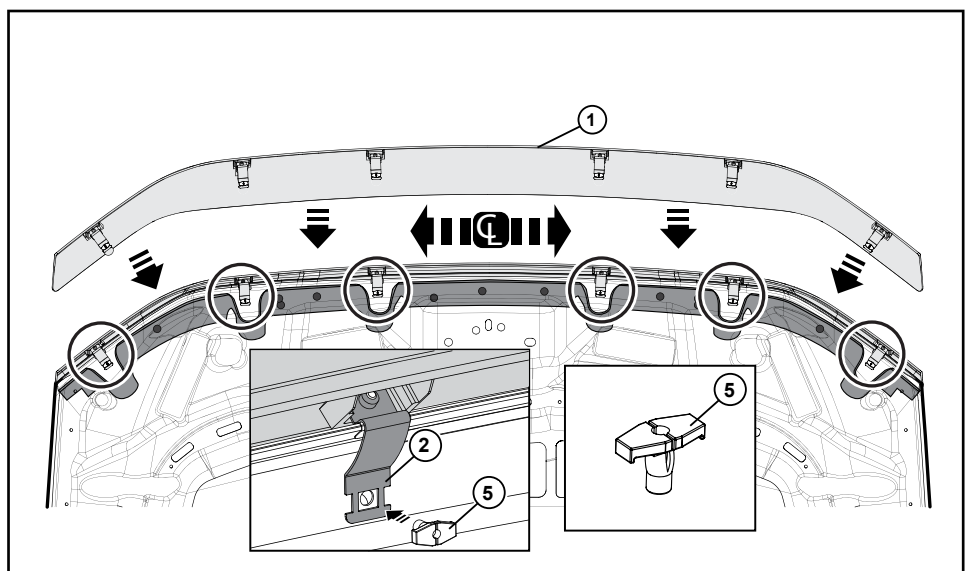

7. Re-install the seal back to its original position over the clips.


Secure the Hood Deflector to the Hood by installing the screws (3) and washers (6) through the seal into the screw plugs and clips. Do not overtighten.

Re-check and ensure that the Hood Deflector is centered on the hood and adjust if needed.

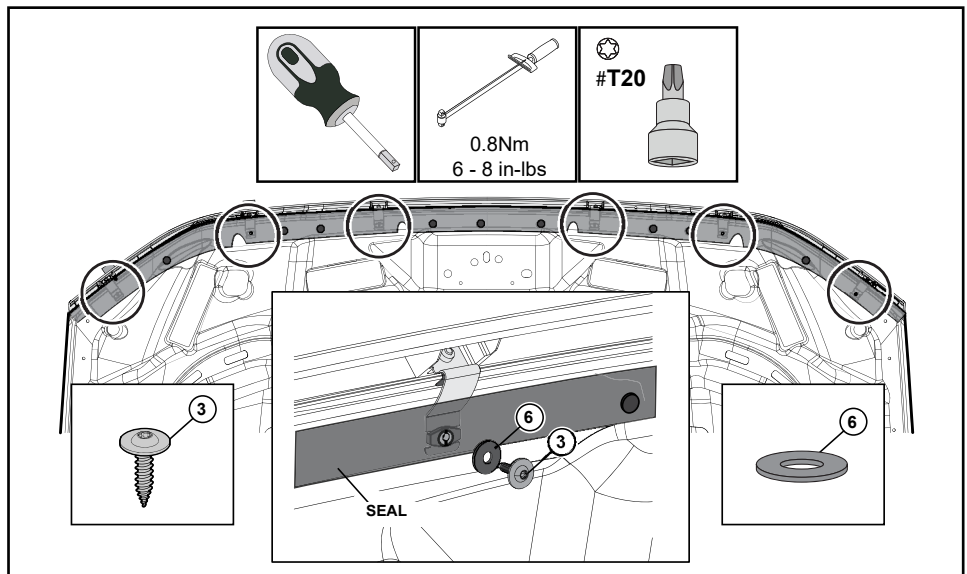

8. Clean and dry the hood underneath each bumpon location sticker.

Peel the adhesive backing from the bumpons (8) and adhere a bumpon to the hood directly underneath each bumpon location sticker, peel off and discard the bumpon location stickers when complete.

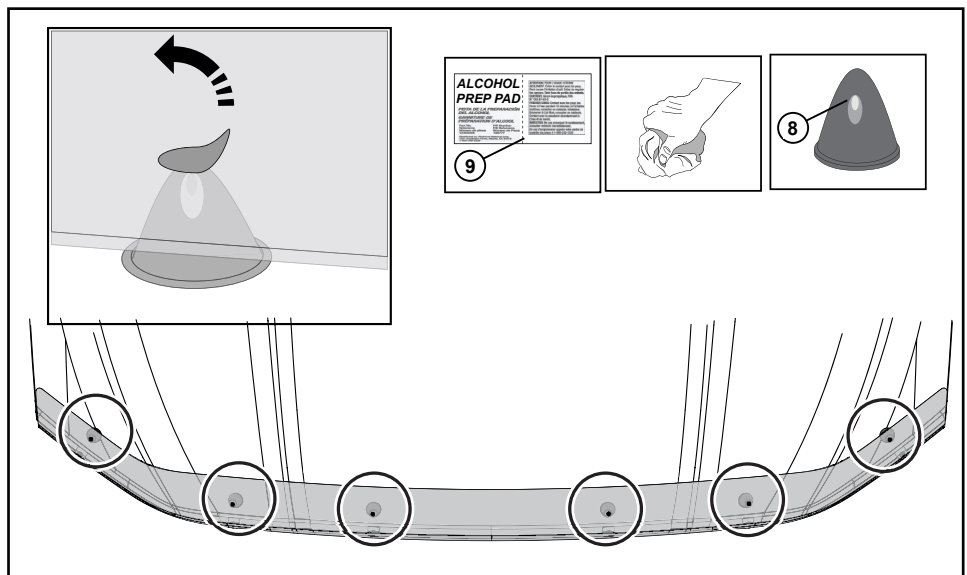

9. Re-check and ensure that the Hood Deflector is centered on the hood.

Wash the Hood Deflector and surrounding areas.

