

INSTALLATION INSTRUCTIONS

EXP TRUCK CAP TOOLBOX MOLLE PANEL




APPLICATION:
UNIVERSAL

PART NUMBER:
16-10016

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	MOLLE PANEL	13MM SOCKET
2	4	M8 HEX BOLT	RATCHET
3	4	M8 NYLON WASHER	
4	4	M8 FLAT WASHER	
5	4	M8 LOCK WASHER	
6	4	M8 HEX NUT	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

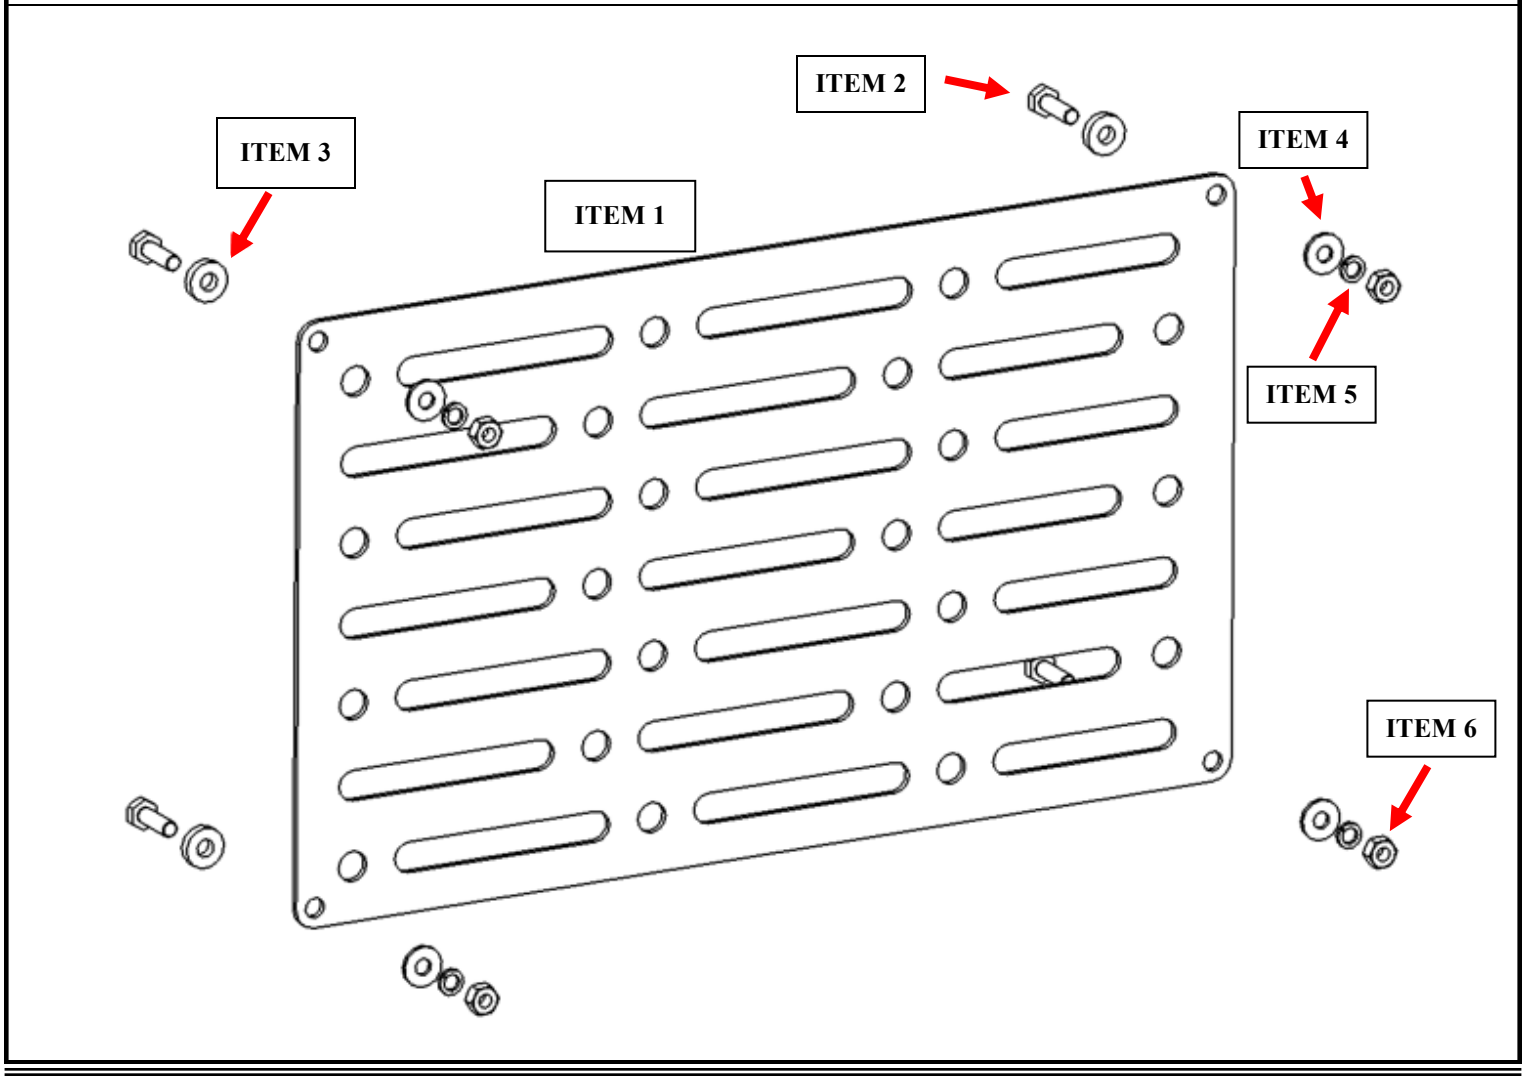

PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.
2. Slide (4) M8 Hex Bolts into the tracks of toolbox back panel, place two on each of the upper and lower tracks. Then place (4) M8 Nylon Washers onto the bolts. See **Figure 1** as reference.
3. Place the Molle Panel onto the (4) M8 Hex Bolts. Then tighten the Molle Panel to the bolts with (4) M8 Flat Washers, (4) M8 Lock Washers, and (4) M8 Hex Nuts (**Fig 2**).

Figure 1


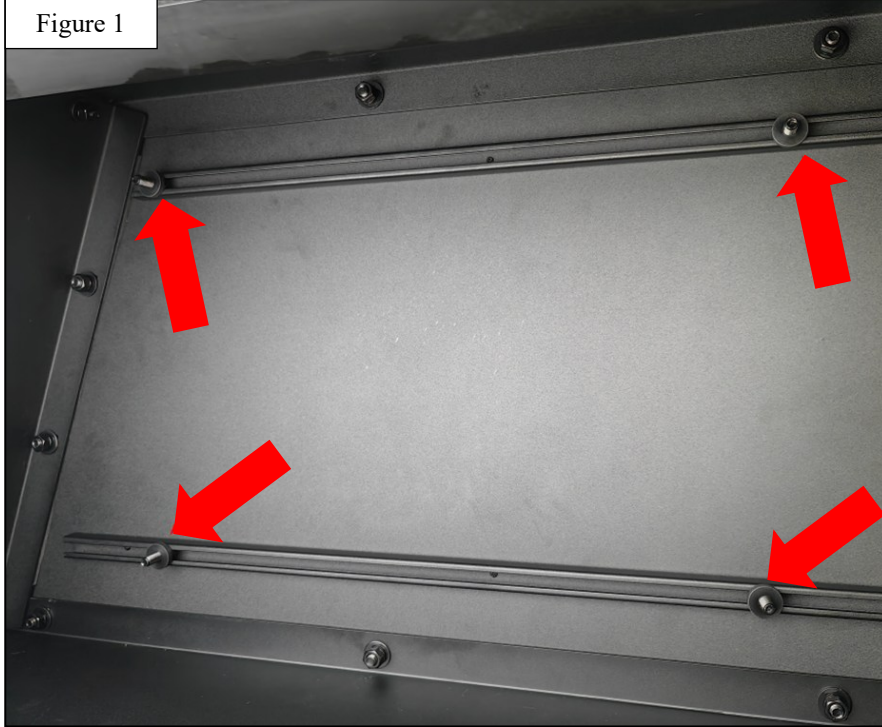


Figure 2



13MM

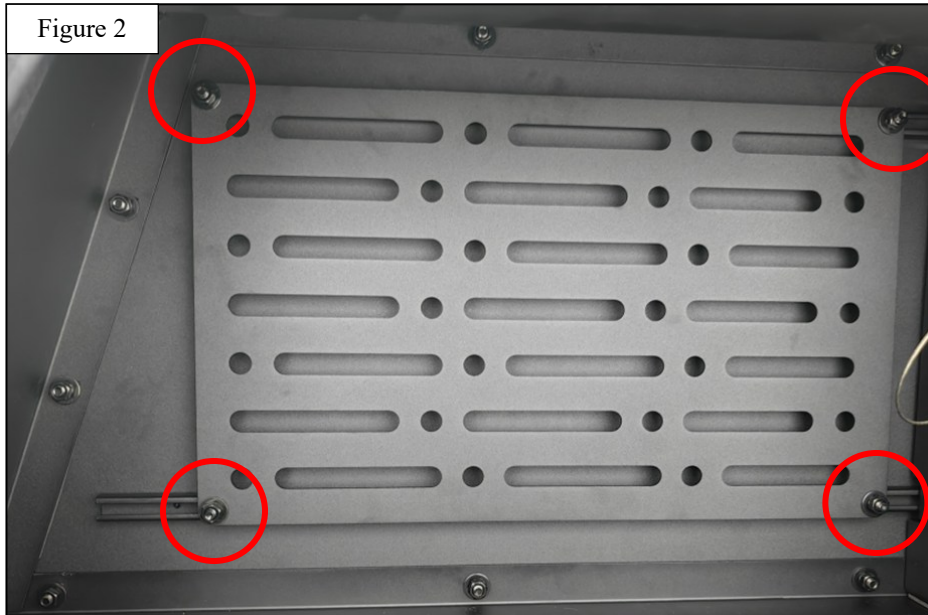

Adjust the Toolbox MOLLE Panel to the appropriate position.

Tighten all M8 hardware to 15-18 ft-lbs.

The installation of your EXP Truck Cap Toolbox MOLLE Panel is complete!

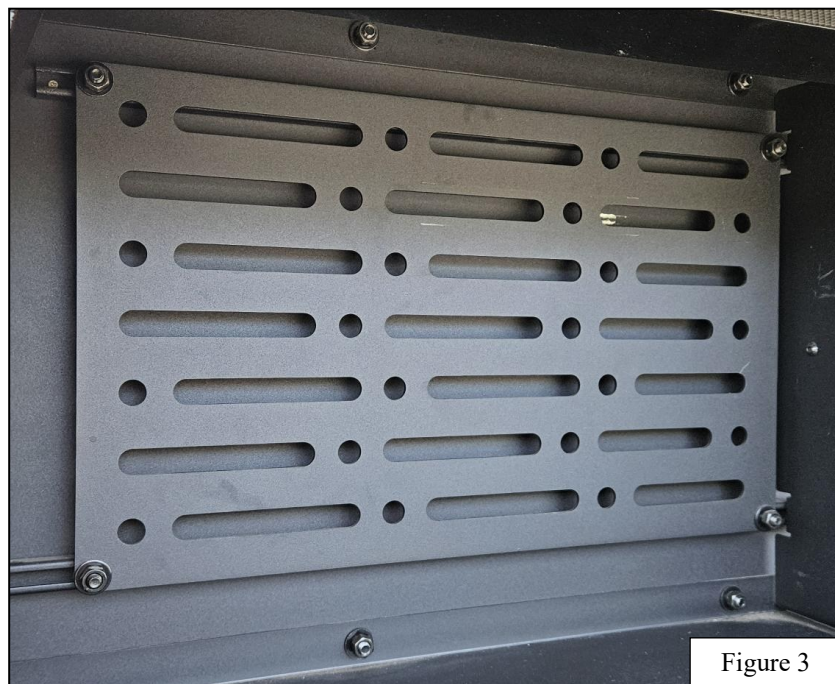


Figure 3



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com

DATE: 07/10/2025