

Installation Instructions

I - Sheet Number INS-HS143 Rev.-



Hood Shield

**For proper installation and best possible fit, please read all instructions BEFORE you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-344-8759.**

Important Safety Information



- CAUTION - Before driving, ensure that the hood shield is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents

NOTE: Actual product may vary from illustration.



Hood shield




Bump Ons x4



Hood Insert x6
(39-4150)



Washer x6
(98022)



Screws x6
(98023)


Tools Required




Car Wash Supplies



Clean Towel



Phillips Screwdriver



Tape


Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Open hood.

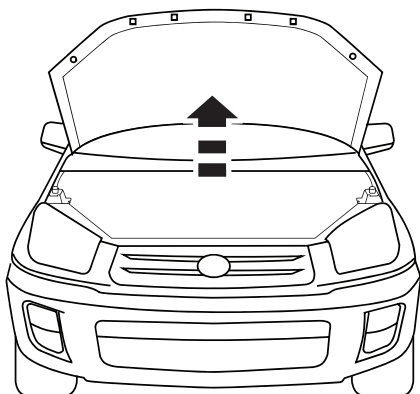

1

Locate (6) square holes on underside of hood.

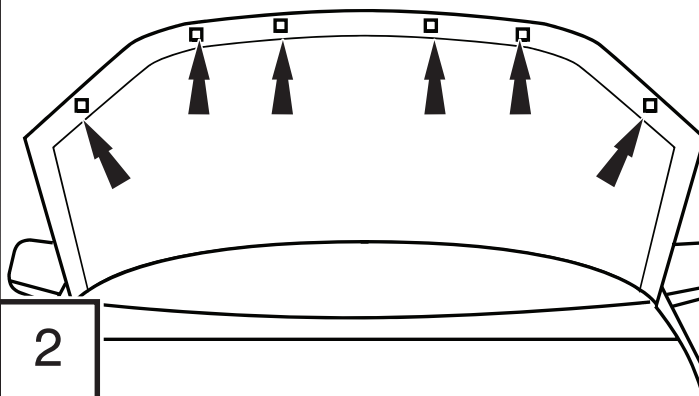



2

Installation Steps

NOTE: Actual application may vary slightly from illustrations.


NOTE: On vehicles equipped with factory weatherstrip, it is necessary to pull the weatherstrip down slightly to expose holes.

3

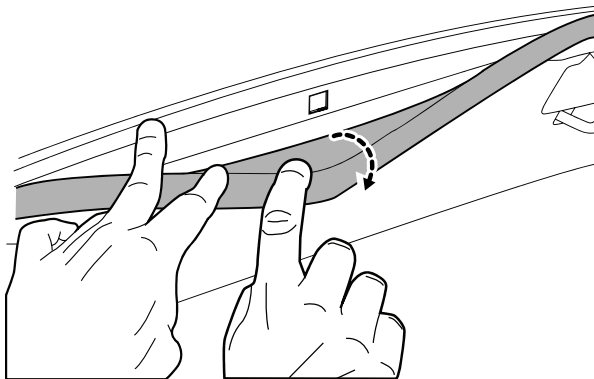


4

Press (6) hood inserts into the (6) square holes. If necessary use tape to hold them firmly in place.


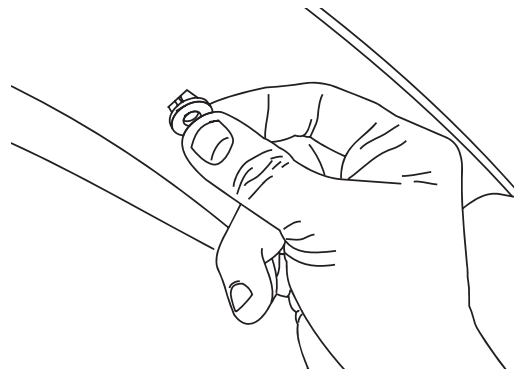


Align pre-drilled holes in hood shield with holes in hood. Place hood shield on hood.

NOTE: On vehicles equipped with factory weatherstrip, the hood shield will slide **in between** the weatherstrip and the hood.

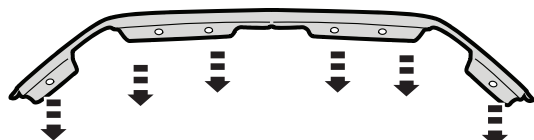


5

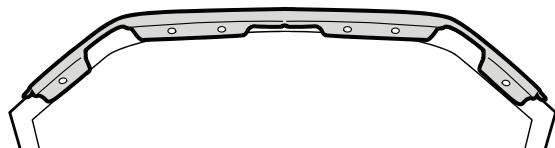


6

Using a phillips screwdriver install (6) screws with (6) washers at the locations noted in **Step 2**.


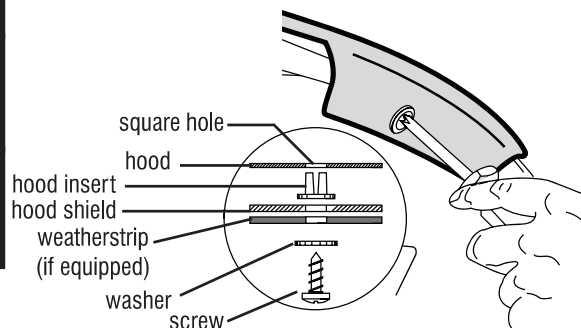


DO NOT OVER TIGHTEN

Adjust bumper stops as needed to ensure hood shield clears grille and headlights.

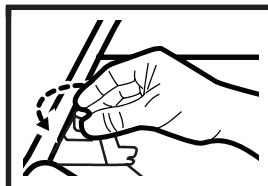


7

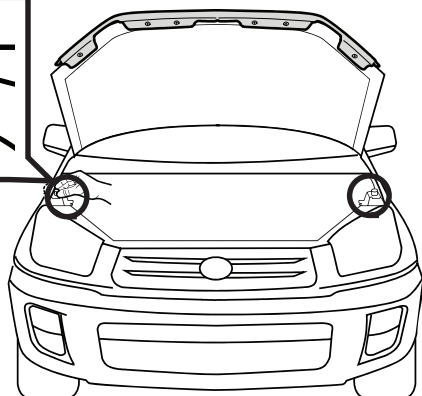

Close hood, and install bump ons at pre-cleaned locations on the painted hood surface.

8

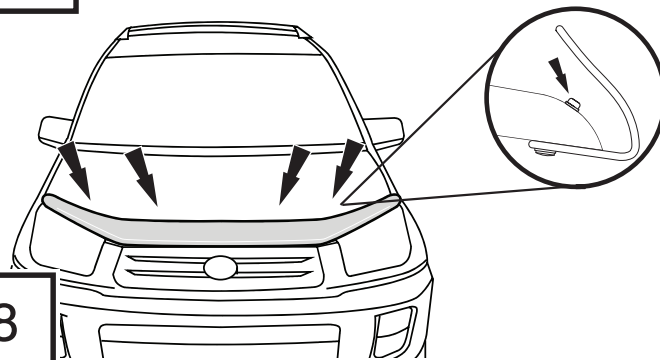

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



Congratulations!

You have purchased one of the many quality Husky® branded products. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



1-800-344-8759 • Visit us at huskyliners.com

© 2024 Husky Liners, Inc. All rights reserved.

Husky® and the Husky® logo are trademarks of Husky Liners, Inc.