



FEL-PRO INSTALLATION TIPS

DODGE & PLYMOUTH TRUCK INTAKE MANIFOLD GASKETS


NOTE: There are three intake manifold in this sets:

2 Qty: Part # 90009 **OPEN PORT**

1 Qty: Part # 90041 **RESTRICTED PORT**

The Application of the gaskets depends upon whether the cylinder heads have a **WATER** or **EXHAUST** center crossover port. Only install the two appropriate gaskets required for the specific style of cylinder head illustrated below.

Water Crossover




Open Port
- Left Side -



Restricted Port
- Right Side -



Exhaust Crossover




Open Port
- One Each Side -



CLEAN MATING SURFACE of all foreign materials.

To prevent vacuum seepage, brush a thin, even coat of Blue Gasket Sealer to both sides of the steel shim intake manifold gasket.

INSTALL END STRIP on center dowel pin. Secure both ends by locking to head gasket, using metal tabs. On those applications not having center dowel pin, secure end strip using a quick-drying adhesive, such as Fel-Cobond®.

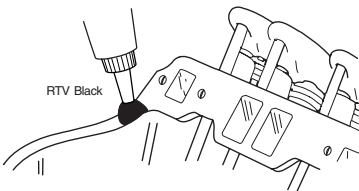

Using RTV Black apply 1/4" bead as caulk for butt joint at four corners of installation.
INSTALL INTAKE MANIFOLD casting and torque to manufacture's specification.



FEL-PRO INSTALLATION TIPS

DODGE & PLYMOUTH TRUCK INTAKE MANIFOLD GASKETS


NOTE: There are three intake manifold in this sets:

2 Qty: Part # 90009 **OPEN PORT**

1 Qty: Part # 90041 **RESTRICTED PORT**

The Application of the gaskets depends upon whether the cylinder heads have a **WATER** or **EXHAUST** center crossover port. Only install the two appropriate gaskets required for the specific style of cylinder head illustrated below.

Water Crossover




Open Port
- Left Side -



Restricted Port
- Right Side -



Exhaust Crossover




Open Port
- One Each Side -



CLEAN MATING SURFACE of all foreign materials.

To prevent vacuum seepage, brush a thin, even coat of Blue Gasket Sealer to both sides of the steel shim intake manifold gasket.

INSTALL END STRIP on center dowel pin. Secure both ends by locking to head gasket, using metal tabs. On those applications not having center dowel pin, secure end strip using a quick-drying adhesive, such as Fel-Cobond®.

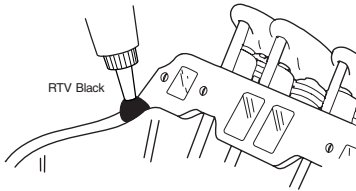

Using RTV Black apply 1/4" bead as caulk for butt joint at four corners of installation.
INSTALL INTAKE MANIFOLD casting and torque to manufacture's specification.



FEL-PRO INSTALLATION TIPS

DODGE & PLYMOUTH TRUCK INTAKE MANIFOLD GASKETS


NOTE: There are three intake manifold in this sets:

2 Qty: Part # 90009 **OPEN PORT**

1 Qty: Part # 90041 **RESTRICTED PORT**

The Application of the gaskets depends upon whether the cylinder heads have a **WATER** or **EXHAUST** center crossover port. Only install the two appropriate gaskets required for the specific style of cylinder head illustrated below.

Water Crossover




Open Port
- Left Side -



Restricted Port
- Right Side -



Exhaust Crossover




Open Port
- One Each Side -



CLEAN MATING SURFACE of all foreign materials.

To prevent vacuum seepage, brush a thin, even coat of Blue Gasket Sealer to both sides of the steel shim intake manifold gasket.

INSTALL END STRIP on center dowel pin. Secure both ends by locking to head gasket, using metal tabs. On those applications not having center dowel pin, secure end strip using a quick-drying adhesive, such as Fel-Cobond®.

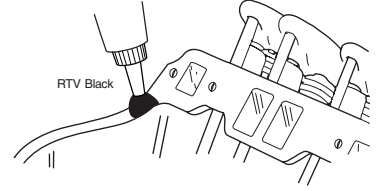

Using RTV Black apply 1/4" bead as caulk for butt joint at four corners of installation.
INSTALL INTAKE MANIFOLD casting and torque to manufacture's specification.