

Guardian Impact Van Mat

TRANSIT CONNECT VAN MAT INSTALLATION INSTRUCTIONS

****FOR VEHICLES WITHOUT REAR SEAT****

****DETERMINE TYPE OF FACTORY MAT INSTALLED IN VEHICLE****

The installer must either:


1. Remove flat surfaces factory rubber mat (if equipped)

OR

2. Do not remove molded factory mat (if equipped)

IF EQUIPPED,
REMOVE FACTORY REAR DOOR
TRIM AND REINSTALL OVER
EDGE OF VANRUG/VANTRED
THROUGH EXISTING HOLES IN
VAN FLOOR.

RELIEF HOLES FOR
CARGO HOOKS.

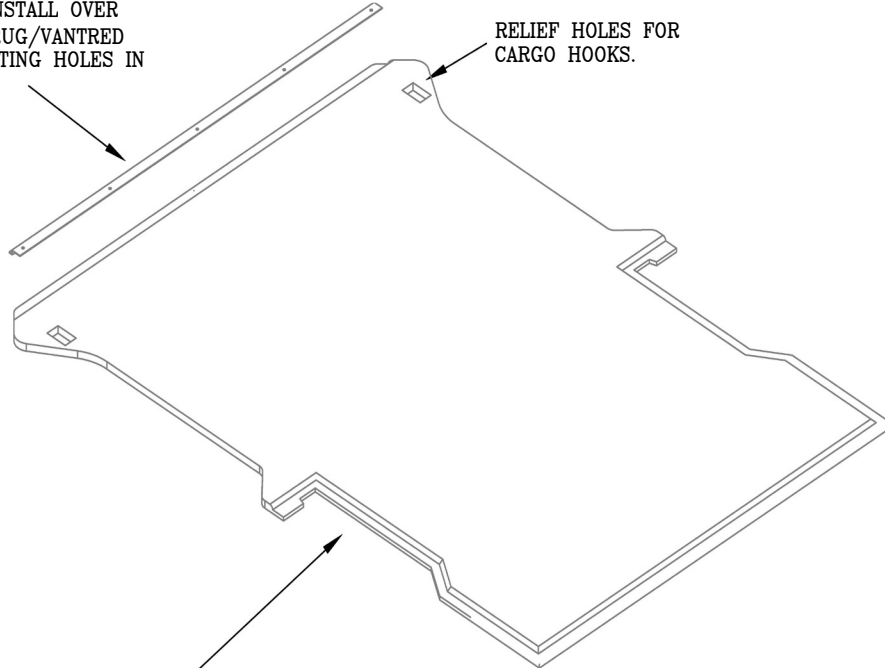

REMOVE THE FOUR PLASTIC
FASTENERS ON THE SIDE DOOR STEP
PLATES. TUCK VANRUG/VANTRED
UNDER STEP PLATES THEN INSTALL
WITH NEW FASTENERS PROVIDED.

Congratulations!

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

www.huskyliners.com
Phone: 800-344-8759
Email: customerservice@huskyliners.com



GUARANTEED...FOR LIFE.