



## 2026+ Honda Passport Installation Instructions



Manufacturer warranty covers material defects on new, never installed parts. Once installed, customer is responsible for all replacement part costs. Caution against blind spots during parking. Avoid curbs and excessive compression to flaps. **Check for sufficient exhaust, wheel, suspension clearances.**













**INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → [www.rallyarmor.com/support](http://www.rallyarmor.com/support)**

**Recommended Tools** 7mm/10mm/11mm wrench, Phillips screwdriver, pick, utility razor.

**Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.**

**ABOUT OUR STANDARD IN MUD FLAPS** Polyurethane is a high grade plastic that may feature minor surface layer marks.

These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

<b>CONFIRM PARTS &amp; QUANTITIES BEFORE INSTALLATION</b>			
<b>MUD FLAP KIT PN MF139 SEE PAGE 4</b>		<b>PART DESCRIPTION</b>	<b>QUANTITY</b>
MF139-LF		LEFT FRONT	<b>1</b>
MF139-RF		RIGHT FRONT	<b>1</b>
MF139-LR		LEFT REAR	<b>1</b>
MF139-RR		RIGHT REAR	<b>1</b>
<b>BRACKET KIT PN BMF139</b>			
BMF139-1		BRACKET FRONT	<b>2</b>
BMF117-M		BRACKET REAR	<b>2</b>
BMF96-RE		BRACKET REAR 2	<b>2</b>
<b>HARDWARE KIT PN HMF139</b>			
.25SP		SPACER	<b>4</b>
1.5SS		SCREW	<b>6</b>
5-8-SSWS		STUD	<b>2</b>
BLKNUT		NUT	<b>4</b>
HXBLT		BOLT	<b>4</b>
SMF29-1		FOAM SPACER	<b>4</b>
SMWASH		WASHER	<b>20</b>
SSLNUT		LOCK NUT	<b>4</b>
UNUT2		CLIP	<b>4</b>



**2026+ Honda Passport Installation Instructions**

**Do not fully tighten fasteners until flaps are aligned to vehicle.**



**FRONT FLAP** Access interior wheel well by turning steering wheel towards the installation side.

Parts x 1 Flap → 1 x BMF139-1; 2 x .25SP; 3 x 1.5SS; 1 x 5-8-SSWS; 2 x SMF29-1; 4 x SMWASH; 1 SSLNUT; 2 x UNUT2

**IMAGE A** Remove factory fasteners 1 - 3. Temporarily move liner aside.

**IMAGE B** Place UNUT2 over mounts 1 & 2. Replace liner.



**IMAGE C** Remove adhesive film from SMF29-1 using tip of utility blade. Adhere SMF29-1 to .25SP.

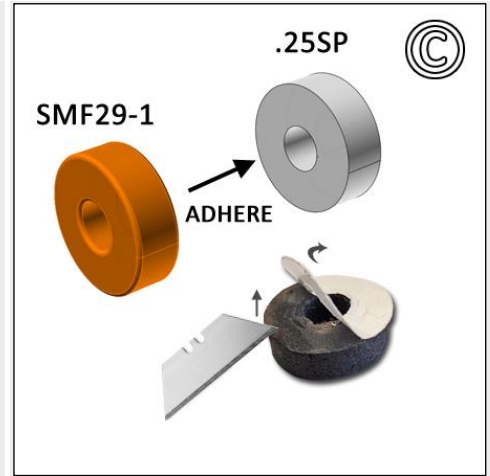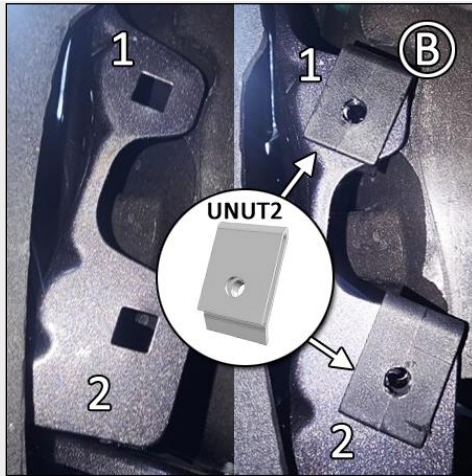

**IMAGE D** Position logo-side of flap facing rear bumper. Place BMF139-1 against **tire side of flap**. Install SMWASH & 1.5SS through tire-side mounts 1 & 2 and SMF29-1 & .25SP **behind** flap, over liner mounts 1 & 2.

**IMAGE E** Place SMWASH & 5-8-SSWS **BEHIND** flap, through mount 4. Fasten SSLNUT onto BMF139-1 mount 4.

**IMAGE F** Align flaps to even ground before tightening fasteners until just seated.

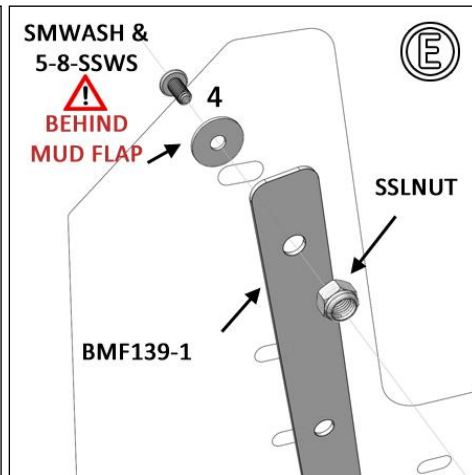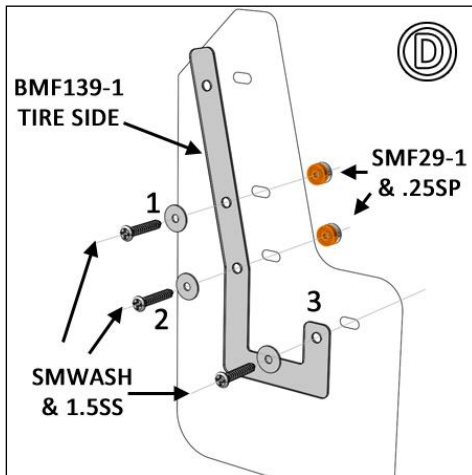




**2026+ Honda Passport Installation Instructions**

**REAR FLAP** Parts x 1 Flap → 1 x BMF117-M; BMF96-RE; 2 x BLKNUT; 2x HXBLT; 6 x SMWASH; 1 x SSLNUT

**IMAGE G** Uninstall fastener 1. Work from under vehicle, temporarily remove factory fastener 2.


**IMAGES H/I** Place BMF96-RE over mount 2, stud-side facing tire. Install SMWASH & factory fastener 2.

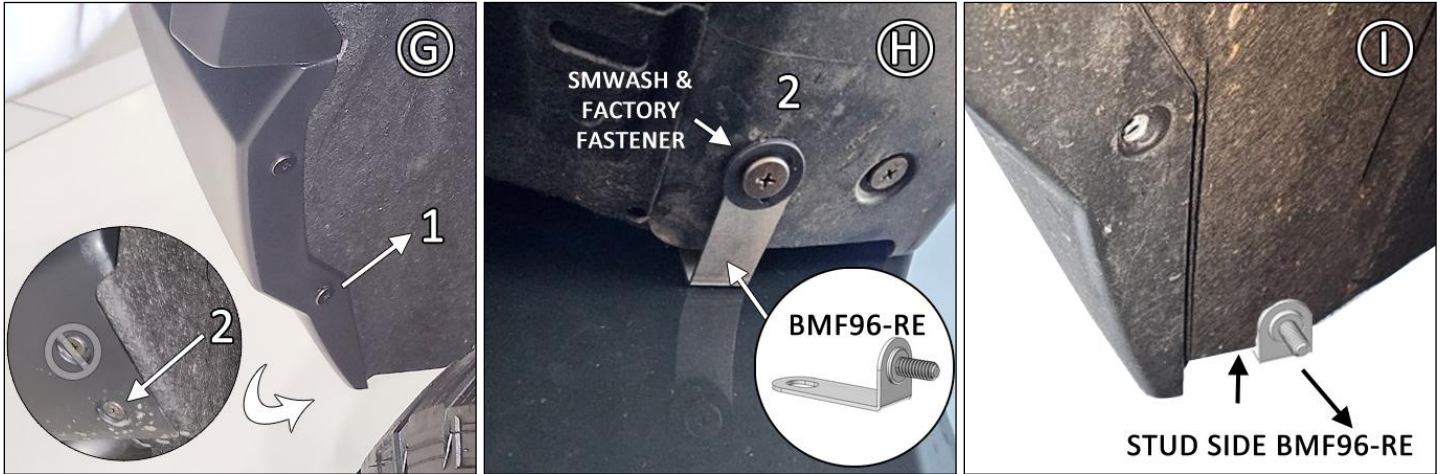

**IMAGE J** Position logo-side of flap facing rear bumper. Place BMF117-M against **tire-side of flap**. Install SMWASH & HXBLT into mounts 3 & 4 and SMWASH & BLKNUT behind flap to secure bracket to flap.

**IMAGE K** Install assembled flap to vehicle with SMWASH & factory fastener into mount 1, and SSLNUT onto stud mount 4.

**IMAGE L** Align flap to even ground before tightening fasteners until just seated.

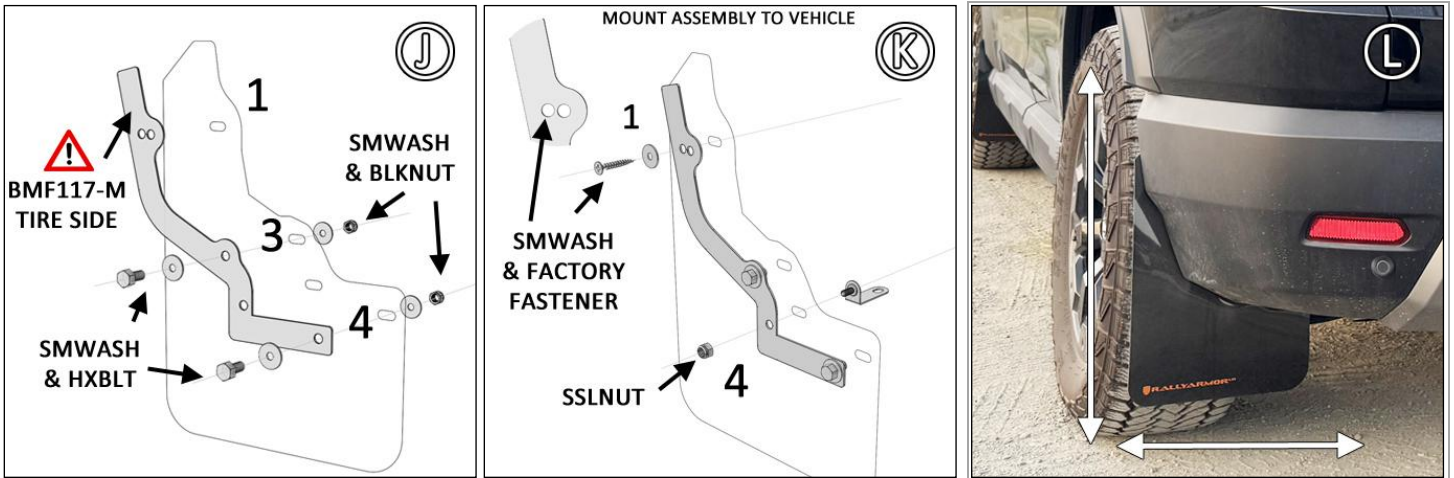

# IMF139



## 2026+ Honda Passport Installation Instructions

FRONT

MF139 MOUNTING DIAGRAM

REAR

