



X-ACT CONTOUR® FLOOR LINERS


PT #5349

CARE AND USE INSTRUCTIONS

Thank you for selecting an X-act Contour® Floor Liners from Husky Liners Inc. Your new liner is custom molded to fit your specific vehicle's floor board. The liner is made to take the place of your factory floor mat. ***For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. However, do not remove the factory-installed carpeting.***

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

INSTALLATION INSTRUCTIONS FOR YOUR SECOND SEAT FLOOR LINERS

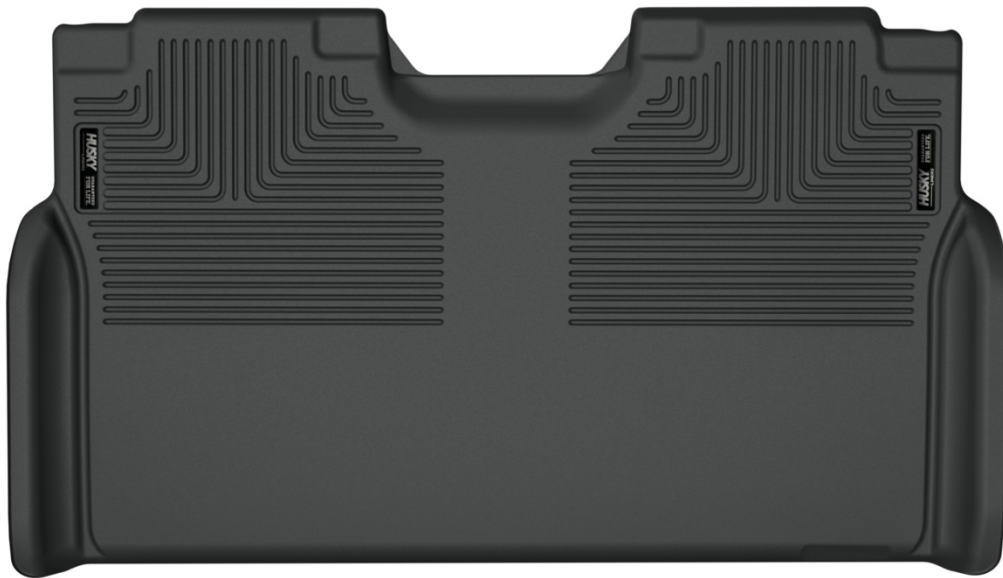

TO EASE INSTALLATION OF YOUR NEW SECOND SEAT LINER, MOVE BOTH FRONT ROW SEATS TO THEIR MOST FORWARD POSITION. WITH THIS DONE, INSTALL THE LINER AS SHOWN ABOVE. IF YOU HAVE A 40/20/40 BENCH SEAT W/REAR FACING CUP HOLDER, A SMALL PORTION OF THE LINER WILL TUCK UNDERNEATH THE CORNERS OF THE CUP HOLDER. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE SEATS AS DESIRED.